



a

LRG

Operators Manual

LANE Trailer Mfg. Co.

1215 Montana Road

Boone, IA 50036

515-233-1150

www.lanetrailers.com

info@lanetrailers.com

1-515-233-1150

Introduction

This manual is designed to provide detailed steps on how to successfully operate your LRG 1010F Figure 8 trailer.

Your LRG 1010F is manufactured by LANE Trailer Manufacturing Co. The LRG 1010F trailer consists of a figure-eight attachment a retriever/rewinder arm, and a Honda Gx 390 motor skid that contains and operates the hydraulic systems for your trailer.

At LANE we seek Innovation Through Collaboration. We strive to meet your needs in the field by supplying the highest-quality trailers tailored to your application. We continue to work with industry experts in their fields to serve your needs best. Your business is important to us. We recognize that there are many other trailer manufacturing companies out there. The difference is that we at LANE Trailers provide the personal service and high-quality products you deserve.

Our reputation rests on our products made with honesty, integrity, and the highest quality.

For questions concerning a LANE Trailers product please call us at (515)-233-1150 or e-mail us at info@lanetrailers.com

-Lane Mesenbrink / Owner

Table of Contents

Table of Contents

Introduction 2

Table of Contents 3

Safety 12

 Safety Alerts and Signal Words 12

Safety 13

 Major Hazards 13

Safety 14

 Improper Sizing of Trailer Tow Vehicle 14

 Driving Too Fast 14

Safety 15

 Adjust Driving When Towing Trailer 15

Safety 16

 Trailer Not Properly Coupled to Hitch 16

 Proper Use of Safety Chains 16

Safety 17

 Proper Connection of Breakaway Brake 17

 Matching Trailer and Hitch 17

Safety 18

 Worn Tires, Loose Wheels and Lug Nuts 18

Safety 19

 Improper Loading 19

Safety 20

 Unsafe Load Distribution 20

Safety 21

 Shifting Cargo 21

 Inappropriate Cargo 21

 Inoperable Brakes or Lights 21

Safety 22

 Trailer Modifications 22

 Trailer Towing Guide 22

Safety 23

 Safe Trailer Towing Guidelines 23

Safety 24

 Safety Warning Labels on Your Trailer 24

Safety_____	25
Safety_____	26
Safety_____	27
Reporting Safety Defects	27
Tire Safety_____	28
Trailer Tire Information	28
Tire Safety_____	29
Steps For Determining Correct Load Limit → Trailer.....	29
Tire Safety_____	30
Trailers Under 10,000-pound GVWR.....	30
Trailers Over 10,000-pound GVWR.....	30
Steps For Determining Correct Load Limit → Tow Vehicle.....	30
Tire Safety_____	31
Glossary Of Tire Terminology	31
Tire Safety_____	32
Tire Safety_____	33
Tire Safety_____	34
Tire Safety → Everything Rides On It.....	34
Tire Safety_____	35
Safety First- Basic Tire Maintenance	35
Finding Your Vehicles Recommended Tire Pressure and Load Limits.....	35
Understanding Tire Pressure and Load Limits.....	35
Tire Safety_____	36
Safety First- Basic Tire Maintenance pt. 2.....	36
Steps For Maintaining Proper Tire Pressure	36
Tire Size	36
Tire Safety_____	37
Tire Tread.....	37
Tire Balance and Wheel Alignment	37
Tire Repair	37
Tire Fundamentals.....	37
Tire Safety_____	38
Information on Passenger Vehicle Tires	38
Tire Safety_____	39
UTQGS Information	39
Tire Safety_____	40
Additional information on Light Truck Tires	40

Tire Safety.....	41
Tire Safety Tips and Checklist.....	41
Coupling to Tow Vehicle.....	42
Tow Vehicle and Hitch.....	42
Trailer Information.....	42
Coupling to Tow Vehicle.....	43
Tow Vehicle.....	43
Coupling and Uncoupling the Trailer.....	43
Coupling to Tow Vehicle.....	44
Couple Trailer to Tow Vehicle.....	44
Coupling to Tow Vehicle.....	45
Ball Hitch Coupler.....	45
Before Coupling Trailer to Tow Vehicle.....	45
Coupling to Tow Vehicle.....	46
Prepare Coupler and Hitch.....	46
Couple Trailer to Tow Vehicle.....	46
Coupling to Tow Vehicle.....	47
Trailer With Ring and Pintle Coupler.....	47
Coupling to Tow Vehicle.....	48
Before Coupling Trailer to Tow Vehicle.....	48
Prepare Ring and Pintle.....	48
Coupling to Tow Vehicle.....	49
Couple Trailer to Tow Vehicle.....	49
Coupling to Tow Vehicle.....	50
Connect Safety Chains.....	50
Coupling to Tow Vehicle.....	51
Connect Electrical Cable.....	51
Attach Breakaway Brake Lanyard.....	51
Test Electric Brakes.....	51
Coupling to Tow Vehicle.....	52
Test Electrical Breakaway Brakes.....	52
Coupling to Tow Vehicle.....	53
Test Electrical Breakaway Brakes.....	53
Test Surge Breaks (If Equipped).....	53
Coupling to Tow Vehicle.....	54
Test Surge Breaks (If Equipped).....	54
Test Surge Breakaway System.....	54

Coupling to Tow Vehicle.....	55
Uncouple Trailer	55
Tongue Weight.....	55
Coupling to Tow Vehicle.....	56
Tongue Weight.....	56
Checking Tongue Weight	56
Coupling to Tow Vehicle.....	57
Adjust Hitch Height (If Equipped).....	57
Loading and Unloading.....	58
Loading and Unloading.....	59
Loading Trailer	59
Prepare Trailer for Loading.....	59
Loading a Rigid Deck Trailer.....	59
Loading and Unloading.....	60
Loading a Rigid Deck Trailer.....	60
Loading a Tilt Deck Trailer.....	60
Manual Tilt Trailers	60
Loading and Unloading.....	61
Manual Tilt Trailers	61
Hydraulic Tilt Trailer	61
Loading and Unloading.....	62
Unload Trailer	62
Unload Manual Tilt Trailer	62
Unload Hydraulic Tilt Trailer	62
Loading and Unloading.....	63
Unload Hydraulic Tilt Trailer	63
Hydraulic Components.....	63
Securing Cargo.....	63
Pre-Tow Checklist.....	64
Pre-Tow Checklist.....	64
Make Regular Stops.....	64
Breaking In a New Trailer.....	65
Retighten Lugs at First 10, 25, and 50 Miles	65
Adjust Brake at First 200 Miles	65
Breaking In a New Trailer.....	66
Synchronizing Brake Systems.....	66
Accessories.....	67

Accessory Battery	67
Inspection Service and Maintenance.....	68
Inspection Service and Maintenance Summary Charts	68
Inspection Service and Maintenance.....	71
Inspection and Service Instructions.....	71
Trailer Structure	71
Fasteners and Frame Members.....	71
Inspection Service and Maintenance.....	72
Welds	72
Trailer Brakes- Electric	72
Brake Discs, Shoes, and Drums	72
Inspection Service and Maintenance.....	73
Manually Adjusting Brake Shoes.....	73
Electric Brakes	73
Inspection Service and Maintenance.....	74
Tow Vehicle Operated Electric Brakes.....	74
Electric Brake Magnets	74
Trailer Brakes- Surge (If Equipped).....	74
Surge Brake Master Cylinder	74
Hydraulic Surge Brake	74
Inspection Service and Maintenance.....	75
Master Cylinder Bleeding	75
Inspection Service and Maintenance.....	76
Trailer Connection to Tow Vehicle.....	76
Coupler and Ball	76
Ring and Pintle.....	76
Landing Leg or Jack.....	76
Inspection Service and Maintenance.....	77
Lights and Signals	77
Wheel Rims.....	77
Tires	77
Inspection Service and Maintenance.....	78
Tires	78
Inspection Service and Maintenance.....	79
Wheel Bearings	79
Lubrication	79
Hydraulic Reservoir	79

Inspection Service and Maintenance.....	80
Lug Nuts or Bolts.....	80
Breakdown of Your LRG Hand-Pump.....	83
Operation of Your Hydraulic Hand Pump System.....	84
Recommended Fluids.....	84
Self-Loading Reel System.....	85
Steps For operating The Self-Loading Reel System	85
Breakdown of Your LRG Electric-Hydraulic Trailer	88
Breakdown of Your Electric-Hydraulic System	89
Recommended Fluids.....	89
Operation of Your Electric-Hydraulic Trailer.....	90
Self-Loading Reel System.....	91
Steps For operating The Self-Loading Reel System	91
Breakdown of Your LRG 1010/1008 Retriever____	94
.....	94
Breakdown of Your Hydraulic Skid.....	95
Hydraulic Skid Components	95
Hydraulics Skid	96
Honda Gx 390	96
Hydraulics Skid.....	97
Steps for Operating the Honda Gx 390	97
Breakdown of Your Hydraulic Reservoir.....	98
Breakdown of Your Three Spool Valve.....	99
.....	99
Retriever/Rewinder Arm.....	100
Retriever/Rewinder Arm On Your Figure 8.....	101
Retrieving Function.....	101
Self-Loading Reel System.....	102
Steps For operating The Self-Loading Reel System	102
Hydraulics Operation Manual Introduction.....	105
Hydraulics Skid and Wireless Remote.....	106
Hydraulics Skid and Wireless Remote.....	107
Honda Gx 390	107
Hydraulics Skid and Wireless Remote.....	108
Steps for Operating the Honda Gx 390	108
Hydraulics Skid and Wireless Remote.....	109
Battery and Battery Box.....	109

Important Information About Your Alternator	109
Hydraulics Skid and Wireless Remote.....	110
Hydraulic Reservoir	110
Hydraulic Manifold.....	111
Hydraulic Controller Unit (HCU)	112
Error Code Trouble Shooting.....	112
While operating your LRF 1010F it is possible that an error code may show up on your HCU. In this section the error code type and possible solutions to the error will be laid out. If your issue persists, please visit a repair technician or LANE Trailer manufacturing's website: www.lanetrailers.com or call 515-233-1150 to speak to a repair technician.	112
Error Code Messages and Faults	112
Hydraulics Skid and Wireless Remote.....	114
LANE Trailer's Wireless Remote	114
Steps For Pairing LANE Trailer's Wireless Remote	114
Important Information about your Wireless Remote	114
Hydraulics Skid and Wireless Remote.....	115
Sleep Time Programming	115
Hydraulics Skid and Wireless Remote.....	116
Button Breakdown of Your Wireless Remote.....	116
Retriever/Rewinder Arm On Your Figure 8.....	117
Retriever/Rewinder Arm On Your Figure 8.....	118
Retrieving Function.....	118
How to Sync with blower.....	118
Self-Loading Reel System.....	119
Steps For operating The Self-Loading Reel System	119
Figure 8 attachment.....	120
Figure 8 attachment.....	121
Figure 8 Operation	121
Unfolding and Preparing the Figure 8 Arm	121
Folding and Preparing the Figure 8 arm.....	121
Figure 8 attachment.....	122
Figure 8 Operation: How to Figure 8.....	122
Maintenance of Your LRG 1010F.....	123
Greasing Elements on Your LRG 1010F	123
Retriever/Rewind Arm	123
Figure 8 Arm and Attachment.....	123
Autolocking Reel System.....	123
Hydraulic System Maintenance on Your LRG 1010F	123



General Trailer Safety Information

LANE Trailer Mfg. Co.

1215 Montana Road

Boone, IA 50036

515-233-1150

www.lanetrailers.com

info@lanetrailers.com

1-515-233-1150

Safety

WARNING

This Owner's Manual contains safety information and instructions for your trailer.

You must read this manual before loading or towing your trailer.

You must follow all safety precautions and instructions.

Safety Alerts and Signal Words

Owner's Manual that provides general trailer information cannot cover all of the specific details necessary for the proper combination of every trailer, tow vehicle and hitch. You must read, understand and follow the instructions given by the tow vehicle and trailer hitch manufacturers, as well as the instructions in this manual.

Our trailers are built with components produced by various manufacturers. Some of these items have separate instruction manuals. Where this manual indicates that you should read another manual, and you do not have that manual, contact your dealer for assistance.

The safety information in this manual is denoted by the safety alert symbol:



This symbol means **ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!**

Safety

The level of risk is indicated by the following signal words:

 DANGER
DANGER - Indicates a hazardous situation, which, if not avoided, WILL result in death or serious injury.
 WARNING
WARNING - Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.
 CAUTION
CAUTION - Indicates a hazardous situation, which, if not avoided, could result in minor or moderate injury.
NOTICE
<i>NOTICE - Indicates a situation that could result in damage to the equipment or other property.</i>

Major Hazards

Loss of control of the trailer or trailer/tow vehicle combination can result in death or serious injury. The most common causes for loss of control of the trailer are:

- Improper sizing the trailer for the tow vehicle, or vice versa.
- Excessive Speed: Driving too fast for the conditions.
- Improper braking and steering under sway conditions.
- Overloading and/or improper weight distribution.
- Not keeping lug nuts tight.
- Failure to adjust driving behavior when towing a trailer.
- Not maintaining proper tire pressure

Improper or mis-coupling of the trailer to the hitch

Safety

Improper Sizing of Trailer Tow Vehicle

Trailers that weigh too much for the tow vehicle can cause stability problems, which can lead to death or serious injury. The additional strain put on the engine and drivetrain may lead to serious tow vehicle maintenance problems.

Do not exceed the maximum towing capacity of your tow vehicle. The towing capacity of your tow vehicle, in terms of maximum Gross Trailer Weight (GTW) and maximum Gross Combined Weight Rating (GCWR) can be found in the tow vehicle Owner's Manual.

DANGER

Use of an under-rated hitch, ball or tow vehicle can result in loss of control leading to death or serious injury.

Make certain your hitch and tow vehicle are rated for your trailer.

Driving Too Fast

With ideal road conditions, the maximum recommended speed for safely towing a trailer is 55 mph. Driving too fast can cause the trailer to sway, thus increasing Safety 7 the possibility for loss of control. Also, your tires may overheat, increasing the possibility of a blowout.

WARNING

Driving too fast for conditions can result in loss of control and cause death or serious injury.

Adjust speed down when towing trailer.

Safety

Adjust Driving When Towing Trailer

When towing a trailer, you will have decreased acceleration, increased stopping distance, and increased turning radius.

The trailer will change the handling characteristics of the tow vehicle, making it more sensitive to steering inputs and more likely to be pushed around in windy conditions or when being passed by large vehicles. In addition, you will need a longer distance to pass, due to slower acceleration and increased length. With this in mind:

- When encountering trailer sway, take your foot off the accelerator, and steer as little as possible in order to stay on the road. Use small “trim-like” steering adjustments. Do not attempt to steer out of the sway; you’ll only make it worse. Also do not apply the tow vehicle brakes to correct trailer swaying. On the other hand, application of the trailer brakes alone will tend to straighten out the combination, especially when going downhill.
- Check rearview mirrors frequently to observe trailer and traffic.
- Be aware of trailer height, especially when approaching bridges, roofed areas and trees.
- Be alert for slippery conditions. You are more likely to be affected by slippery road surfaces when driving a tow vehicle with a trailer, than driving a tow vehicle without a trailer.
- Anticipate the trailer “swaying.” Swaying can be caused by excessive steering, wind gusts, roadway edges, or by the trailer reaction to the pressure wave created by passing trucks and buses.
- Use lower gear when driving down steep or long grades. Use the engine and transmission as a brake. Do not ride the brakes, as they can overheat and become ineffective.

Safety

Trailer Not Properly Coupled to Hitch

It is critical that the trailer be securely coupled to the hitch, and that the safety chains and emergency breakaway brake lanyard are correctly attached. Uncoupling may result in death or serious injury to you and to others.

 WARNING	 WARNING
Proper selection and condition of the coupler and hitch are essential to safely towing a trailer. A loss of coupling may result in death or serious injury. Hitch size must match coupler size. Be sure hitch load rating is equal to or greater than load rating of the coupler. Be sure hitch components are tight before coupling trailer to tow vehicle. Observe hitch for wear, corrosion and cracks before coupling. Replace worn, corroded or cracked hitch components before coupling trailer to tow vehicle.	An improperly coupled trailer can result in death or serious injury. Do not move the trailer until: • Coupler is secured and locked to hitch. • Safety chains are secured to tow vehicle. • Trailer jack(s) are fully retracted. • Trailer brakes are checked. • Tires and wheels are checked. • Breakaway switch is connected to tow vehicle. • The trailer lights are connected and checked. Load is secured to trailer.

Proper Use of Safety Chains

Safety chains are provided so that control of the trailer can be maintained if your trailer comes loose from the hitch.

 WARNING
Improper rigging of the safety chains can result in loss of control of the trailer and tow vehicle, leading to death or serious injury, if the trailer uncouples from the tow vehicle. Cross chains underneath hitch and coupler with enough slack to permit turning and to hold tongue up, if the trailer comes loose. Fasten chains to frame of tow vehicle. Do not fasten chains to any part of the hitch unless the hitch has holes or loops specifically for that purpose.

Safety

Proper Connection of Breakaway Brake

If equipped with brakes, your trailer will be equipped with a breakaway brake system that can apply the brakes on your trailer if your trailer comes loose from the hitch. You may have a separate set of instructions for the breakaway brake if the trailer is so equipped. The breakaway brake system, including battery, must be in good condition and properly rigged to be effective.

WARNING

An ineffective or inoperative breakaway brake system can result in a runaway trailer, leading to death or serious injury if the coupler or hitch fails.

Breakaway lanyard must be connected to the tow vehicle, NOT to any part of the hitch.

Before towing trailer, test the function of the breakaway brake system. If the breakaway brake system is not working, do not tow the trailer. Have it serviced or repaired.

Matching Trailer and Hitch

DANGER

Be sure hitch and tow vehicle are rated for the Gross Vehicle Weight Rating (GVWR) of your trailer.

Use of a hitch with a load rating less than the load rating of the trailer can result in loss of control and may lead to death or serious injury.

Use of a tow vehicle with a towing capacity less than the load rating of the trailer can result in loss of control and may lead to death or serious injury.

Safety

Worn Tires, Loose Wheels and Lug Nuts

Inspect all trailer tires before each tow. If a tire has a bald spot, bulges, cut, cracks, or is showing any cords, replace the tire before towing.

If a tire has uneven tread wear, take the trailer to a trailer service center for diagnosis. Uneven tread wear can be caused by tire imbalance, axle misalignment or incorrect inflation.

Tires with too little tread will not provide adequate frictional forces on wet roadways and can result in loss of control, leading to death or serious injury.

Improper tire pressure causes increased tire wear and may reduce trailer stability, which can result in a tire blowout or possible loss of control. Therefore, before each tow you must also check the tire pressure.

The proper tire pressure is listed on the Certification / VIN label, normally mounted on the front left side of the trailer and should be checked when tires are cold. Allow 3 hours cool-down after driving as much as 1 mile at 40 mph before checking tire pressure.

WARNING

Inflate tires to pressure stated on the Certification / VIN label.

Improper tire pressure may cause unstable trailer. Blowout and loss of control may occur. Death or serious injury can result.

Make sure of proper tire pressure before towing trailer.

The tightness of the wheel nuts or bolts is very important in keeping the wheels properly seated to the hub. Before each tow, check to make sure they are tight.

WARNING

Metal creep between the wheel rim and wheel nuts or bolts may cause rim to loosen.

Death or injury can occur if wheel comes off.

Tighten lug nuts or bolts before each tow.

Safety

The proper tightness (torque) for wheel nuts or bolts and tightening sequence is listed in the Inspection, Service and Maintenance section of this manual. Use a torque wrench to tighten the lug nuts and use the crisscross star pattern sequence. Improper tightening of the lug nuts voids the axle warranty.

Wheel nuts or bolts are also prone to loosen after first being assembled. When driving a new trailer (or after wheels have been remounted), check to make sure they are tight after the first 10, 25 and 50 miles of driving and before each tow thereafter.

Failure to perform this check can result in a wheel separating from the trailer and a crash, leading to death or serious injury.

 WARNING	 WARNING
Wheel nuts or bolts are prone to loosen after being first assembled. Death or serious injury can result. Check wheel nuts or bolts for tightness on a new trailer, and after re-mounting a wheel at 10, 25 and 50 miles.	Inadequate wheel nut or bolt torque can cause a wheel to separate from the trailer, leading to death or serious injury. Verify wheel nuts or bolts are tight before each tow.

Improper Loading

The total weight of the load you put on the trailer, plus the empty weight of the trailer itself, must not exceed the trailer’s Gross Vehicle Weight Rating (GVWR).

If you do not know the empty weight of the trailer plus the cargo weight, you must weigh the loaded trailer at a commercial scale. In addition, you must distribute the load in the trailer such that the load on any axle does not exceed the Gross Axle Weight Rating (GAWR).

If your trailer is equipped with a Tire & Loading Information Placard, mounted next to the Certification / VIN label, the cargo capacity weight stated on that placard is only a close estimate. The GVWR and GAWR are listed on the Certification / VIN label normally located on the front left side of the trailer.

 WARNING
An overloaded trailer can result in failure or loss of control of the trailer, leading to death or serious injury. Never load a trailer so that the weight on any tire exceeds its rating. Never exceed the trailer Gross Vehicle Weight Rating (GVWR) or axle Gross Axle Weight Rating (GAWR).

Safety

Unsafe Load Distribution

Improper front / rear load distribution can lead to an unstable trailer or poor tow vehicle handling. Poor trailer stability results from tongue weights that are too low, and poor tow vehicle stability results from tongue weights that are too high.

Refer to the “Loading and Unloading” section for more information.

In the following table, the second column shows the rule of thumb percentage of total weight of the trailer plus its cargo (Gross Trailer Weight, or “GTW”) that should appear on the tongue of the trailer. For example, a large trailer with a loaded weight of 6,000 pounds, should have 10-15% of 6,000 pounds (600-900 lbs.) on the hitch.

Tongue Weight as a Percentage of Loaded Trailer Weight	
Type of Hitch	Percentage
Ball Hitch or Ring & Pintle	10-15% for large trailers 6-10% for small trailers

The numbers quoted are for example purposes only and should be tailored to the specific trailer. For questions regarding the actual percent of tongue weight for the trailer, check with the manufacturer for specifics. After loading, be sure to check that none of the axles are overloaded. Uneven left / right load distribution can cause tire, wheel, axle or structural failure. Be sure your trailer is evenly loaded left / right. Towing stability also depends on keeping the center of gravity as low as possible.

WARNING

Improper tongue weight (load distribution) can result in loss of control of the trailer, leading to death or serious injury.

Make certain that tongue weight is within the allowable range.

Be sure to:

- **Distribute the load evenly, right and left.**
- **Keep the center of gravity low.**

Distribute the load front-to-rear to provide proper tongue weight (see chart).

Safety

Shifting Cargo

Since the trailer “ride” can be bumpy and rough, you must secure the cargo so that it does not shift while the trailer is being towed.

 **WARNING**

A shifting load can result in failure, or to loss of control of the trailer, and can lead to death or serious injury.

You must tie down all loads with proper sized fasteners, chains, straps, etc. to prevent the load from shifting while towing.

Inappropriate Cargo

The trailer may be designed for specific cargo. If your trailer is designed for specific cargo, only carry that cargo in the trailer. A trailer must not be used to carry certain items, such as people, containers of hazardous substances or containers of flammable substances.

 WARNING	 WARNING
Do not transport people on your trailer. Besides putting their lives at risk, the transport of people on a trailer is illegal.	Do not transport flammable, explosive, poisonous or other dangerous materials on your trailer. The exception is fuel in the tank of a vehicle or equipment being hauled.

Inoperable Brakes or Lights

If your trailer has electric brakes, your tow vehicle will have an electric brake controller that sends power to the trailer brakes.

Before towing the trailer, you must operate the brake controller while trying to pull the trailer in order to confirm that the electric brakes operate. While towing the trailer at less than 5 mph, manually operate the electric brake controller in the tow vehicle cab. You should feel the operation of the trailer brakes.

If your trailer has hydraulic “surge” brakes, pull the emergency breakaway brake lanyard to check the operation of the surge mechanism.

Be sure that the electric brakes and all of the lights on your trailer are functioning properly before towing the trailer. Electric brakes and lights on a trailer are controlled via a connection to the tow vehicle, generally a multi-pin electrical connector.

Safety

WARNING

Improper electrical connection between the tow vehicle and the trailer will result in inoperable lights and electric brakes and can lead to collision.

Before each tow:

- **Check that the electric brakes work by operating the brake controller inside the tow vehicle.**

Check that all lights and turn signals work.

You must provide mirrors that allow you to safely observe approaching traffic. Standard mirrors usually do not provide adequate visibility for viewing traffic to the sides and rear a towed trailer.

Trailer Modifications

Modification of the trailer structure or alteration of your trailer can make the trailer unsafe and will void all warranty options. Before making any alteration to the trailer, contact your dealer or the manufacturer and describe the alteration you are contemplating.

Trailer Towing Guide

Driving a vehicle with a trailer in tow is vastly different from driving the same vehicle without a trailer in tow. Acceleration, maneuverability and braking are all diminished with a trailer in tow. It takes longer to get up to speed; you need more room to turn and pass, and more distance to stop when towing a trailer.

You will need to spend time adjusting to the different feel and maneuverability of the tow vehicle with a loaded trailer. Because of the significant differences in all aspects of maneuverability when towing a trailer, the hazards and risks of injury are also much greater than when driving without a trailer.

You are responsible for keeping your vehicle and trailer in control, and for all the damage that is caused if you lose control of your vehicle and trailer.

Find an open area with little or no traffic for your first practice. Before you start towing the trailer, you must follow all the instructions for inspection, testing, loading and coupling. Also, before you start towing, adjust the mirrors so you can see the trailer as well as the area to the rear of it.

Drive slowly at first, 5 mph or so, and turn the wheel to get the feel of how the tow vehicle and trailer combination responds. Next, make some right- and left-hand turns. Watch in your side mirrors to see how the trailer follows the tow vehicle. Turning with a trailer attached requires more room.

Stop the rig a few times from speeds no greater than 10 mph. If your trailer is equipped with brakes, try using different combinations of trailer/electric brake and tow vehicle brake. Note the effect that the trailer brakes have when they are the only brakes used. When properly adjusted, the trailer brakes will come on just before the tow vehicle brakes.

Safety

It will take practice to learn how to back up a tow vehicle with a trailer attached. Take it slow. Before backing up, get out of the tow vehicle and look behind the trailer to make sure that there are no obstacles.

Some drivers place their hands at the bottom of the steering wheel, and while the tow vehicle is in reverse, “think” of the hands as being on the top of the wheel. When the hands move to the right (counterclockwise, as you would do to turn the tow vehicle to the left when moving forward), the rear of the trailer moves to the right.

Conversely, rotating the steering wheel clockwise with your hands at the bottom of the wheel will move the rear of the trailer to the left, while backing up. Be careful not to allow the trailer to turn too much, because it will hit the rear of the tow vehicle. To straighten the rig, either pull forward, or turn the steering wheel in the opposite direction.

Safe Trailer Towing Guidelines

Before towing, check coupling, safety chain, brakes, tires, wheels and lights.

Check the lug nuts or bolts for tightness.

Recheck the load tie downs to make sure the load will not shift during towing.

Check coupler tightness after towing 50 miles.

Adjust the brake controller to engage the trailer brakes before the tow vehicle brakes. Follow the brake controller manufacturer’s literature.

Use your mirrors to verify that you have room to change lanes or pull into traffic.

Use your turn signals well in advance.

Allow plenty of stopping space for your trailer and tow vehicle.

Use lower gears for climbing and descending grades.

Do not ride the brakes while descending grades; they may get so hot that they stop working. Then you will potentially have a runaway tow vehicle and trailer.

Do not apply the tow vehicle brakes to correct extreme trailer swaying. Instead, lightly apply the trailer brakes with the hand controller.

Make regular stops, about once each hour. Confirm that:

- The coupler is secure to the hitch and is locked.
- Electrical connectors are made.
- There is appropriate slack in safety chains.
- There is appropriate slack in breakaway lanyard.
- The tires are not visibly low on pressure.
- The cargo is secure and in good condition.

Safety

Slow down for bumps in the road.



Do not brake while in a curve unless absolutely necessary. Instead, slow down before you enter the curve.

Do not drive so fast that the trailer begins to sway due to speed. Generally, never drive faster than 55 m.p.h.

- Allow plenty of room for passing. A rule of thumb is that the passing distance with a trailer is 4 times the passing distance without a trailer.

Safety Warning Labels on Your Trailer

Depending on trailer configuration, your trailer may not be equipped with all safety labels shown.

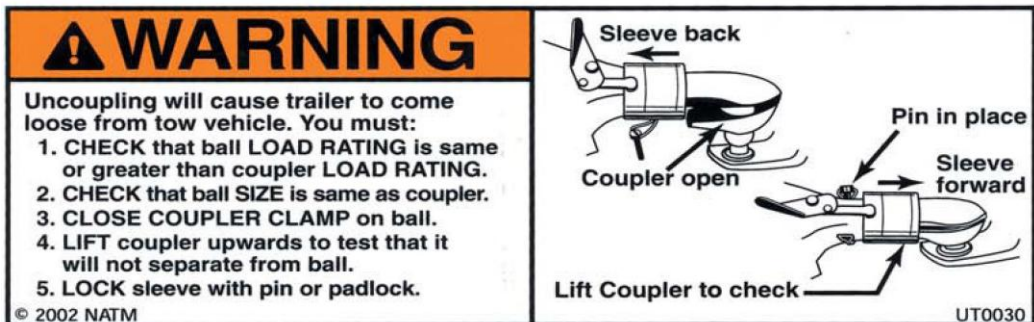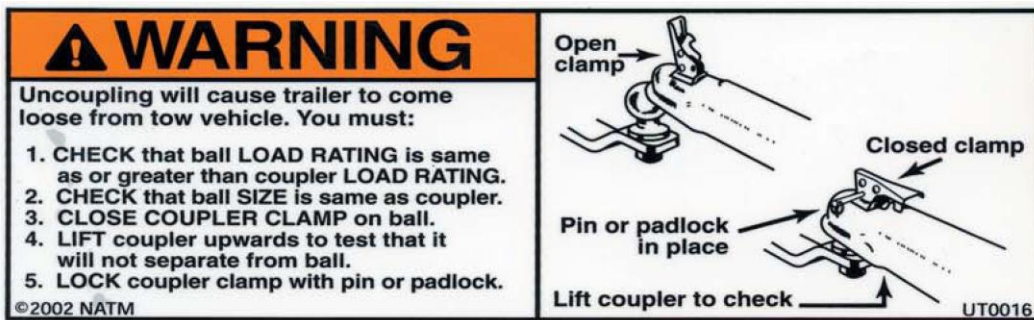


Safety

⚠ WARNING

Uncoupling will cause trailer to come loose from tow vehicle.

1. CHECK that pintle LOAD RATING is same or greater than ring LOAD RATING.
2. LOCK the clamp in place using a pin or lock.

© 2002 NATM

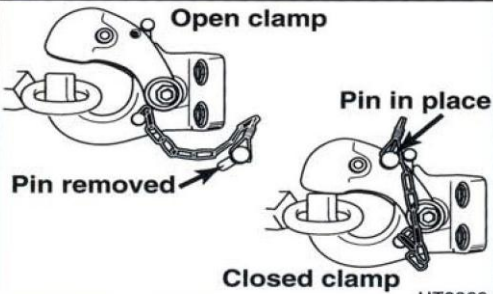


⚠ WARNING

ALWAYS use safety chains. Chains hold trailer if connection fails. You must:

1. CROSS chains underneath coupler.
2. ALLOW slack for trailer to turn.
3. ATTACH chain hooks securely to tow vehicle frame.

© 2002 NATM

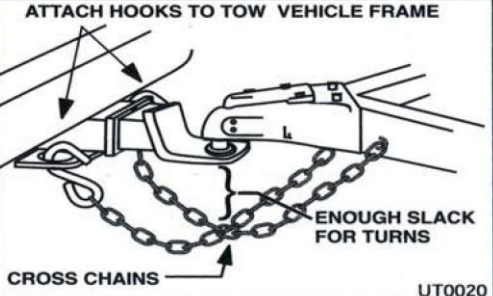


⚠ WARNING

ALWAYS use safety chains. Chains hold trailer if connection fails. You must:

1. CROSS chains underneath coupler.
2. ALLOW slack for trailer to turn.
3. ATTACH chain hooks securely to tow vehicle frame.

© 2002 NATM

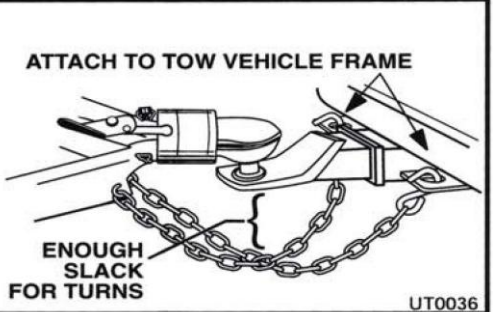


⚠ WARNING

ALWAYS use safety chains. Chains hold trailer if connection fails. You must:

1. CROSS chains underneath coupler.
2. ALLOW slack for trailer to turn.
3. ATTACH chain hooks securely to tow vehicle frame.

© 2002 NATM

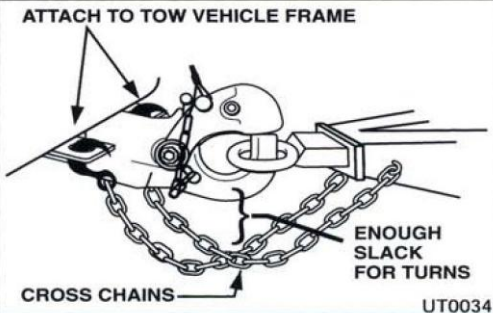


⚠ WARNING

Trailer can roll if it comes loose. Safety brake applies when chain pulls brake lever.

1. ATTACH brake CHAIN securely to tow vehicle so lever will be pulled if trailer separates.
2. CHECK brake fluid level.
3. DO NOT TOW trailer if brake fluid is NOT FULL.

© 2002 NATM

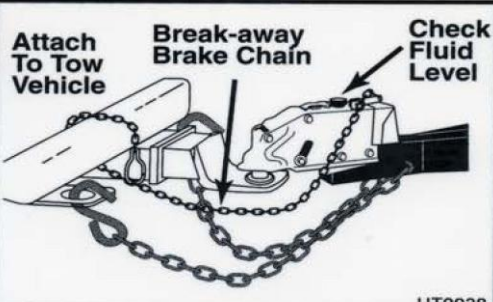


Safety

⚠ WARNING

Trailer can roll if it comes loose. Electric safety brake applies when cable pulls pin out of switch box:

1. PULL hard to get pin out of switch box.
2. CHECK brake by PULLING TRAILER with tow vehicle.
3. ATTACH pin CABLE to tow vehicle so pin will be pulled out if trailer separates.
4. Promptly REPLACE pin in switch box.

© 2002 NATM

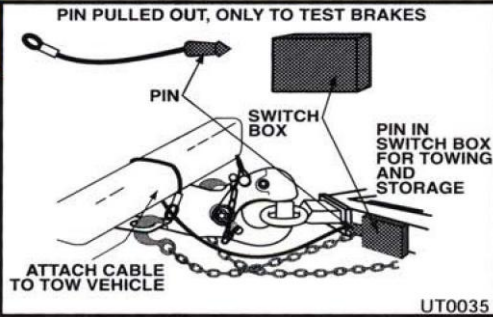


⚠ WARNING

Lights can prevent trailer from being hit by other vehicles. You must:

1. CONNECT trailer and tow vehicle electrical connectors.
2. CHECK all lights: tail lights, turn signal, and brake lights.
3. DO NOT TOW if lights are not working.

© 2002 NATM

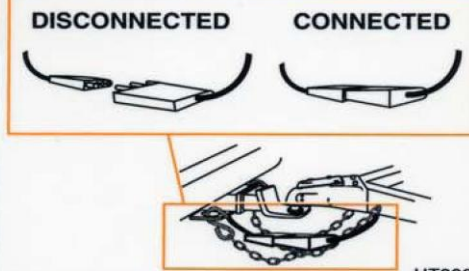


⚠ WARNING

Trailer can roll if it comes loose. Electric safety brake applies when cable pulls pin out of switch box.

1. PULL hard to get pin out of switch box.
2. CHECK brake by PULLING TRAILER with tow vehicle.
3. ATTACH pin CABLE to tow vehicle so pin will be pulled out if trailer separates.
4. Promptly REPLACE pin in switch box.

© 2002 NATM

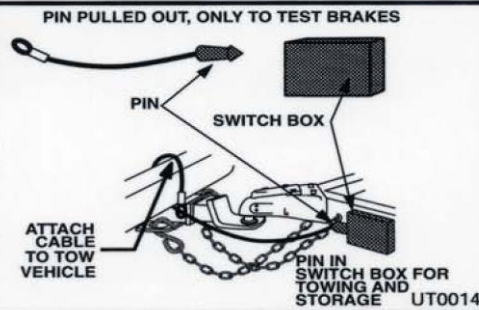


⚠ WARNING

Improper loading can cause trailer sway and sudden loss of control. You must:

- Make certain weight of load plus trailer weight does not exceed trailer's capacity (GVWR-Gross Vehicle Weight Rating).
- Load heavier items in front of wheels.
- Load evenly side to side.
- SECURE load to trailer.

© 2002 NATM

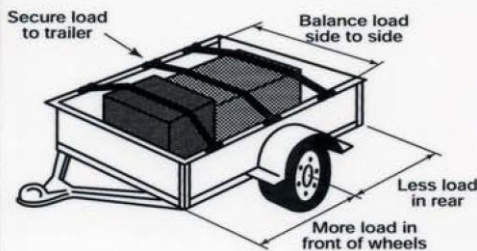

⚠ WARNING

Tire, wheel or lugnut failure can cause loss of control. Before towing, you must CHECK:


1. Tire pressure and tread.
2. Tires and wheels for damage.
3. Lug nuts for tightness.

For new and remounted wheels, re-tighten lug nuts at the first 10, 25 and 50 miles of driving.

© 2002 NATM



Safety

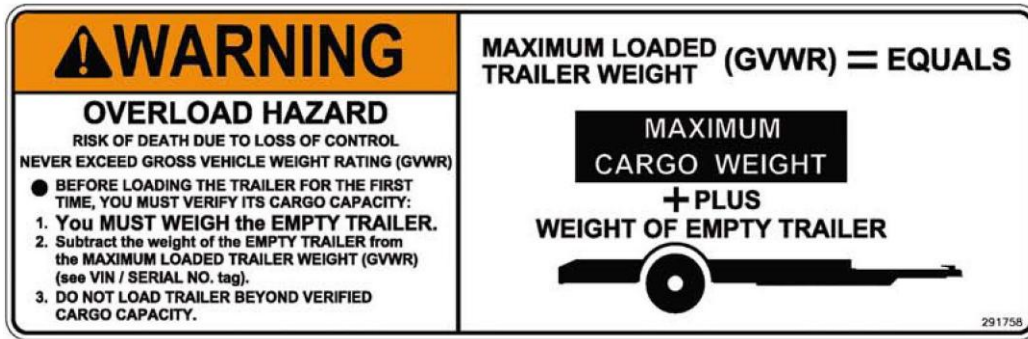

WARNING

To protect you and others against death or serious injury, all applicable labels shown must be on the trailer and must be legible.

If any of these labels are missing or cannot be read, contact your dealer for replacement labels.

Reporting Safety Defects

If you believe that your vehicle has a defect that could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying.

LANE Trailer Mfg. Co.
1215 Montana Road Boone, IA 50036

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or

LANE Trailer Mfg. Co.
1215 Montana Road Boone, IA 50036

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-4249153); or go to <http://www.safercar.gov>; or write to:

Administrator, NHTSA, 1200 New Jersey SE, Washington, DC 20590.

You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

Tire Safety

This portion of the User's Manual contains tire safety information as required by 49 CFR 575.6.

This brochure, as well as preceding subsections, describes the following items.

- Tire labeling, including a description and explanation of each marking on the tires, and information about the DOT Tire Identification Number (TIN).
- Recommended tire inflation pressure, including a description and explanation of:
 - A. Cold inflation pressure.
 - B. Vehicle Placard and location on the vehicle.
 - C. Adverse safety consequences of under inflation (including tire failure).
 - D. Measuring and adjusting air pressure for proper inflation.
- Tire Care, including maintenance and safety practices.
- Vehicle load limits, including a description and explanation of the following items:
 - A. Locating and understanding the load limit information, total load capacity, and cargo capacity.
 - B. Calculating total and cargo capacities with varying seating configurations including quantitative examples showing / illustrating how the vehicles cargo and luggage capacity decreases as combined number and size of occupants' increases. This item is also discussed in Section 3.
 - C. Determining compatibility of tire and vehicle load capabilities.

Adverse safety consequences of overloading on handling and stopping on tires.

Trailer Tire Information

Trailer tires may be worn out even though they still have plenty of tread left. This is because trailer tires have to carry a lot of weight all the time, even when not in use.

It is actually better for the tire to be rolling down the road than to be idle. During use, the tire releases lubricants that are beneficial to tire life. Using the trailer tires often also helps prevent flat spots from developing.

The main cause of tire failure is improper inflation. Check the cold tire inflation pressures at least once a week for proper inflation levels. "Cold" means that the tires are at the same temperature as the surrounding air, such as when the vehicle has been parked overnight. Wheel and tire manufacturers recommend adjusting the air pressure to the trailer manufacturer's recommended cold inflation pressure, in pounds per square inch (PSI) stated on the vehicle's Federal Certification Label or Tire Placard when the trailer is loaded to its gross vehicle weight rating (GVWR).

If the tires are inflated to less than the recommended inflation level or the GVWR of the trailer is exceeded, the load carrying capacity of the tire could be dramatically affected. If the tires are inflated more than the recommended inflation level, handling characteristics of the tow vehicle/trailer combination could be affected. Refer to the owner's manual or talk to your dealer or vehicle manufacturer if you have any questions regarding proper inflation practices.

Tires can lose air over a period of time. In fact, tires can lose 1 to 3 PSI per month. This is because molecules of air, under pressure, weave their way from the inside of the tire, through the rubber, to the outside. A drop in tire pressure could cause the tire to become overloaded, leading to excessive heat build up. If a trailer tire is under-inflated, even for a short period of time, the tire could suffer internal damage.

Tire Safety

High speed towing in hot conditions degrades trailer tires significantly. As heat builds up during driving, the tire's internal structure starts to breakdown, compromising the strength of the tire. It is recommended to drive at moderate speeds.

Statistics indicate the average life of a trailer tire is about five years under normal use and maintenance conditions. After three years, replacing the trailer tires with new ones should be considered, even if the tires have adequate tread depth. Some experts claim that after five years, trailer tires are considered worn out and should be replaced, even if they have had minimal or no use. This is such a general statement that it may not apply in all cases. It is best to have your tires inspected by a tire supplier to determine if your tires need to be replaced. If you are storing your trailer for an extended period, make sure the tires are fully inflated to the maximum rated pressure and that you store them in a cool, dry place, such as a garage. Use tire covers to protect the trailer tires from the harsh effects of the sun.

Steps For Determining Correct Load Limit → Trailer

Determining the load limits of a trailer includes more than understanding the load limits of the tires alone. On all trailers there is a Federal Certification / VIN label that is located on the forward half of the left (road) side of the unit. This certification/VIN label will indicate the trailer's Gross Vehicle Weight Rating (GVWR). This is the most weight the fully loaded trailer can weigh. It will also provide the Gross Axle Weight Rating (GAWR). This is the most a particular axle can weigh. If there are multiple axles, the GAWR of each axle will be provided.

If your trailer has a GVWR of 10,000 pounds or less, there is a vehicle placard located in the same location as the certification label described above. This placard provides tire and loading information. In addition, this placard will show a statement regarding maximum cargo capacity.


Cargo can be added to the trailer, up to the maximum weight specified on the placard. The combined weight of the cargo is provided as a single number. In any case, remember: the total weight of a fully loaded trailer cannot exceed the stated GVWR.

When loading your cargo, be sure it is distributed evenly to prevent overloading front to back and side to side. Heavy items should be placed low and as close to the axle position as reasonable. Too many items on one side may overload a tire. The best way to know the actual weight of the vehicle is to weigh it on a public scale. Talk to your dealer to discuss the weighing methods needed to capture the various weights related to the trailer. This would include the weight empty or unloaded, weights per axle, wheel, hitch or king-pin, and total weight.

Excessive loads and/or under inflation cause tire overloading and, as a result, abnormal tire flexing occurs. This situation can generate an excessive amount of heat within the tire. Excessive heat may lead to tire failure. It is the air pressure that enables a tire to support the load, so proper inflation is critical. The proper air pressure may be found on the Certification / VIN label and/or on the Tire Placard. This value should never exceed the maximum cold inflation pressure stamped on the tire.

Tire Safety

Trailers Under 10,000-pound GVWR

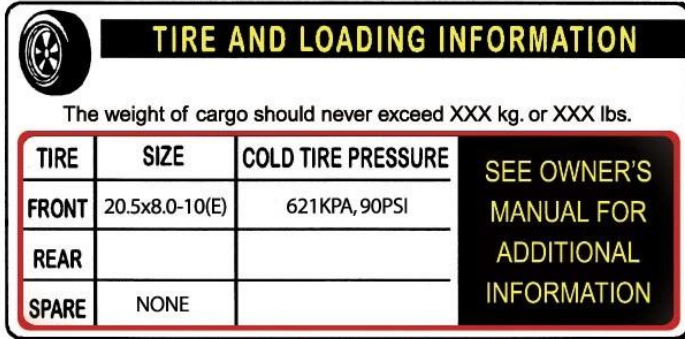

The weight of cargo should never exceed XXX kg. or XXX lbs.

TIRE	SIZE	COLD TIRE PRESSURE
FRONT	20.5x8.0-10(E)	621KPA, 90PSI
REAR		
SPARE	NONE	

SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION

1. Locate the statement, “The weight of cargo should never exceed XXX kg or XXX lbs.,” on your vehicle’s placard.
2. This figure equals the available amount of cargo and luggage load capacity.
3. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity.
4. The trailer’s placard refers to the Tire Information Placard attached adjacent to or near the trailer’s VIN (Certification) label at the left front of the trailer.

Trailers Over 10,000-pound GVWR

(Note: These trailers are not required to have a tire information placard on the trailer and may not have one installed)

1. Determine the empty weight of your trailer by weighing the trailer using a public scale or other means.
 2. Locate the GVWR (Gross Vehicle Weight Rating) of the trailer on your trailer’s VIN (Certification) label.
- Subtract the empty weight of your trailer from the GVWR stated on the VIN label. That weight is the maximum available cargo capacity of the trailer and may not be safely exceeded. National Highway Transportation Safety Administration (NHTSA) in addition to notifying us.

Steps For Determining Correct Load Limit → Tow Vehicle

1. Locate the statement, “The combined weight of occupants and cargo should never exceed XXX lbs.,” on your vehicle’s placard.
2. Determine the combined weight of the driver and passengers who will be riding in your vehicle.
3. Subtract the combined weight of the driver and passengers from XXX kilograms or XXX pounds.
4. The resulting figure equals the available amount of cargo and luggage capacity. For example, if the “XXX” amount equals 1400 lbs. and there will be five 150 lb. passengers in your vehicle, the amount of available cargo and luggage capacity is 650 lbs. (1400-750 (5 x 150) = 650 lbs.).
5. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage capacity calculated in the previous step.
6. If your vehicle is towing a trailer, load from your trailer will be transferred to your vehicle. Consult the tow vehicle’s manual to determine how this weight transfer reduces the available cargo and luggage capacity of your vehicle.

Tire Safety

Glossary Of Tire Terminology

Accessory weight: The combined weight (in excess of those standard items which may be replaced) of automatic transmission, power steering, power brakes, power windows, power seats, radio and heater, to the extent that these items are available as factory installed equipment (whether installed or not).

Bead: The part of the tire that is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim.

Bead separation: This is the breakdown of the bond between components in the bead.

Bias ply tire: A pneumatic tire in which the ply cords that extend to the beads are laid at alternate angles substantially less than 90 degrees to the centerline of the tread.

Carcass: The tire structure, except tread and sidewall rubber which, when inflated, bears the load.

Chunking: The breaking away of pieces of the tread or sidewall.

Cold inflation pressure: The pressure in the tire before you drive.

Cord: The strands forming the plies in the tire.

Cord separation: The parting of cords from adjacent rubber compounds.

Cracking: Any parting within the tread, sidewall, or inner liner of the tire extending to cord material.

CT: A pneumatic tire with an inverted flange tire and rim system in which the rim is designed with rim flanges pointed radially inward and the tire is designed to fit on the underside of the rim in a manner that encloses the rim flanges inside the air cavity of the tire.

Curb weight: The weight of a motor vehicle with standard equipment including the maximum capacity of fuel, oil, and coolant, and, if so equipped, air conditioning and additional weight optional engine.

Extra load tire: A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire.

Groove: The space between two adjacent tread ribs.

Gross Axle Weight Rating: The maximum weight that any axle can support, as published on the Certification / VIN label on the front left side of the trailer. Actual weight determined by weighing each axle on a public scale, with the trailer attached to the towing vehicle.

Hitch Weight: The downward force exerted on the hitch ball by the trailer coupler.

Innerliner: The layer(s) forming the inside surface of a tubeless tire that contains the inflating medium within the tire.

Tire Safety

Innerliner separation: The parting of the innerliner from cord material in the carcass.

Intended outboard sidewall: The sidewall that contains a white wall, bears white lettering or bears manufacturer, brand, and/or model name molding that is higher or deeper than the same molding on the other sidewall of the tire or the outward facing sidewall of an asymmetrical tire that has a particular side that must always face outward when mounted on a vehicle.

Light truck (LT) tire: A tire designated by its manufacturer as primarily intended for use on lightweight trucks or multipurpose passenger vehicles. May be used on trailers.

Load rating: The maximum load that a tire is rated to carry for a given inflation pressure.

Maximum load rating: The load rating for a tire at the maximum permissible inflation pressure for that tire.

Maximum permissible inflation pressure: The maximum cold inflation pressure to which a tire may be inflated.

Maximum loaded vehicle weight: The sum of curb weight, accessory weight, vehicle capacity weight, and production options weight.

Measuring rim: The rim on which a tire is fitted for physical dimension requirements.

Non-pneumatic rim: A mechanical device which, when a non-pneumatic tire assembly incorporates a wheel, supports the tire, and attaches, either integrally or separably, to the wheel center member and upon which the tire is attached.

Non-pneumatic spare tire assembly: A nonpneumatic tire assembly intended for temporary use in place of one of the pneumatic tires and rims that are fitted to a passenger car in compliance with the requirements of this standard.

Non-pneumatic tire: A mechanical device which transmits, either directly or through a wheel or wheel center member, the vertical load and tractive forces from the roadway to the vehicle, generates the tractive forces that provide the directional control of the vehicle and does not rely on the containment of any gas or fluid for providing those functions.

Non-pneumatic tire assembly: A non-pneumatic tire, alone or in combination with a wheel or wheel center member, which can be mounted on a vehicle.

Normal occupant weight: This means 68 kilograms (150 lbs.) times the number of occupants specified in the second column of Table I of 49 CFR 571.110.

Occupant distribution: The distribution of occupants in a vehicle as specified in the third column of Table I of 49 CFR 571.110

Open splice: Any parting at any junction of tread, sidewall, or innerliner that extends to cord material.

Outer diameter: The overall diameter of an inflated new tire.

Tire Safety

Overall width: The linear distance between the exteriors of the sidewalls of an inflated tire, including elevations due to labeling, decorations, or protective bands or ribs.

Pin Weight: The downward force applied to the 5th wheel or gooseneck ball, by the trailer kingpin or gooseneck coupler.

Ply: A layer of rubber-coated parallel cords

Ply separation: A parting of rubber compound between adjacent plies.

Pneumatic tire: A mechanical device made of rubber, chemicals, fabric and steel or other materials, that, when mounted on an automotive wheel, provides traction and contains the gas or fluid that sustains the load.

Production options weight: The combined weight of those installed regular production options weighing over 2.3 kilograms (5 lbs.) in excess of those standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levelers, roof rack, heavy duty battery, and special trim.

Radial ply tire: A pneumatic tire in which the ply cords that extend to the beads are laid at substantially 90 degrees to the centerline of the tread.

Recommended inflation pressure: This is the inflation pressure provided by the vehicle manufacturer on the Tire Information label and on the Certification / VIN tag.

Reinforced tire: A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire.

Rim: A metal support for a tire or a tire and tube assembly upon which the tire beads are seated.

Rim diameter: This means the nominal diameter of the bead seat.

Rim size designation: This means the rim diameter and width.

Rim type designation: This means the industry of manufacturer's designation for a rim by style or code.

Rim width: This means the nominal distance between rim flanges.

Section width: The linear distance between the exteriors of the sidewalls of an inflated tire, excluding elevations due to labeling, decoration, or protective bands.

Sidewall: That portion of a tire between the tread and bead.

Sidewall separation: The parting of the rubber compound from the cord material in the sidewall.

Special Trailer (ST) tire: The "ST" is an indication the tire is for trailer use only.

Tire Safety

Test rim: The rim on which a tire is fitted for testing and may be any rim listed as appropriate for use with that tire.

Tread: That portion of a tire that comes into contact with the road.

Tread rib: A tread section running circumferentially around a tire.

Tread separation: Pulling away of the tread from the tire carcass.

Treadwear indicators (TWI): The projections within the principal grooves are designed to give a visual indication of the degrees of wear of the tread.

Vehicle capacity weight: The rated cargo and luggage load plus 68 kilograms (150 lbs.) times the vehicle's designated seating capacity.

Vehicle maximum load on the tire: The load on an individual tire that is determined by distributing to each axle its share of the maximum loaded vehicle weight and dividing by two.

Vehicle normal load on the tire: The load on an individual tire that is determined by distributing to each axle its share of the curb weight, accessory weight, and normal occupant weight (distributed in accordance with Table I of CRF 49 571.110) and dividing by 2.

Weather side: The surface area of the rim not covered by the inflated tire.

Wheel center member: In the case of a non-pneumatic tire assembly incorporating a wheel, a mechanical device which attaches, either integrally or separably, to the non-pneumatic rim and provides the connection between the nonpneumatic rim and the vehicle; or, in the case of a non-pneumatic tire assembly not incorporating a wheel, a mechanical device which attaches, either integrally or separably, to the nonpneumatic tire and provides the connection between tire and the vehicle.

Wheel-holding fixture: The fixture used to hold the wheel and tire assembly securely during testing.

Tire Safety → Everything Rides On It

The National Traffic Safety Administration (NHTSA) has published a brochure (DOT HS 809 361) that discusses all aspects of Tire Safety, as required by CFR 575.6. This brochure is reproduced in part below. It can be obtained and downloaded from NHTSA, free of charge, from the following web site:

http://www.nhtsa.dot.gov/cars/rules/TireSafety/ridesonit/tires_index.html

Studies of tire safety show that maintaining proper tire pressure, observing tire and vehicle load limits (not carrying more weight in your vehicle than your tires or vehicle can safely handle), avoiding road hazards, and inspecting tires for cuts, slashes, and other irregularities are the most important things you can do to avoid tire failure, such as tread separation or blowout and flat tires. These actions, along with other care and maintenance activities, can also:

Tire Safety

- Improve vehicle handling.
- Help protect you and others from avoidable breakdowns and accidents.
- Improve fuel economy.
- Increase the life of your tires.

This booklet presents a comprehensive overview of tire safety, including information on the following topics:

- Basic tire maintenance
- Uniform Tire Quality Grading System
- Fundamental characteristics of tires
- Tire safety tips.

Use this information to make tire safety a regular part of your vehicle maintenance routine. Recognize that the time you spend is minimal compared with the inconvenience and safety consequences of a flat tire or other tire failure.

Safety First- Basic Tire Maintenance

Properly maintained tires improve the steering, stopping, traction, and load-carrying capability of your vehicle. Underinflated tires and overloaded vehicles are a major cause of tire failure. Therefore, as mentioned above; to avoid flat tires and other types of tire failure, you should maintain proper tire pressure, observe tire and vehicle load limits, avoid road hazards, and regularly inspect your tires.

Finding Your Vehicles Recommended Tire Pressure and Load Limits

Tire information placards and vehicle certification labels contain information on tires and load limits. These labels indicate the vehicle manufacturer's information including:

- Recommended tire size
- Recommended tire inflation pressure
- Vehicle capacity weight (VCW—the maximum occupant and cargo weight a vehicle is designed to carry)
- Front and rear gross axle weight ratings (GAWR—the maximum weight the axle systems are designed to carry).
- Both placards and certification labels are permanently attached to the trailer near the left front.

Understanding Tire Pressure and Load Limits

Tire inflation pressure is the level of air in the tire that provides it with load-carrying capacity and affects the overall performance of the vehicle. The tire inflation pressure is a number that indicates the amount of air pressure—measured in pounds per square inch (psi)—a tire requires to be properly inflated. (You will also find this number on the vehicle information placard expressed in kilopascals (kPa), which is the metric measure used internationally.)

Tire Safety

Manufacturers of passenger vehicles and light trucks determine this number based on the vehicle's design load limit, that is, the greatest amount of weight a vehicle can safely carry and the vehicle's tire size. The proper tire pressure for your vehicle is referred to as the "recommended cold inflation pressure." (As you will read below, it is difficult to obtain the recommended tire pressure if your tires are not cold.)

Because tires are designed to be used on more than one type of vehicle, tire manufacturers list the "maximum permissible inflation pressure" on the tire sidewall. This number is the greatest amount of air pressure that should ever be put in the tire under normal driving conditions.

Safety First- Basic Tire Maintenance pt. 2

It is important to check your vehicle's tire pressure at least once a month for the following reasons:

- Most tires may naturally lose air over time.
- Tires can lose air suddenly if you drive over a pothole or other object or if you strike the curb when parking.
- With radial tires, it is usually not possible to determine under inflation by visual inspection.

For convenience, purchase a tire pressure gauge to keep in your vehicle. Gauges can be purchased at tire dealerships, auto supply stores, and other retail outlets. The recommended tire inflation pressure that vehicle manufacturers provide reflects the proper psi when a tire is cold. The term cold does not relate to the outside temperature. Rather, a cold tire is one that has not been driven on for at least three hours. When you drive, your tires get warmer, causing the air pressure within them to increase. Therefore, to get an accurate tire pressure reading, you must measure tire pressure when the tires are cold or compensate for the extra pressure in warm tires.

Steps For Maintaining Proper Tire Pressure

1. Locate the recommended tire pressure on the vehicle's tire information placard, certification label, or in the owner's manual.
2. Record the tire pressure of all tires.
3. If the tire pressure is too high in any of the tires, slowly release air by gently pressing on the tire valve stem with the edge of your tire gauge until you get to the correct pressure.
4. If the tire pressure is too low, note the difference between the measured tire pressure and the correct tire pressure. These "missing" pounds of pressure are what you will need to add.
5. At a service station, add the missing pounds of air pressure to each tire that is under inflated.
6. Check all the tires to make sure they have the same air pressure except in cases in which the front and rear tires are supposed to have different amounts of pressure).

Tire Size

To maintain tire safety, purchase new tires that are the same size as the vehicle's original tires, or another size recommended by the manufacturer. Look at the tire information placard, the owner's manual, or the sidewall of the tire you are replacing to find this information. If you have any doubt about the correct size to choose, consult with the tire dealer.

Tire Safety

Tire Tread

The tire tread provides gripping action and traction that prevents your vehicle from slipping or sliding, especially when the road is wet or icy. In general, tires are not safe and should be replaced when the tread is worn down to 2/32 of an inch. Tires have built-in treadwear indicators that let you know when it is time to replace your tires. These indicators are raised sections spaced intermittently in the bottom of the tread grooves. When they appear “even” with the outside of the tread, it is time to replace your tires. Another method for checking tread depth is to place a penny in the tread with Lincoln’s head upside down and facing you. If you can see the top of Lincoln’s head, you are ready for new tires.

Tire Balance and Wheel Alignment

To avoid vibration or shaking of the vehicle when a tire rotates, the tire must be properly balanced. This balance is achieved by positioning weights on the wheel to counterbalance heavy spots on the wheel-and-tire assembly. A wheel alignment adjusts the angles of the wheels so that they are positioned correctly relative to the vehicle’s frame. This adjustment maximizes the life of your tires. These adjustments require special equipment and should be performed by a qualified technician.

Tire Repair


The proper repair of a punctured tire requires a plug for the hole and a patch for the area inside the tire that surrounds the puncture hole. Punctures through the tread can be repaired if they are not too large, but punctures to the sidewall should not be repaired. Tires must be removed from the rim to be properly inspected before being plugged and patched.

Tire Fundamentals

Federal law requires tire manufacturers to place standardized information on the sidewall of all tires. This information identifies and describes the fundamental characteristics of the tire and provides a tire identification number for safety standard certification and in case of a recall.

Tire Safety

Information on Passenger Vehicle Tires

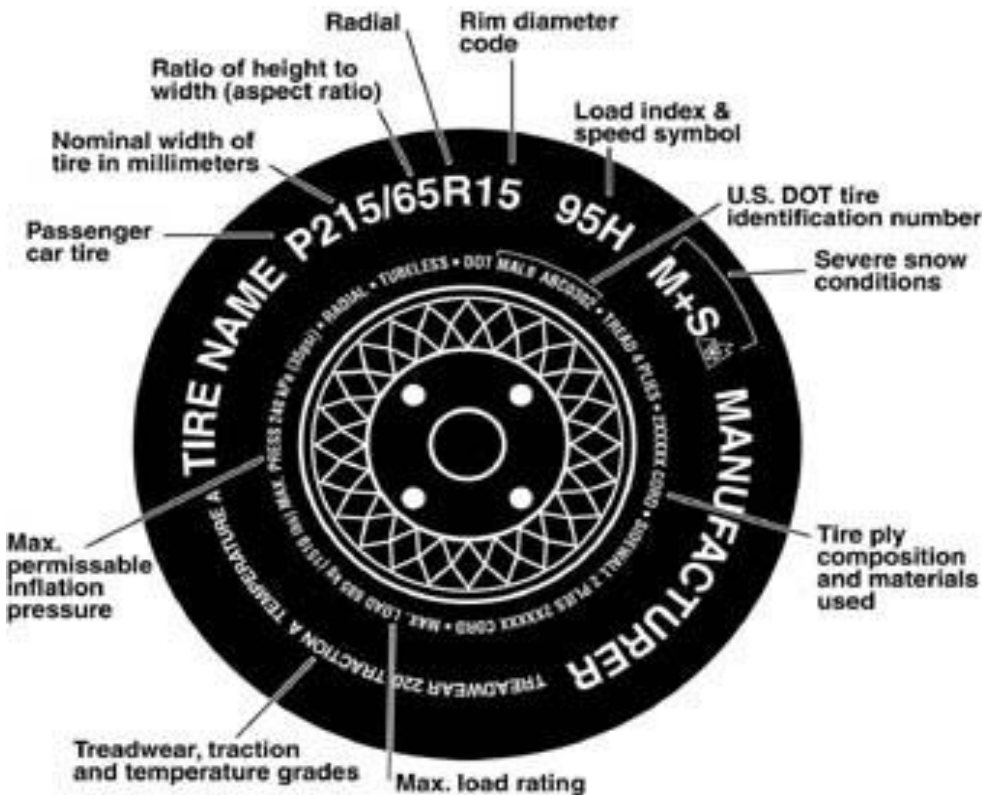

P: The “P” indicates the tire is for passenger vehicles.

Next number: This three-digit number gives the width in millimeters of the tire from sidewall edge to sidewall edge. In general, the larger the number, the wider the tire.

Next number: This two-digit number, known as the aspect ratio, gives the tire’s ratio of height to width. Numbers of 70 or lower indicate a short sidewall for improved steering response and better overall handling on dry pavement.

R: The “R” stands for radial. Radial ply construction of tires has been the industry standard for the past 20 years.

Next number: This two-digit number is the wheel or rim diameter in inches. If you change your wheel size, you will have to purchase new tires to match the new wheel diameter.

Next number: This two- or three-digit number is the tire’s load index. It is a measurement of how much weight each tire can support. You may find this information in your owner’s manual. If not, contact a local tire dealer.

Note: You may not find this information on all tires because it is not required by law.

M+S: The “M+S” or “M/S” indicates that the tire has some mud and snow capability. Most radial tires have these markings; hence, they have some mud and snow capability.

Speed Rating: The speed rating denotes the speed at which a tire is designed to be driven for extended periods of time.

Tire Safety

Note: You may not find this information on all tires because it is not required by law.

U.S. DOT Tire Identification Number: This begins with the letters “DOT” and indicates that the tire meets all federal standards. The next two numbers or letters are the plant code where it was manufactured, and the last four numbers represent the week and year the tire was built. For example, the numbers 3197 means the 31st week of 1997. The other numbers are marketing codes used at the manufacturer’s discretion. This information is used to contact consumers if a tire defect requires a recall.

Tire Ply Composition and Materials Used: The number of plies indicates the number of layers of rubber-coated fabric in the tire. In general, the greater the number of plies, the more weight a tire can support. Tire manufacturers also must indicate the materials in the tire, which include steel, nylon, polyester, and others.

Maximum Load Rating: This number indicates the maximum load in kilograms and pounds that can be carried by the tire.

Maximum Permissible Inflation Pressure: This number is the greatest amount of air pressure that should ever be put in the tire under normal driving conditions.

UTQGS Information

Treadwear Number: This number indicates the tire’s wear rate. The higher the treadwear number is, the longer it should take for the tread to wear down. For example, a tire graded 400 should last twice as long as a tire graded 200.

Traction Letter: This letter indicates a tire’s ability to stop on wet pavement. A higher graded tire should allow you to stop your car on wet roads in a shorter distance than a tire with a lower grade. Traction is graded from highest to lowest as “AA,” “A,” “B,” and “C”.

Temperature Letter: This letter indicates a tire’s resistance to heat. The temperature grade is for a tire that is inflated properly and not overloaded. Excessive speed, under inflation or excessive loading, either separately or in combination, can cause heat build-up and possible tire failure. From highest to lowest, a tire’s resistance to heat is graded as “A,” “B,” or “C”.

Additional information on Light Truck Tires

Tire Safety

Tire Safety Tips and Checklist

Preventing Tire Damage

- Slow down if you have to go over a pothole or other object in the road.
- Do not run over curbs or other foreign objects in the roadway and try not to strike the curb when parking.

Tire Safety Checklist

- Check tire pressure regularly (at least once a month), including the spare.
- Inspect tires for uneven wear patterns on the tread, cracks, foreign objects, or other signs of wear or trauma.
- Remove bits of glass and foreign objects wedged in the tread.
- Make sure your tire valves have valve caps.
- Check tire pressure before going on a long trip.

Do not overload your vehicle. Check the Tire Information Placard or Owner's Manual for the maximum recommended load for the vehicle.

Coupling to Tow Vehicle

Follow all the safety precautions and instructions in this manual to ensure safety of persons, cargo, and satisfactory life of the trailer.

Tow Vehicle and Hitch

If the vehicle and hitch are not properly selected and matched to the Gross Vehicle Weight Rating (GVWR) of your trailer, you can cause an accident that could lead to death or serious injury. If you already have a tow vehicle, know your vehicle tow rating and make certain the trailer's rated capacity is less than or equal to the tow vehicle's rated towing capacity.

DANGER

Use of a tow vehicle with a towing capacity less than the load rating of the trailer can result in loss of control and may lead to death or serious injury.

Use of a hitch with a load rating less than the load rating of the trailer can result in loss of control and may lead to death or serious injury.

Verify hitch and tow vehicle are rated for the Gross Vehicle Weight Rating of your trailer.

Trailer Information

The Certification / Vehicle Identification Number (VIN) tag is located on the front left side of the trailer.

The trailer Certification / VIN tag contains the following critical safety information for the use of your trailer:

MANUFACTURER: Name of trailer manufacturer.

DATE OF MANUFACTURE: Month and year the trailer was manufactured.

GVWR: The Gross Vehicle Weight Rating is the maximum allowable gross weight of the trailer and its contents. The gross weight of the trailer includes the weight of the trailer and all of the items within it (such as cargo and other supplies).

GAWR: The Gross Axle Weight Rating is the maximum gross weight that an axle can support. It is the lowest of axle, wheel, or tire rating. Sometimes the tire or wheel rating is lower than the axle manufacturers rating and will then determine GAWR.

The sum total of the GAWR for all trailer axles may be less than the GVWR for the trailer, because some of the trailer load is carried by the tow vehicle, rather than

Coupling to Tow Vehicle

by the trailer axle(s). The total weight of the cargo and trailer must not exceed the GVWR, and the load on an axle must not exceed its GAWR.

TIRE SIZE: The tire size and load range for your trailer.

RIM SIZE: The rim size and load range for your trailer.

PSI: The tire air pressure (kPa / PSI) measured with tires cold.

VIN: The Vehicle Identification Number.

VEHICLE TYPE: Model or style of trailer.

CERTIFICATION STATEMENT: “This trailer meets all the Federal Motor Vehicle Safety Standards in effect on the date of manufacture shown above”.

Tow Vehicle

When equipping a new vehicle or an older vehicle to tow a trailer, ask the vehicle dealer for advice on how to outfit the tow vehicle.

Vehicle manufacturers will provide you with the maximum towing capacities of their various models, as well as the GCWR. No amount of reinforcement will give a 100 horsepower, 2,500-pound truck the towing capacity that a 300 horsepower, 5,000-pound truck has.

Coupling and Uncoupling the Trailer

A secure coupling (or fastening) of the trailer to the tow vehicle is essential. A loss of coupling may result in death or serious injury. Therefore, you must understand and follow all of the instructions for coupling.

The following parts are involved in making a secure coupling between the trailer and tow vehicle:

Coupling: The trailer connecting mechanism by which the connection is actually made to the trailer hitch. This does not include any structural member, extension of the trailer frame, or brake controller.

Hitch: The connecting mechanism including the ball support platform and ball and those components that extend and are attached to the towing vehicle, including bumpers intended to serve as hitches.

Safety chains: Chains permanently attached to the trailer such that if the coupler connection comes loose, the safety chains can keep the trailer attached to the tow vehicle. With properly rigged safety chains, it is possible to keep the tongue of the trailer from digging into the road pavement, even if the coupler-to-hitch connection comes apart.

Coupling to Tow Vehicle

Trailer lighting (and braking) connector: A device that connects electrical power from the tow vehicle to the trailer. In addition, if your trailer has a separate braking system, the electrical connector will also supply power to the trailer brakes from the tow vehicle.

Breakaway switch: If the trailer becomes uncoupled from the tow vehicle, the breakaway switch lanyard, attached independently to the tow vehicle hitch, will pull a pin in the emergency electrical breakaway switch on the trailer. The breakaway switch is activated by a battery on the trailer to energize the trailer brakes independently of the towing vehicle.

It is important to check the state of charge of the emergency breakaway battery before each trip. Simply pull the pin out of the switch by hand and then try to pull the trailer. If you feel a significant drag force the brakes are activated. Be sure to re-insert the pin in the breakaway switch. Also be sure to allow enough slack in the breakaway brake lanyard such that the switch will only activate (pin pulls out) if the coupler connection comes loose.

Jack: A device on the trailer that is used to raise and lower the trailer tongue.

WARNING

An improperly coupled trailer can result in death or serious injury. Do not move the trailer until:

- **Coupler is secured and locked to hitch.**
 - **Safety chains are secured to tow vehicle.**
 - **Trailer jack(s) are fully retracted.**
 - **Trailer brakes are checked.**
 - **Tires and wheels are checked.**
 - **Breakaway switch is connected to tow vehicle.**
 - **The trailer lights are connected and checked.**
- Load is secured to trailer.**

Couple Trailer to Tow Vehicle

The trailer may be equipped with a ball hitch coupler or a ring & pintle coupler. See the appropriate section for the coupler on your trailer.

Coupling to Tow Vehicle

Ball Hitch Coupler

A ball hitch coupler connects to a ball that is located on or under the rear bumper of tow vehicle.

We have utilized a ball hitch coupler that is suitable for the size and weight of the trailer. The load rating of the coupler and the necessary ball size are listed on the trailer tongue.

You must provide a hitch and ball for your tow vehicle, which meets or exceeds the GVWR of the trailer.

The ball size must be the same as the coupler size. If the hitch ball is too small, too large, is underrated, is loose or is worn, the trailer can come loose from the tow vehicle and may cause death or serious injury.

The tow vehicle, hitch and ball must have a rated towing capacity equal to or greater than the trailer gross vehicle weight rating (GVWR).

It is essential that the hitch ball be the same size as the coupler.

The ball size and load rating (capacity) are marked on the ball; hitch capacity is marked on the hitch.

Before Coupling Trailer to Tow Vehicle

1. Be sure the size and rating of hitch ball match the size and rating of the coupler. Hitch balls and couplers are marked with their size and rating.
2. Wipe the hitch ball clean and inspect it visually and by feel for flat spots, cracks and pits.

 WARNING	 WARNING
Coupler-to-hitch mismatch can result in uncoupling, leading to death or serious injury. Be sure the LOAD RATING of the hitch ball is equal or greater than the load rating of the coupler. Be sure the SIZE of the hitch ball matches the size of the coupler.	A worn, cracked, or corroded hitch ball can fail while towing, and may result in death or serious injury. Before coupling trailer, inspect the hitch ball for wear, corrosion, and cracks. Replace worn or damaged hitch ball.

3. Rock the ball to make sure it is tight to the hitch, and visually check that the hitch ball nut is solid against the lock washer and hitch frame.
4. Wipe the inside and outside of the coupler clean and inspect it visually for cracks and deformations; feel the inside of the coupler for worn spots and pits.
5. Be sure the coupler is tight to the tongue of the trailer. All coupler fasteners must be visibly solid against the trailer frame.
6. Raise the bottom surface of the coupler to be above the top of the hitch ball.

Coupling to Tow Vehicle


⚠ WARNING

A loose hitch ball nut can result in uncoupling, leading to death or serious injury.

Make sure the hitch ball is tight to the hitch before coupling the trailer.

Prepare Coupler and Hitch

1. Lubricate hitch ball and inside of coupler with a thin layer of automotive bearing grease.
2. Remove safety latch pin and open coupler locking mechanism. In the open position, the coupler is able to drop fully onto hitch ball. See the coupler instructions for details of placing the coupler in the “open” position.
3. Slowly back up tow vehicle so that hitch ball is near or aligned under coupler.

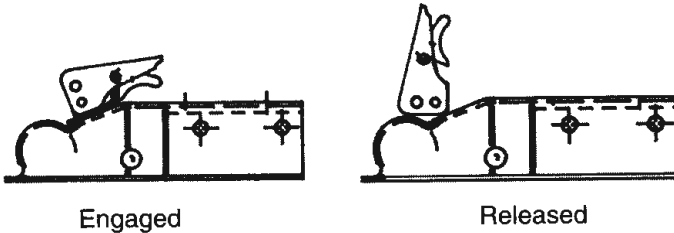

Your trailer may be equipped with a different style coupler. If so, see the coupler manufacturers operating instructions.

Couple Trailer to Tow Vehicle

1. Lower the trailer tongue until the coupler fully engages the hitch ball. If the coupler does not line up with the hitch ball, adjust the position of the tow vehicle.
2. Close latch and engage the coupler locking mechanism. In the engaged position, the locking mechanism securely holds the coupler to the hitch ball.
3. Insert the safety lock pin through the hole in the locking mechanism.
4. Be sure the coupler is all the way on the hitch ball and the locking mechanism is engaged. A properly engaged locking mechanism will allow the coupler to raise the rear of the tow vehicle. Using the trailer jack, test to see that you can raise the rear of the tow vehicle by 1 inch, after the coupler is locked to the hitch.

NOTICE

The tongue jack can be damaged by overloading. Do not use the tongue jack to raise the tow vehicle more than 1 inch.

Coupling to Tow Vehicle

5. If the coupler cannot be secured to the hitch ball, do not tow the trailer. Contact your dealer for assistance.
6. Lower the trailer so that its entire tongue weight is held by the hitch and continue retracting the jack to its fully retracted position.

CAUTION

Drop leg jacks may be spring loaded and may rapidly return to the raise position when released.

Keep clear when releasing drop legs.

7. Fully retract jack drop leg if equipped.

Go to Section 4.3.3 “Connect Safety Chains” to continue connecting trailer to tow vehicle.

Trailer With Ring and Pintle Coupler

A ring on the trailer connects to the pintle that is located on or under the rear bumper of tow vehicle.

We have utilized a ring that is suitable for the size and weight of the trailer. The load rating of the ring and the necessary pintle size are listed on the trailer tongue.

You must provide a pintle for your tow vehicle, where the load rating of the hitch and pintle is equal to or greater than that of your trailer. The pintle size must be the same as the ring size. If the pintle is too small, too large, is underrated, is loose or is worn, the trailer can come loose from the tow vehicle and may cause death or serious injury.

The tow vehicle, hitch and pintle must have a rated towing capacity equal to or greater than the trailer gross vehicle weight rating (GVWR).

It is essential that the pintle be the same size as the coupler.

The pintle size and load rating (capacity) are marked on the pintle; ring capacity is marked on the ring.

Coupling to Tow Vehicle

Before Coupling Trailer to Tow Vehicle

- 1. Be sure the size and rating of pintle match the size and rating of the ring. Hitch ring and pintles are marked with their size and rating.
- 2. Wipe the pintle clean and inspect it visually and by feel for flat spots, cracks, and pits.

⚠ WARNING	⚠ WARNING
Ring-to-pintle mismatch can result in uncoupling, leading to death or serious injury. Be sure the LOAD RATING of the pintle is equal or greater than the load rating of the ring. Be sure the SIZE of the pintle matches the size of the ring.	A worn, cracked or corroded pintle can fail while towing, and may result in death or serious injury. Before coupling trailer, inspect the pintle for wear, corrosion and cracks. Replace worn or damaged pintle.

- 3. Rock the pintle to make sure it is tight to the hitch, and visually check that the pintle fasteners are solid against the hitch frame.
- 4. Wipe the inside and outside of the ring clean and inspect it visually for cracks and deformations; feel the inside of the ring for worn spots and pits.
- 5. Be sure the ring is tight to the tongue of the trailer. All ring fasteners must be visibly solid against the trailer frame.
- 6. Raise the bottom surface of the ring to be above the top of the open pintle.


⚠ WARNING

A loose pintle can result in uncoupling, leading to death or serious injury.

Make sure the pintle is tight to the hitch before coupling the trailer.

Prepare Ring and Pintle

- 1. Lubricate the inside of the pintle with a thin layer of automotive bearing grease.
- 2. Remove the safety latch pin and open the pintle locking mechanism.
- 3. In the open position, the ring is able to drop fully onto the pintle.

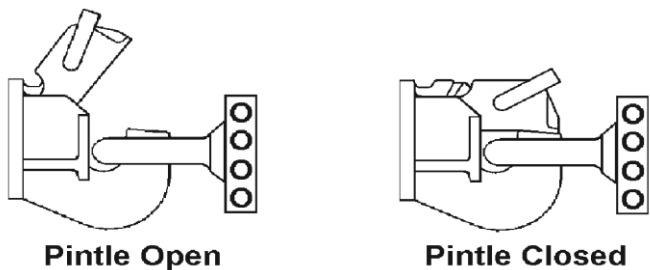

Coupling to Tow Vehicle

4. See the coupler instructions for details of placing the pintle in the “open” position.
5. Slowly back up the tow vehicle so that the pintle is aligned under the ring.

Couple Trailer to Tow Vehicle

1. Lower the trailer tongue until the ring fully engages the pintle. If the ring does not line up with the pintle, adjust the position of the tow vehicle.
2. Close pintle and engage the pintle locking mechanism. In the engaged position, the locking mechanism securely holds the ring to the pintle.
3. Insert the safety lock pin through the hole in the locking mechanism.
4. Be sure the ring is all the way on the pintle, and the locking mechanism is engaged. A properly engaged locking mechanism will allow the pintle to raise the rear of the tow vehicle. Using the trailer jack, test to see that you can raise the rear of the tow vehicle by 1 inch, after the pintle is closed and locked.
5. If the ring cannot be secured to the pintle, do not tow the trailer. Contact your dealer for assistance.
6. Lower the trailer so that its entire tongue weight is held by the hitch and continue retracting the jack to its fully retracted position.
7. Fully retract jack drop leg if equipped.

NOTICE

The tongue jack can be damaged by overloading. Do not use the tongue jack to raise the tow vehicle more than 1 inch.

CAUTION


Drop leg jacks may be spring loaded and may rapidly return to the raise position when released.

Keep clear when releasing drop legs.

Coupling to Tow Vehicle

Connect Safety Chains

1. Visually inspect the safety chains and hooks for wear or damage. Replace worn or damaged safety chains and hooks before towing.
2. Safety chains must crisscross under the coupler so if the trailer uncouples, the safety chains can hold the tongue up above the road. Loop around a frame member of the tow vehicle or to holes provided in the hitch system, but do not attach them to an interchangeable part of the hitch assembly.
3. Attach hooks up from underneath the hole. Do not just drop into hole.
4. Provide enough slack in chains to permit tight turns, but not be close to the road surface to drag.

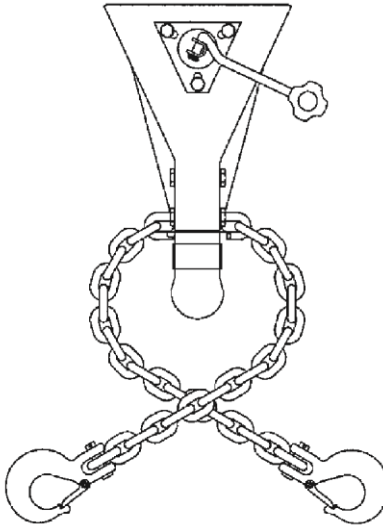

WARNING

Improper rigging of the safety chains can result in loss of control of the trailer and tow vehicle, leading to death or serious injury, if the trailer uncouples from the tow vehicle.

Cross chains underneath hitch and coupler with enough slack to permit turning and to hold tongue up, if the trailer comes loose.

Fasten chains to frame of tow vehicle.

Do not fasten chains to any part of the hitch unless the hitch has holes or loops specifically for that purpose.

Coupling to Tow Vehicle

Connect Electrical Cable

1. Connect the trailer lights to the tow vehicle's electrical system using trailer electrical cable.
2. Check all lights for proper operation. Repair or replace non-working lights before towing trailer.
3. Check electric brakes for proper operation using brake controller mounted in the cab.

WARNING

Improper electrical connection between the tow vehicle and the trailer will result in inoperable lights and electric brakes and can lead to collision.


Before each tow:

- Check that the electric brakes work by operating the brake controller inside the tow vehicle.
- Check that all lights and turn signals work.

Attach Breakaway Brake Lanyard

If the coupler or hitch fails, a properly connected and working breakaway brake system will apply the trailer brakes. The safety chains will keep the tow vehicle attached and as the trailer brakes are applied, the trailer/tow vehicle combination will come to a controlled stop.

Connect the lanyard to the tow vehicle so that the hydraulic actuator will engage, or the electric brake pull pin will be pulled out before all of the slack in the safety chains is taken up. Do not connect the lanyard to a safety chain, hitch ball or hitch ball assembly. This would keep the breakaway brake system from operating when it is needed.

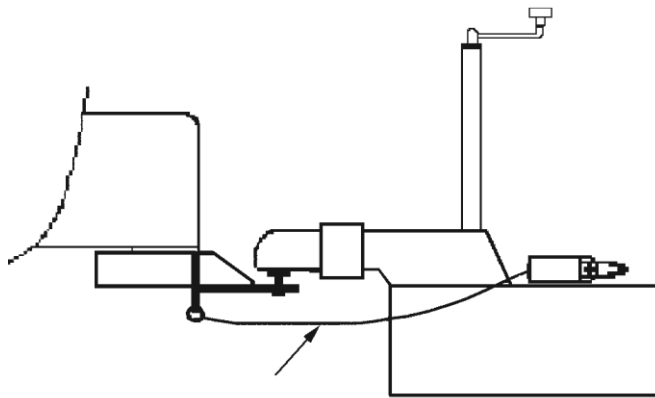

Test Electric Brakes

If your trailer has electric brakes, your tow vehicle will have an electric brake controller that sends power to the trailer brakes. Before towing the trailer on the road, you must operate the brake controller while trying to pull the trailer in order to confirm that the electric brakes operate.

Coupling to Tow Vehicle

While towing the trailer at less than 5 mph, manually operate the electric brake controller in the tow vehicle. You should feel the operation of the trailer brakes. If the trailer brakes are not functioning, the brake system **MUST** be evaluated to determine the cause of the problem and corrective action **MUST** be taken before the trailer is used. Take the unit to your dealer or a qualified brake specialist.

Use this procedure each time you tow the trailer to check brake system operation.

Test Electrical Breakaway Brakes

The breakaway brake system includes a battery, a switch with a pull pin and lanyard, and a breakaway brake controller. Read and follow the instructions here as well as the instructions that have been prepared by the breakaway brake manufacturer. If you do not have these instructions, contact your dealer for assistance.

Hydraulic tilt trailers may use the hoist battery to provide power to the breakaway brakes. If your trailer is not setup this way, there will be a small breakaway battery mounted near the breakaway switch.

Most trailers are setup to charge the battery from the tow vehicle. If the electrical system on your tow vehicle does not provide power to the battery, you must periodically charge the battery with a commercial battery charger to keep the battery charged.

Do not tow trailer if the battery requires recharging. A discharged brake battery will not activate the brakes if the trailer uncouples from the tow vehicle. The battery must be fully charged before towing trailer.

To test the breakaway brake battery, remove the pull pin from the switch and attempt to pull the trailer forward. You should feel the trailer resisting being towed, but the wheels will not necessarily be locked. If the brakes do not function, do not tow the trailer until brakes, or battery, are repaired.

Immediately replace the pull pin. The breakaway brake battery discharges rapidly when the pull pin is removed.

Do not tow the trailer with the breakaway brake system ON because the brakes will overheat which can result in permanent brake failure.

CAUTION

Extreme cold weather can degrade battery performance and cause brakes to not operate properly.

Check battery charge level before towing.

Coupling to Tow Vehicle

Test Electrical Breakaway Brakes

 WARNING	 WARNING
An ineffective breakaway brake system can result in a runaway trailer, leading to death or serious injury if the coupler fails. Test the function of the breakaway brake system before towing trailer. Do not tow trailer if breakaway brake system is not working; have it serviced or repaired. Connect breakaway lanyard to the tow vehicle, NOT to the safety chain, ball, pintle, hitch, or support.	Failure to replace the pull pin can result in ineffective brakes, leading to loss of control, serious injury or death.

If you do not use your trailer for three or more months, or during winter months:

- Store the battery indoors; and
- Charge the battery every three months.

Replace the breakaway brake battery according to the intervals specified by battery manufacturer.

Test Surge Breaks (If Equipped)

Hydraulic surge actuator systems provide automatic and smooth trailer braking without special application by the tow vehicle driver. While this is extremely convenient it can sometimes be difficult to determine if the surge setup is functioning properly. The following steps provide a quick field-test to confirm that the trailer brake system is operational.

 WARNING
The field-test procedure indicates only if the trailer brake system is functional but DOES NOT provide information on how efficiently it will operate. Regular inspection, maintenance, and adjustment of all brake system components (including the surge actuator, tubing, hoses, brake clusters, drums, and associated hardware/support structure) are still required to ensure maximum brake performance and smooth, even brake operation.

Coupling to Tow Vehicle

Test Surge Breaks (If Equipped)

Move the trailer to flat, level ground, pulling FORWARD several feet before parking. This forward motion will ensure trailers equipped with free-backing brakes are in their normal operating mode. Disconnect the trailer from the tow vehicle and jack up the trailer's tongue until it is horizontal. Hook the trailer's safety chains (NOT the actuator's breakaway cable) together to form a loop, which is centered below the actuator's coupler. Place wheel chock blocks two feet behind the trailer to prevent a runaway trailer.

Place a sturdy board, such as a 2 inch by 4-inch piece of lumber, into the chain loop below the coupler. The board should be 4 feet or longer so it will extend several feet above the actuator. Keep the end of the board a few inches off the ground and position it to press against the front end of the actuator's coupler. Press the board towards the rear of the trailer.

Keep pressing the top of the board to stroke the actuator and its internal master cylinder. If the trailer brake system is operational, the brakes will apply and keep the trailer from rolling away from you. Properly adjusted uni-servo or duo-servo type brakes will prevent you from moving the trailer back more than a few inches. Free-backing type brakes will initially provide rolling resistance, but continued force on the board will switch them into free-backing mode, and you'll be able to move the trailer backwards.

If you have uni-servo or duo-servo brakes and stroking the actuator (as described above) causes the trailer to roll away from you freely or with only minimal resistance, the brakes are NOT applying properly. If you have free backing brakes and stroking the actuator (as described above) causes the trailer to roll away without initial resistance, then the brakes are NOT applying properly. The brake system MUST be evaluated to determine the cause of the problem and corrective action MUST be taken before the trailer is used. Use this procedure each time you tow your trailer to check your surge brake system operation.

Test Surge Breakaway System

Before towing, check that the breakaway lever and lanyard are properly positioned. If the breakaway lever and lanyard are not located correctly due to either the lanyard being pulled during use or by accident, it MUST be reset prior to the trailer being moved.

See the Surge Brake Actuator manual for the correct resetting and testing procedure.

WARNING

The breakaway system is designed to operate if the trailer separates from the tow vehicle.

DO NOT use the breakaway system as a parking brake.

Coupling to Tow Vehicle

Uncouple Trailer

Follow these steps to uncouple trailer from the tow vehicle:

1. Park the trailer on a firm level surface and block trailer tires.
2. Disconnect electrical connector.
3. Disconnect breakaway brake switch lanyard.
4. Disconnect safety chains from tow vehicle.
5. Unlock the coupler and open it.
6. Before extending jack, make certain the ground surface below the jack pad will support the tongue load.
7. Rotate jack handle to extend the jack and transfer the weight of the trailer tongue to the jack.
8. Raise the trailer coupler above the tow vehicle hitch.
9. Drive tow vehicle forward

Tongue Weight

It is critical to have a portion of the trailer load carried by the tow vehicle. That is, the trailer tongue must exert a downward force on the hitch. This is necessary for two reasons. First, the proper amount of tongue weight is necessary for the tow vehicle to be able to maintain control of the tow vehicle/trailer system. If, for example, the tongue exerts an upward pull on the hitch, instead of pushing down on it (because the trailer is overloaded behind its axle(s)), the rear wheel of the tow vehicle can lose traction or grip and cause loss of control. Also, even if there is some weight on the tongue, but not enough weight on the tongue, the trailer can become unstable at high speeds. Remember, the faster you go the more likely the trailer is to sway.

If there is too much tongue weight, the tow vehicle is prone to jack-knife. The front wheels of the tow vehicle can be too lightly loaded and cause loss of steering control and traction if the front wheels are driving.

In addition to tow vehicle control, tongue weight is necessary to ensure that the trailer axle(s) do not exceed their Gross Axle Weight Rating (GAWR).

In the following table, the second column shows the rule of thumb percentage of total weight of the trailer plus its cargo (Gross Trailer Weight, or “GTW”) that should appear on the tongue of the trailer. For example, a large trailer with a loaded weight of 6,000 pounds, should have 10-15% of 6,000 pounds (600-900 lbs.) on the hitch.

Tongue Weight as a Percentage of Loaded Trailer Weight	
Type of Hitch	Percentage
Ball Hitch or Ring & Pintle	10-15% for large trailers 6-10% for small trailers

Coupling to Tow Vehicle

Tongue Weight

The numbers quoted are for example purposes only and should be tailored to the specific trailer.

For questions regarding the actual percent of tongue weight for the trailer, check with the manufacturer for specifics.

WARNING

Improper tongue weight (load distribution) can result in loss of control of the trailer, leading to death or serious injury.

Make certain that tongue weight is within the allowable range.

Be sure to:

- **Distribute the load evenly, right and left.**
- **Keep the center of gravity low.**

Distribute the load front-to-rear to provide proper tongue weight (see chart).

Checking Tongue Weight

To check the tongue weight, the tow vehicle and trailer must be on level ground, as they will be when the trailer is being towed.

Take the trailer to a truck stop or grain elevator where there is a “certified” scale. Place the tow vehicle only onto the scale and get the weight. This weight must be less than your tow vehicle’s GVWR.

Pull the trailer onto the scale and uncouple it from the tow vehicle, leaving just the trailer on the scale. Get a ticket which lists the total trailer weight. Re-connect the trailer to your tow vehicle and drive the tow vehicle wheels off the scale, just leaving the trailer axles on the scale. Get a “ticket”, which lists the trailer’s axle weight. Simply subtract the axle weight from the total weight to determine the hitch weight.

While you are at the scale, you should weigh the entire combination vehicle. This result should be less than the Gross Combined Weight Rating (GCWR) for your towing vehicle. Some scales allow you to get individual axle weights also. If this is possible, get the tow vehicles front and rear axle weights to make sure they are in the same proportion as the tow vehicle alone, and that the rear axle is not overloaded.

Coupling to Tow Vehicle

Adjust Hitch Height (If Equipped)

The height of the hitch on the trailer must be adjusted so that the trailer, when loaded to rated capacity, is level while connected to the tow vehicle. A level trailer allows equal weight distribution on the axles.

Your dealer or a trailer service center can perform this adjustment, or you can use the following steps to adjust the hitch height yourself.

If the trailer is not equipped with an adjustable hitch, an offset ball mount may be available from your hitch manufacturer.

1. Connect trailer to tow vehicle and load the trailer to rated capacity. See Loading and Unloading.
2. Park the tow vehicle and trailer on a firm level surface.
3. Stand away from the trailer and visually verify if the trailer is level front-to-rear. If the front of the trailer is higher than the rear, the hitch must be raised. If the front of the trailer is lower than the rear, the hitch must be lowered.
4. Uncouple trailer from tow vehicle. See Coupling and Uncoupling.
5. Remove the lock nuts and bolts (1) on hitch. Discard lock nuts. Inspect bolts for damage and replace if necessary. Contact your dealer for the correct size and grade of bolts.
6. Raise or lower the hitch as necessary.
7. Install bolts and new lock nuts.
8. Tighten lock nuts to torque specified by your dealer.
9. Couple the trailer to the tow vehicle and verify that the trailer is level front to rear. Adjust if necessary.
10. Unload trailer. See Loading and Unloading.

 WARNING	 WARNING
Improper hitch height adjustment can result in overloaded tires, blowout and loss of control, leading to death or serious injury. Adjust the hitch height so that the loaded trailer is level.	Used lock nuts are prone to loosen, resulting in the hitch separating from the trailer, which can lead to death or serious injury. NEVER re-use a lock nut. Use new lock nuts each time the hitch height is adjusted. Contact your dealer for the proper grade and size of lock nut.

Loading and Unloading

Improper trailer loading causes many accidents and deaths. To safely load a trailer, you must consider:

- Overall load weight.
- Load weight distribution.
- Proper tongue weight.
- Securing the load properly.

To determine that you have loaded the trailer within its rating, you must consider the distribution of weight, as well as the total weight of the trailer and its contents. The trailer axles carry most of the total weight of the trailer and its contents (Gross Vehicle Weight, or “GVW”). The remainder of the total weight is carried by the tow vehicle hitch.

It is essential for safe towing that the trailer tongue and tow vehicle hitch carry the proper amount of the loaded trailer weight, otherwise the trailer can develop an undesirable sway at towing speeds, or the rear of the towing vehicle can be overloaded. Read the “Tongue Weight” information in Section 4.

The load distribution must be such that no component part of the trailer is loaded beyond its rating. You must consider the rating of the tires, wheels, and axles. For tandem and triple axel trailers, you must make sure that the front-to-rear load distribution does not result in overloading any axle.

Towing stability also depends on keeping the center of gravity as low as possible. Load heavy items on the floor and over the axles. When loading additional items, be sure to maintain even side-to-side weight distribution and proper tongue weight. The total weight of the trailer and its contents must never exceed the total weight rating of the trailer (Gross Vehicle Weight Rating, or “GVWR”).

Do not transport people, containers of hazardous substances, or flammable liquids. The exception is fuel in the tank of vehicles or equipment being hauled.

 WARNING	 WARNING
Do not transport flammable, explosive, poisonous or other dangerous materials on your trailer. The exception is fuel in the tank of a vehicle or equipment being hauled.	Do not transport people on your trailer. Besides putting their lives at risk, the transport of people on a trailer is illegal.

Loading and Unloading

Loading Trailer

Prepare Trailer for Loading

1. Inspect the floor of the trailer.
2. Inspect the tie down rings and track system for damage, looseness or signs of bending before loading the trailer.
3. Park the tow vehicle and trailer on a firm and level surface.
4. Clear the area around the trailer.

WARNING

Damaged or loose tie down rings or track can break, allowing cargo to become loose.

Loose cargo can shift the center of gravity, and result in loss of control of the trailer.

Inspect and test tie downs and track before loading cargo.

Do not use a damaged or loose tie downs or track to secure cargo.

Loading a Rigid Deck Trailer

1. Couple the trailer to the tow vehicle.
2. Lower rear stabilizers (if equipped) or place blocking under rear of trailer so the weight of the cargo does not raise the front of the trailer during loading.
3. Remove ramps from storage position and secure to rear of trailer. Adjust ramp position to align with equipment tires or tracks.
4. Load the cargo on trailer with approximately 60% of the cargo in the front half of the trailer.
5. Secure the load to the trailer using appropriate straps, chains, and tensioning devices. Refer to www.fmcsa.dot.gov for regulations regarding cargo securement rules.
6. Remove ramps and place in storage position.
7. Secure ramps to trailer.
8. Raise rear stabilizers (if equipped) or remove blocking under rear of trailer.

WARNING

Trailer must be coupled to tow vehicle before loading trailer.

Loading and Unloading

Loading a Rigid Deck Trailer

CAUTION

Use a safe lifting procedure to avoid injury when handling ramps.

WARNING

Load can suddenly move or topple, which can result in death or serious injury.

Do not load or unload trailer unless coupled to tow vehicle and is on a firm and level surface.

NOTICE

Ramps are not rated for load bearing capacity. They will NOT support the load bearing capacity of the trailer.

Do not overload ramps.

Loading a Tilt Deck Trailer

A tilt deck trailer may be equipped with a manual or a hydraulic tilt deck.

Manual Tilt Trailers

1. Couple the trailer to the tow vehicle.
2. Release deck latch pin to pivot trailer deck for loading.
3. Load the cargo on trailer with approximately 60% of the cargo in the front half of the trailer. Deck will pivot down into the driving position as the cargo is moved forward on the deck.
4. Extend the deck catch pin into the deck to lock the deck into the driving position. Verify the catch engages the hole in the pivoting deck.
5. Secure the load to the trailer using appropriate straps, chains, and tensioning devices. Refer to www.fmcsa.dot.gov for regulations regarding cargo securement rules.

Loading and Unloading

Manual Tilt Trailers

WARNING

Trailer must be coupled to tow vehicle before loading trailer

WARNING

An unlocked pivoting deck can result in loss of cargo or loss of control of the trailer, which can result in death or serious injury.

Before towing the trailer:

- Lock the pivoting deck in the driving position.
- Verify that the catch engages the hole in the pivoting deck.

WARNING

Do not transport flammable, explosive, poisonous or other dangerous materials on your trailer.

The exception is fuel in the tank of a vehicle or equipment being hauled.

Hydraulic Tilt Trailer

1. Couple the trailer to the tow vehicle.
2. Read and understand the hoist operating procedure before operating the tilt deck.
3. Locate the tilt deck controller. Position yourself in a safe location clear of the tilt deck.
4. Press and hold button to raise the tilt deck. Release the button when the rear of the tilt deck touches the ground.
5. Load the cargo on trailer with approximately 60% of the cargo in the front half of the trailer.
6. Secure cargo to prevent movement.
7. Press and hold button to lower the tilt deck. Release the button when the tilt deck is in the driving position.
8. Secure the load to the trailer using appropriate straps, chains and tensioning devices. Refer to www.fmcsa.dot.gov for regulations regarding cargo securement rules.
9. Stow controller.

WARNING

Trailer must be coupled to tow vehicle before loading trailer

WARNING

Shifting cargo can result in loss of control of the trailer and can lead to death or serious injury.

Tie down all loads with proper sized fasteners, chains, straps, etc.

Loading and Unloading

Unload Trailer

Unload Manual Tilt Trailer

1. Couple the trailer to the tow vehicle.
2. Park the tow vehicle and trailer on a firm and level surface.
3. Clear the area around the trailer.
4. Remove chains, straps and tensioning devices.
5. Release deck latch pin to pivot trailer deck for unloading.
6. Carefully move cargo toward rear of trailer. Deck will pivot down into the unload position as the cargo is moved rearward on the deck.
7. Pivot deck back to the driving position and extend the deck catch pin to lock the deck. Verify the catch engages the hole in the pivoting deck.

 WARNING	 WARNING
Trailer must be coupled to tow vehicle before unloading trailer	An unlocked pivoting deck can result in loss of cargo or loss of control of the trailer, which can result in death or serious injury. Before towing the trailer: • Lock the pivoting deck in the driving position. • Verify that the catch engages the hole in the pivoting deck.

Unload Hydraulic Tilt Trailer

1. Couple the trailer to the tow vehicle.
2. Park the tow vehicle and trailer on a firm and level surface.
3. Clear the area around the trailer.
4. Remove chains, straps and tensioning devices.
5. Read and understand the hoist operating procedure before operating the tilt deck.
6. Locate the tilt deck controller. Position yourself in a safe location clear of the tilt deck.
7. Press and hold button to raise the tilt deck. Release the button when the rear of the tilt deck touches the ground.
8. Unload the cargo from trailer.

Loading and Unloading

Unload Hydraulic Tilt Trailer

9. Press and hold button to lower the tilt deck. Release the button when the tilt deck is in the driving position.
10. Stow controller.

WARNING

Trailer must be coupled to tow vehicle before loading trailer

Hydraulic Components

Do not alter or substitute and hydraulic components on the trailer. The hydraulic system is designed with each component being compatible with the safe and reliable operation of the hydraulic system. **Under no circumstances should you alter the hydraulic pressure or flow rate in the hydraulic system.**

Always have the hydraulic system repaired or maintained by a qualified technician.

DANGER

Crushing hazard.

An altered or component substituted hydraulic system may malfunction, resulting in the tilt deck falling without warning.

NEVER alter or substitute any hydraulic system component.

Securing Cargo

Refer to www.fmcsa.dot.gov for regulations regarding cargo securement rule.

WARNING

Shifting cargo can result in loss of control of the trailer and can lead to death or serious injury.

Tie down all loads with proper sized fasteners, chains, straps, etc.

Pre-Tow Checklist

Pre-Tow Checklist

Before towing, double-check all these items:

- Tires, wheels, and lug nuts. See “Breaking in A New Trailer” section of this manual.
- Tire Pressure. Inflate tires on trailer and tow vehicle to the pressure stated on the Certification / VIN label.
- Coupler secured and locked. See “Coupling to Tow Vehicle” section of this manual.
- Safety chains properly rigged to tow vehicle, not to hitch or ball. See “Coupling to Tow Vehicle” section of this manual.
- Test Tail, Stop, and Turn Lights.
- Test trailer brakes.
- Safety breakaway lanyard fastened to tow vehicle, not to safety chains. See “Coupling To Tow Vehicle” section of this manual.
- Cargo properly loaded, balanced, and tied down. See the appropriate “Loading and Unloading” section of this manual.
- Tongue weight and weight distribution set-up.
- Ramps secured for travel.
- Fire extinguisher.
- Flares and reflectors.

Make Regular Stops

After each 50 miles, or one hour of towing, stop and check the following items:

- Coupler secured.
- Safety chains are fastened and not dragging.
 - Cargo secured.

Breaking In a New Trailer

Retighten Lugs at First 10, 25, and 50 Miles

Wheel lugs can shift and settle quickly after being first assembled, and must be checked after the first 10, 25 and 50 miles of driving. Failure to perform this check may result in a wheel coming loose from the trailer, causing a crash leading to death or serious injury. Improper tightening of the lug nuts or bolts voids the axle warranty.

Refer to the Inspection, Service and Maintenance section of this manual.

WARNING

Lug nuts or bolts are prone to loosen after being first assembled. Death or serious injury can result.

Check lug nuts or bolts for tightness on a new trailer, and after re-mounting a wheel at 10, 25 and 50 miles.

Adjust Brake at First 200 Miles

Brake shoes and drums experience a rapid initial wear. The brakes must be adjusted after the first 200 miles of use, and each 3,000 miles thereafter. Some axles are fitted with a mechanism that will automatically adjust the brake shoes.

Read your axle and brake manual to see if your brakes adjust automatically. If you do not have the axle and brake manual, contact your dealer for assistance.

If your trailer is not fitted with automatically adjusting brakes, the brakes will need to be manually adjusted. See section 9 for instructions.

Breaking In a New Trailer

Synchronizing Brake Systems

Trailer brakes are designed to work in synchronization with the brakes on the tow vehicle. When the tow vehicle and trailer braking systems are synchronized, both braking systems contribute to slowing, and the tongue of the trailer will neither dive nor rise sharply.

To ensure safe brake performance and synchronization, read and follow the axle/brake and the brake controller manufacturers' instructions. If you do not have these instructions, contact your dealer for assistance.

WARNING

If trailer and tow vehicle brakes do not work properly together, death or serious injury can occur.

Road test the brakes in a safe area at no more than 30 m.p.h. before each tow.

Accessories

This section provides some basic information for the safe operation of accessories. You must read and follow these instructions before using the accessory. If you are uncertain whether you have all of the instructions, contact your dealer before operating the accessory.

Accessory Battery

Your trailer may be equipped with an accessory battery that operates the tilt deck.

The battery may be kept charged either by the tow vehicle, by an auxiliary charger or by using an onboard battery maintainer/charger (if equipped). If the trailer is used daily, it is recommended that the battery charger be plugged in after each day's use. The battery may be located in a tongue mounted battery box or a side mounted box.

If the battery is not fully charged, the hydraulic pump will lose pressure which may cause hydraulic fluid to flow back into the hydraulic reservoir, overfilling the reservoir and ejecting fluid into the battery box.

WARNING

If trailer and tow vehicle brakes do not work properly together, death or serious injury can occur.

Road test the brakes in a safe area at no more than 30 m.p.h. before each tow.

Inspection Service and Maintenance

Inspection Service and Maintenance Summary Charts

You must inspect, maintain and service your trailer regularly to insure safe and reliable operation. If you cannot or are unsure how to perform the items listed here, have your dealer do them. Note: In addition to this manual, also check the relevant component manufacturer's manual.

Inspection And Service Before Each Tow		
Item	Inspection/Service	Notes
Breakaway Brakes • Electric • Hydraulic	Check operation. Check operation.	
Breakaway Battery	Fully charged, connections clean.	
Brakes • Electric • Surge	Check operation. Check operation. Check master cylinder level.	
Shoes And Drums	Adjust	
Safety Chains and Hooks	Check for wear, damage.	
Coupler And Hitch Ball	Check for cracks, pits, and flats. Replace w/ ball and coupler having trailer GVW Rating. Grease. Check locking device & replace when worn.	
Ring And Pintle	Check for cracks, pits, and flats. Replace w/ ring and pintle having trailer GVW Rating. Grease. Check locking device & replace when worn.	
Tires	Check tire pressure when cold. Inflate as needed. Check for damage.	

Wheels - Lug Nuts Or Bolts & Hub	Check for tightness. Tighten. For new and remounted wheels, check torque after first 10, 25 & 50 miles of driving and after any impact.	
----------------------------------	--	--

Inspection And Service Every Month		
Item	Inspection / Service	Notes
Lubrication	Lubricate tilt deck pivot points (if equipped). Lubricate hydraulic cylinder ends (if equipped).	
Inspection and Service Every 6 Months or 6,000 Miles		
Item	Inspection/Service	Notes
Brakes, electric • Magnet • Controller (in tow vehicle)	Check wear and current draw. Check power output (amperage) and modulation.	
Tires	Inspect tread and sidewalls thoroughly. Replace tire when treads are worn, when sidewall has a bulge, or sidewall is worn. Rotate every 5,000 Miles.	
Brakes • Electric • Surge	Check Operation. Check Operation. Check Master Cylinder Level.	
Brake Shoes And Drums	Adjust	
Safety Chains & Hooks	Check for wear, damage.	
Coupler And Hitch Ball	Check for cracks, pits, and flats. Replace w/ ball and coupler having trailer GVW Rating. Grease. Check locking device and replace when worn.	

Ring And Pintle	Check for cracks, pits, and flats. Replace w/ ring and pintle having trailer GVW Rating. Grease. Check locking device & replace when worn.	
-----------------	---	--

Inspection And Service Every Year or 12,000 Miles		
Item	Inspection/Service	Notes
Brakes, all types. Shoes and Drums	Check for scoring and wear. Replace per manufacturer's specifications.	
Jack, Drop-leg (if equipped)	Grease gears at top.	
Structure - Frame Members - Welds	Inspect all frame members, bolts & rivets. Repair or replace damaged, worn or broken parts. Inspect all welds. Repair as needed.	
Wheels - Wheel Bearings - Rims	Disassemble / inspect / assemble and repack. Replace promptly if immersed in water. Inspect for cracks & dents. Replace as needed.	
Structure Axle Attachment Bolts	Check BY DEALER	

Inspection Service and Maintenance

Inspection and Service Instructions

To perform many of the inspection and maintenance activities, you must jack up the trailer.

When jacking and using jack stands, place them so as to clear wiring, brake lines, and suspension parts (springs, torsion bars, etc.). Place jacks and jack stands under the outer frame rail to which the axles are attached.

 WARNING	 WARNING
Worn or broken suspension parts can cause loss of control and injury may result. Have trailer professionally inspected annually and after any impact.	Crushing hazard. The tow vehicle and trailer could be inadvertently moved while a person is under the trailer. The tow vehicle engine must be off, ignition key removed, and parking brakes set before entering the area under the trailer.

 WARNING
Never go under trailer unless it is on firm and level ground and resting on properly placed and secured jack stands.

Trailer Structure

Wash the trailer as needed with a power washer and a detergent solution.

Fasteners and Frame Members

Inspect all fasteners and structural frame members for bending and other damage, cracks, or failure. Repair or replace any damaged fastener and repair the frame member. If you have any questions about the condition or method of repair of fasteners or frame members, get the recommendation of, or have the repair done by your dealer.

 WARNING
Broken or damaged fasteners can cause injury or damage to trailer and contents. Inspect for and repair all damaged parts at least once a year.

Inspection Service and Maintenance

Welds

All welds can crack or fail when subjected to heavy loads or movement of cargo that was not properly secured. Any time that you know or suspect that the trailer has been subjected to heavy loads or movement of cargo, immediately inspect the welds and fasteners for damage. To prevent severe damage to your trailer, inspect all of the welds for cracks or failure at least once a year. If a weld failure is detected, contact your dealer.

 WARNING	 WARNING
Do not attempt to repair a cracked or broken weld unless you have the skills and equipment to make the repair. Improper weld repair will lead to early failure of the trailer structure and serious injury or death. See your dealer for weld repairs.	Broken or damaged welds can cause injury or damage to trailer and contents. Inspect for and repair all damaged parts at least once a year.

Trailer Brakes- Electric

Brake Discs, Shoes, and Drums

Properly functioning brake shoes and drums are essential to ensure safety. You must have your dealer inspect these components at least once per year, or each 12,000 miles. Brake adjustment is not covered under the axle warranty.

The brake shoes must be adjusted after the first 200 miles of use, and each 3,000 miles thereafter. Most axles are fitted with a brake mechanism that will automatically adjust the brake shoes when the trailer is “hard braked” from a rearward direction. Trailer disc brakes are self-adjusting and do not need to be periodically adjusted. Using pads or shoes without enough brake lining material can result in brake damage, create excessive heat and potentially cause the loss of braking capacity. Read your axle and brake manual to see how to adjust your brakes. If you do not have this manual, contact your dealer for assistance.

Inspection Service and Maintenance

Manually Adjusting Brake Shoes

Some braking systems are not automatically adjusted. These brakes require manual adjustment. The following steps apply to adjust most manually adjustable brakes.

Read your axle and brake manual to see how to adjust your brakes. If you do not have this manual, contact your dealer for assistance.

1. Jack up the trailer and secure it on adequate capacity jack stands.
2. Be sure the wheel and brake drum rotate freely.
3. Remove the adjusting-hole cover from the adjusting slot on the bottom of the brake backing plate.
4. With a screwdriver or standard adjusting tool, rotate the star wheel of the adjuster assembly to expand the brake shoes. Adjust the brake shoes out until the pressure of the linings against the drum makes the wheel very difficult to turn. Note: Your trailer maybe equipped with drop spindle axles. See axle manual for your axle type. You will need a modified adjusting tool for adjusting the brakes in these axles.
5. Rotate the star wheel in the opposite direction until the wheel turns freely with a slight drag.
6. Replace the adjusting-hole cover.
7. Repeat the above procedure on all brakes.
8. Lower the trailer to the ground.

Electric Brakes

Two different types of electric brakes may be present on the trailer: an emergency electric breakaway system, which acts only if the trailer comes loose from the hitch and the breakaway pin is pulled. The other brake is an electric braking system that acts whenever the brakes of the tow vehicle are applied.

Breakaway Battery - This battery supplies the power to operate the trailer brakes if the trailer uncouples from the tow vehicle. Be sure to check, maintain and replace the battery according to the battery manufacturer's instructions. Your trailer may use the hydraulic system battery to operate the breakaway brakes.

Breakaway Switch - This switch engages the electric brakes if the trailer uncouples from the tow vehicle. To check for proper functioning of the switch, battery and brakes, you must pull the pin from the switch and confirm that the brakes apply to each wheel. You can do this by trying to pull the trailer with the tow vehicle, after pulling the pin. The trailer brakes may not lock, but you will notice that a greater force is needed to pull the trailer.

 WARNING	 WARNING
Extreme cold weather can degrade battery performance and cause brakes to not operate properly.	If electric breakaway brakes do not operate when trailer is uncoupled from the tow vehicle, death or serious injury can occur.
Check battery charge level before towing	Check emergency breakaway brake system before each tow.

Inspection Service and Maintenance

Tow Vehicle Operated Electric Brakes

The electric brakes that operate in conjunction with the tow vehicle brakes must be “synchronized” so that braking is properly distributed to the tow vehicle brakes and the trailer brakes. For proper operation and synchronization, read and follow the axle/brake and the brake controller manufacturers’ instructions. If you do not have these instructions, contact your dealer for assistance.

Electric Brake Magnets

To make certain an electrically operated braking system will function properly, you must have your dealer inspect the magnets at least once a year, or each 12,000 miles. See the brake manual for wear and current inspection instructions.

Trailer Brakes- Surge (If Equipped)

Surge Brake Master Cylinder

Check fluid level prior to using the trailer. The master cylinder is normally located on the tongue of the trailer. The fluid level must be maintained at full mark on reservoir. Check with your dealer for the type of brake fluid used in the brake system.

Hydraulic Surge Brake

Before each tow, perform the following steps:

1. Check that the brake master cylinder level as instructed above. Check for leaks and repair as required.
2. Examine the actuator for wear, bent parts, corroded/ seized parts, or other damage. Have the affected components replaced with genuine service parts.
3. Check to determine that the actuator mounting bolts are tightened to the manufacturer’s specification.
4. Test the actuator and brake function as described in the Coupling To Tow Vehicle section of this manual. Actuator travel over one inch indicates that the brakes need adjustment (or that the actuator has been structurally damaged). Actuator travel is the distance the coupler case assembly moves to the outer case during braking. Adjust the brakes following the instructions given in the brake installation manual. Failure to adjust brakes will result in loss of braking.
5. Before storage or after extended use, apply motor oil to the coupler components and the internal rollers to keep them moving freely and to prevent corrosion.
6. See the surge brake manufacturer’s manual for other inspection and maintenance activities. If you do not have this manual, contact your dealer for assistance.

Inspection Service and Maintenance

Master Cylinder Bleeding

Remove the master cylinder's cap and fill the reservoir to three quarters full with DOT-3 or DOT 4 brake fluid. DO NOT allow brake fluid to contact painted surfaces since it will damage the finish. Wipe up any spills immediately and wash the area with water.

Bleed the brake system manually or with a pressure bleeder. Pressure bleeding equipment simplifies the process and is available at most automotive supply stores. Use the instructions provided with the pressure bleeder. If you chose to manually bleed the system, an assistant is required. Use the following steps to manually bleed the brake system:

1. Disconnect the trailer from the tow vehicle and jack the trailer's tongue until it is horizontal. Make sure that the wheels are blocked so that the trailer will not roll away.
2. Fill the master cylinder with correct fluid.
3. Install a bleeder hose on the bleeder screw of the farthest wheel cylinder from the actuator. If the trailer has multiple axles, bleed the rear axle first. Submerge the other end of the hose in a glass container of brake fluid, so that air bubbles can be observed.
4. Open the bleeder screw and have an assistant stroke (but not release) the actuator. Brake fluid and/or air bubbles will flow into the jar. Close the bleeder screw. The helper can then allow the actuator to return to its rest position.
5. Repeat the process until no more bubbles are released with the stroke. Air trapped in the brake lines will greatly reduce your braking efficiency. Be sure to close the bleeder screw securely when the cylinder is fully bled. Repeat the bleeding operation at each wheel cylinder. During the bleeding process, replenish the master cylinder reservoir with fresh brake fluid so that the level does not fall below half full. This will ensure that no air is drawn into the system.
6. After all brakes have been bled, refill the master cylinder before operating. Be sure to install the master cylinder filler cap.

WARNING

Use only fresh brake fluid from a sealed container. DO NOT reuse fluid. After filling and bleeding, refill the actuator.

Failure to maintain an adequate fluid level may cause brake failure.

Inspection Service and Maintenance

Trailer Connection to Tow Vehicle

Coupler and Ball

Before each tow, coat the ball with a thin layer of automotive bearing grease to reduce wear and ensure proper operation; and check the locking device that secures the coupler to the ball for proper operation.

See the coupler manufacturer's manual for other inspection and maintenance procedures. If you do not have this manual, contact your dealer for assistance.

If you see or feel evidence of wear, such as flat spots, deformations, pitting or corrosion, on the ball or coupler, immediately have your dealer inspect them to determine the proper action to prevent possible failure of the ball and coupler system. All bent or broken coupler parts must be replaced before towing the trailer.

The coupler latch lever must be able to rotate freely and automatically snap into the latched position. Oil the pivot points, sliding surfaces, and spring ends with SAE 30W motor oil. Keep the ball pocket and latch mechanism clean. Dirt or contamination can prevent proper operation of the latching mechanism.

When replacing a ball, the load rating must match or exceed the GVWR of the trailer.

Ring and Pintle

Before each tow, coat the ring with a thin layer of automotive bearing grease to reduce wear and ensure proper operation; and check the locking device that secures the pintle to the ring for proper operation.

See the pintle manufacturer's manual for other inspection and maintenance activities. If you do not have this manual, contact your dealer for assistance.

If you see or feel evidence of wear, such as flat spots, deformations, pitting or corrosion, on the ring or pintle, immediately have your dealer inspect them to determine the proper action to prevent possible failure of the ring and pintle system. All bent or broken coupler parts must be replaced before towing the trailer.

The pintle handle lever must be able to rotate freely and automatically snap into the latched position. Oil the pivot points, sliding surfaces, and spring ends with SAE 30W motor oil. Keep the ring pocket and latch mechanism clean. Dirt or contamination can prevent proper operation of the latching mechanism.

When replacing a ring, the load rating must match or exceed the GVWR of the trailer.

Landing Leg or Jack

If a grease fitting is present, use a grease gun to lubricate the jack mechanism. Grease the gears in the top of hand-cranked jacks once a year, by removing the top of the jack and pumping or hand packing grease into the gears.

Inspection Service and Maintenance

Lights and Signals

Before each tow, check all trailer lights for proper operation.

WARNING

To avoid risk of collisions, all lights must work.

Wheel Rims

If the trailer has been struck, or impacted, on or near the wheels, or if the trailer has struck a curb, inspect the rims for damage. Replace any damaged wheel. Inspect the wheels for damage every year, even if no obvious impact has occurred.

Tires

Before each tow, check the tire pressure to make sure it is at the level indicated on the tire sidewall or VIN label. Tire pressure must be checked while the tire is cold. Do not check tire pressure immediately after towing the trailer. Allow at least three hours for the tires to cool if the trailer has been towed for as much as one mile. Tires can lose air over a period of time.

Replace the tire before towing the trailer if the tire treads have less than $2/32$ inch depth or the telltale bands are visible.

A bubble, cut or bulge in a side wall can result in a tire blowout. Inspect both side walls of each tire for any bubble, cut or bulge; and replace a damaged tire before towing the trailer.

If you are storing your trailer for an extended period, make sure the tires are inflated to the maximum rated pressure indicated on the sidewall or VIN label and that you store them in a cool, dry place such as a garage. Use tire covers to protect the tires from the harsh effects of the sun.

Inspection Service and Maintenance

Tires

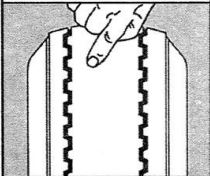
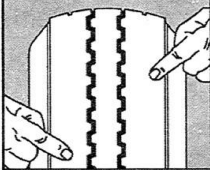
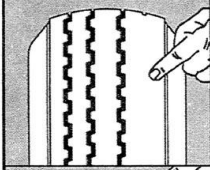
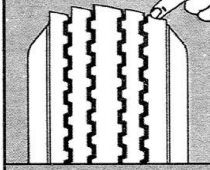
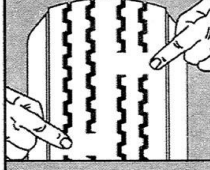
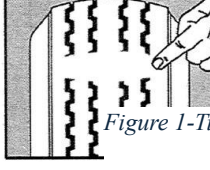
	Condition	Possible Cause	Remedy
	Even Center Wear	Over Inflation	Check & Adjust Pressure When Cold
	Inside & Outside Wear	Under Inflation	Check & Adjust Pressure When Cold
	Smooth, Side Wear - One Side	Loss of Camber or Overloading	Check & Unload As Necessary Have Alignment Checked
	"Feathering" Across The Face	Axle Not Square To Frame or Incorrect Toe In	Square Axles Have Alignment Checked
	Cupping	Loose Bearings or Wheel Balance	Check Bearing Adjustment and Wheel & Tire Balance
	Flat Spots	Wheel Lockup	Adjust Brakes

Figure 1-Tire inspection chart

WARNING

Worn, damaged, or under-inflated tires can cause loss of control, injury, and damage.

Check tires before each tow.

Inspection Service and Maintenance

Wheel Bearings

A loose, worn or damaged wheel bearing is the most common cause of brakes that grab. To check your bearings, jack up the trailer and secure it on adequate capacity jack stands. Check wheels for side-to-side looseness. If the wheels are loose, or spin with a wobble, the bearings must be serviced or replaced.

If your axle(s) are equipped with a grease zerk on the ends of the axle(s), the bearings must be greased every 6 months or 6,000 miles to ensure reliable and safe operation of your trailer.

1. Remove the rubber plug from the axle end.
2. Place grease gun on zerk.
3. Pump grease until new grease begins to appear. Use a different color grease each time so you will know when the new grease begins to appear.
4. Install rubber plug and cap. Repeat for remaining wheel bearings.

If your trailer axle(s) are not equipped with grease zerks, refer to the axle manufacturer's manual for service and maintenance information.

WARNING

Never go under trailer unless it is on firm and level ground and resting on properly placed and secured jack stands.

Lubrication

Lubricate tilt deck pivots and hydraulic cylinder ends every month (if equipped).

Hydraulic Reservoir

Check fluid level prior to towing the trailer. The reservoir is normally located inside the battery box.

The tilt deck must be fully lowered before checking fluid level. The reservoir should be filled to the full mark on the side of the reservoir.

Use a quality hydraulic fluid with anti-wear properties, rust, and oxidation inhibitors. Fluid ejecting from the reservoir could indicate a low battery.

Inspection Service and Maintenance


Lug Nuts or Bolts

Lug nuts or bolts are prone to loosen right after a wheel is mounted to a hub. When driving on a remounted wheel, check to see if the lug nuts or bolts are tight after the first 10, 25 and 50 miles of driving, and before each tow thereafter.

⚠ WARNING	⚠ WARNING
Lug nuts or bolts are prone to loosen after being first assembled. Death or serious injury can result. Check lug nuts or bolts for tightness on a new trailer, and after re-mounting a wheel at 10, 25 and 50 miles.	Metal creep between the wheel rim and lug nuts or bolts can cause rim to loosen. Death or injury can occur if wheel comes off. Tighten lug nuts or bolts before each tow.

Tighten the lug nuts or bolts in three stages to the final torque for the axle size on your trailer, to prevent wheels from coming loose. Tighten each lug nut or bolt in the order shown in the following figure.

Use a calibrated torque wrench to tighten the fasteners. Verify that wheel studs are free of contaminates such as paint or grease, which may result in inaccurate torque readings. Over-tightening will result in breaking the studs or permanently deforming the mounting stud holes in the wheels and will void the axle warranty.

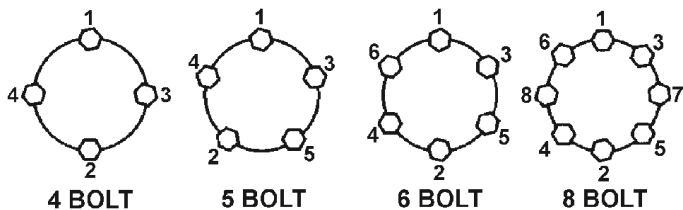

See your axle manufacturers manual or your dealer for wheel nut or bolt torque specifications.

This Page is Intentionally Left Blank



LRG Hand-Pump Operations Manual

LANE Trailer Mfg. Co.

1215 Montana Road

Boone, IA 50036


515-233-1150

www.lanetrailers.com

info@lanetrailers.com

1-515-233-1150

Breakdown of Your LRG Hand-Pump

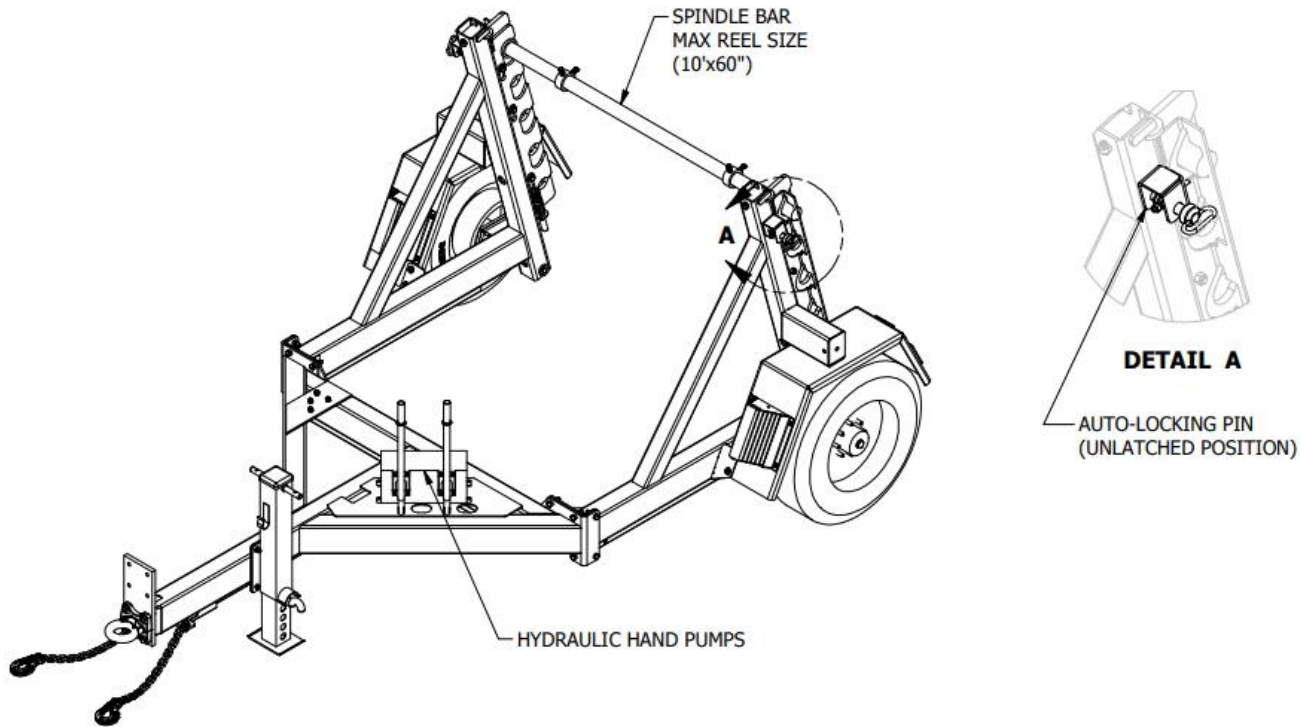

The LRG Hand Pump is composed of two main subsystems. They are the Self-Loading Reel System and the Hand Pumps. The following sections will outline all important functions, parts, and necessary operations information needed to fully utilize your LRG. For any additional questions, information, or replacement parts please contact or visit:

LANE Trailer Mfg. Co.

1215 Montana Road

Boone, IA 50036


515-233-1150

www.lanetrailers.com

info@lanetrailers.com

1-515-233-1150

Operation of Your Hydraulic Hand Pump System

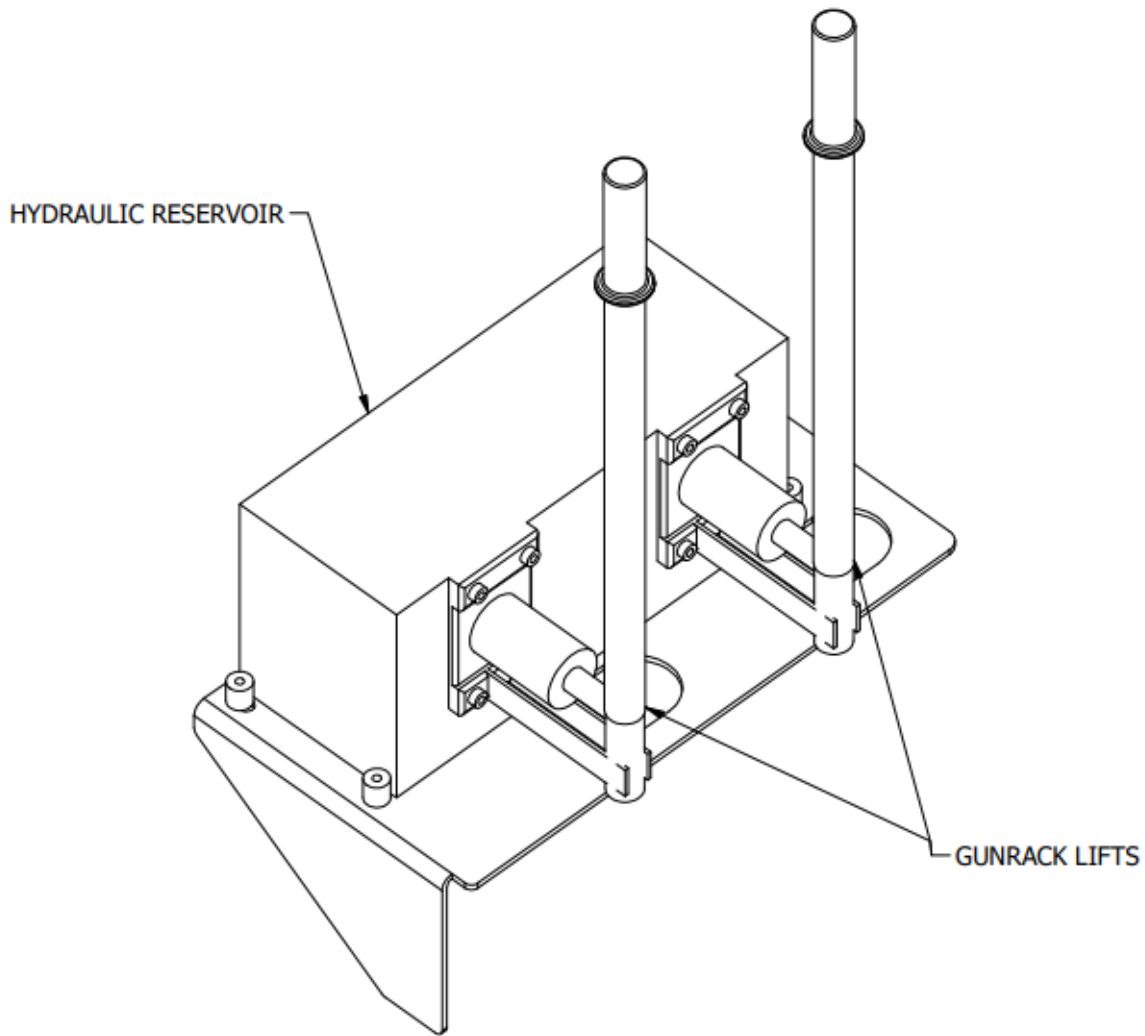


The LRG Hand pump has two main systems contained within it. The Hydraulic Reservoir which contains your hydraulic reservoir with an inlet and drain, and the two gunrack lifts. To operate the gunrack lifts pull down on each handle one at a time in an alternating motion to raise your gunracks. To lower the gunrack release both pressure valves.

Your hydraulic reservoir on your LRG hydraulic power skid is responsible for holding all the necessary hydraulic fluid you will need while operating your LRG hydraulic systems. . Your hydraulic reservoir comes factory installed with an appropriate amount of hydraulic fluid. The hydraulic fluid must be changed based upon the season the outlines are as follows:

Recommended Fluids

1. From: +14° F to +120° F (-10°C to +49° C) please utilize, ISO 22, 32, ATF fluid (Standard)
2. -20° F to +32° F (-29°C to +0° C) please utilize, ISO 15
3. Aviation Oils (MIL-H- 5606 or MIL-H-83283) may be used in prolonged extreme cold climates

Self-Loading Reel System

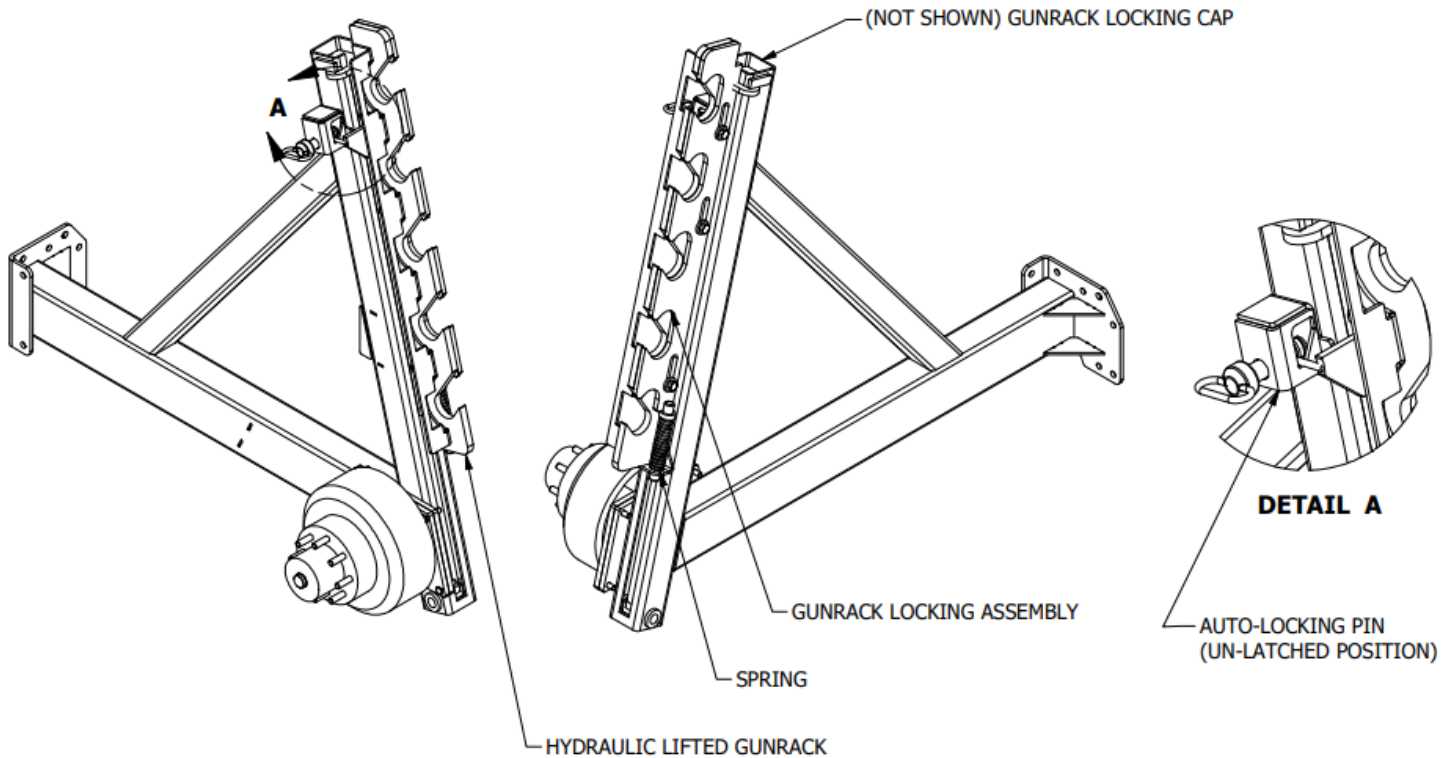

DRIVER SIDE ORIENTATION

PASSENGER SIDE IS MIRRORED

Your LRG comes standard equipped with a self-loading and autolocking reel system. This is to assist with the loading and unloading of reels on your LRG. This section will lay out the proper use and necessary precautions to take when utilizing your autolocking and self-loading reel system.

Steps For operating The Self-Loading Reel System

1. On both sides of trailer pull autolocking pin to unlatched position as shown in DETAIL A.
2. See Operation of Your Hydraulic Hand Pump System to lower gunracks (pg. 106)
3. Loosen collars and remove outer collar on reel
4. Aviation Oils (MIL-H 5606 or MIL-H-83283) may be used in prolonged extreme cold climates.
5. Place reel bar through the reel
6. Push collars against reel and tighten bolt and jam-nut
7. Roll reel and bar into highest gunrack locking assembly
8. Load Reel onto Gunrack
9. Raise Gunracks up
10. Ensure that autolocking pins are locked into place

⚠ CAUTION

Reel bar must always be in gunracks and locked transport position, even while not transporting reel.

This Page is Intentionally Left Blank



Electric Hydraulic Operations Manual

LANE Trailer Mfg. Co.

1215 Montana Road

Boone, IA 50036


515-233-1150

www.lanetrailers.com

info@lanetrailers.com

1-515-233-1150

Breakdown of Your LRG Electric-Hydraulic Trailer

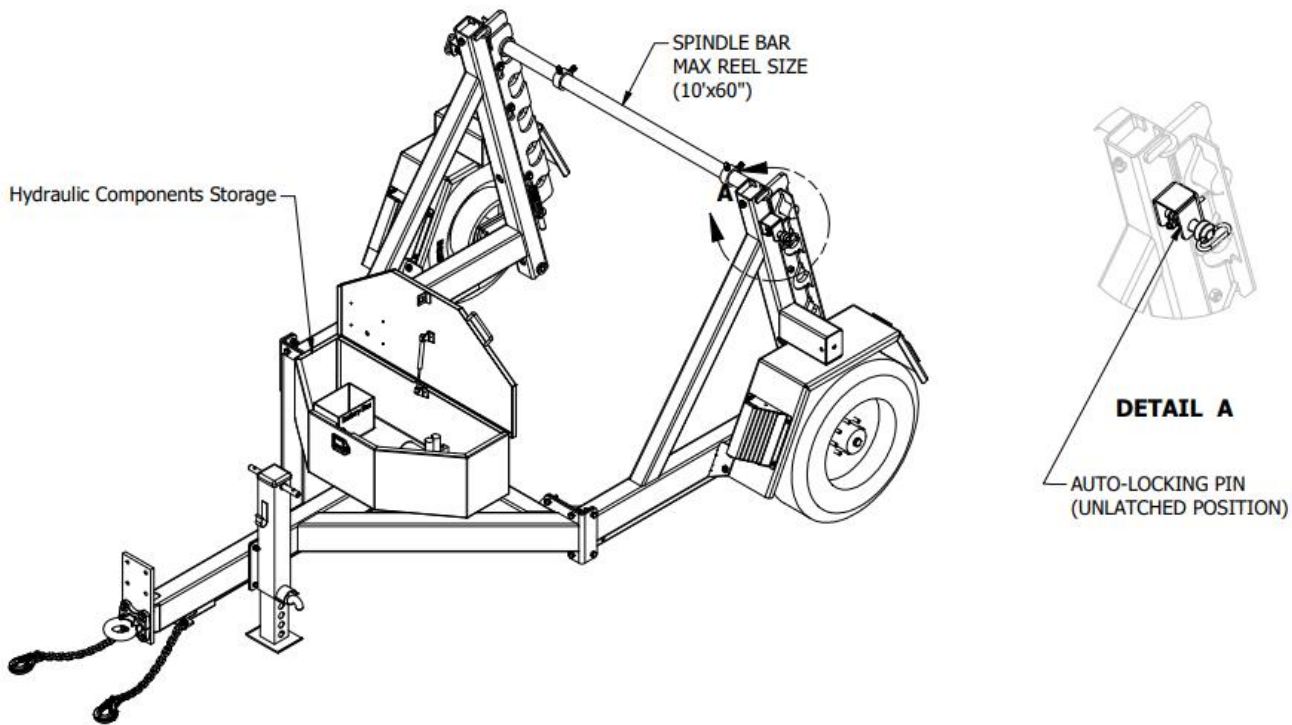

The LRG Electric-Over-Hydraulic system is composed of two main subsystems. They are the Self-Loading Reel System and the Electric-Over-Hydraulic toolbox. The following sections will outline all important functions, parts, and necessary operations information needed to fully utilize your LRG.

Please note that the battery utilized in your LRG's Electric-Over-Hydraulic skid is a Deep cycle marine/rv battery. This battery is additionally hooked up to a solar panel on the lid of your toolbox for recharging purposes. For any additional questions, information, or replacement parts please contact or visit:

LANE Trailer Mfg. Co.

www.lanetrailers.com


1215 Montana Road

info@lanetrailers.com

Boone, IA 50036

515-233-1150

Breakdown of Your Electric-Hydraulic System

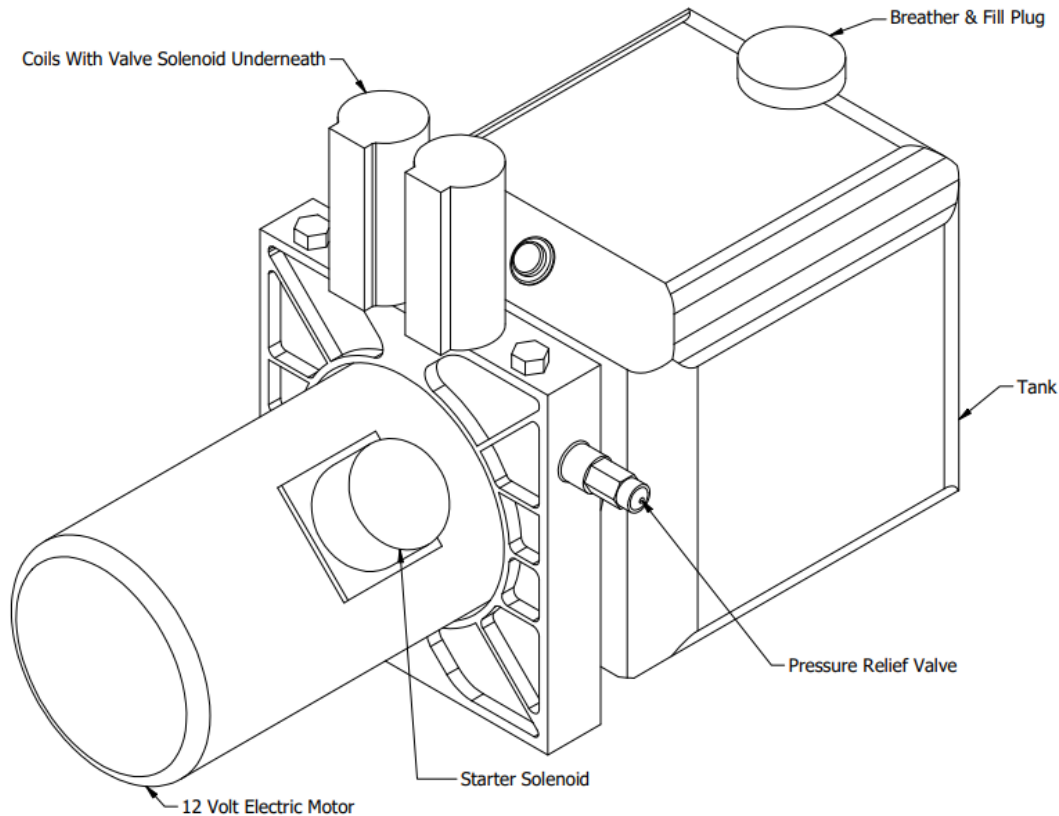

The LRG Electric-Over-Hydraulic-System has four main components contained within it. The Hydraulic Reservoir (Tank) which contains your hydraulic reservoir with an inlet and breather. The 12 Volt Electric Motor which pumps hydraulic fluid through your hydraulic system. The Coils which contain the solenoids underneath are responsible for the lifting and lowering of your LRG's gunracks, and the pressure relief valve which releases your LRG's hydraulic system.

⚠ WARNING

Mixing hydraulic oils will void your warranty.


Operating under low battery voltage may result in damage to power unit.

Your hydraulic reservoir on your LRG electric-hydraulic skid is responsible for holding all the necessary hydraulic fluid you will need while operating your LRG hydraulic systems. Your hydraulic reservoir comes factory installed with an appropriate amount of hydraulic fluid. The hydraulic fluid must be changed based upon the season the outlines are as follows:

Recommended Fluids


1. From: +14° F to +120° F (-10°C to +49° C) please utilize, ISO 22, 32, ATF fluid (Standard)
2. -20° F to +32° F (-29°C to +0° C) please utilize, ISO 15
3. Aviation Oils (MIL-H 5606 or MIL-H-83283) may be used in prolonged extreme cold climates.

Operation of Your Electric-Hydraulic Trailer

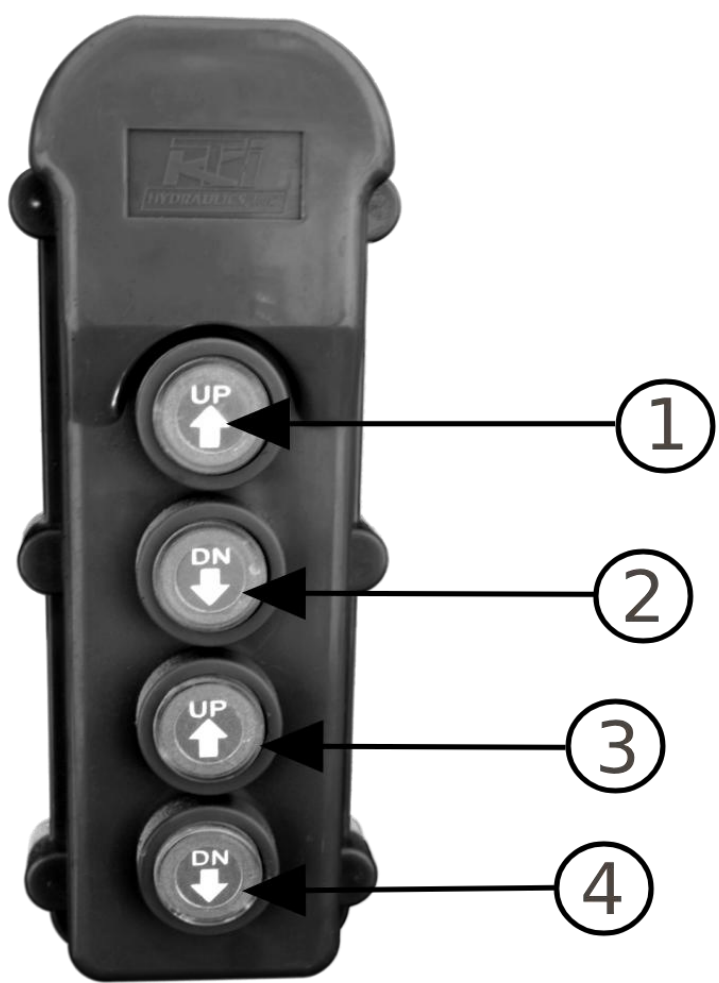

Button #	Function
1	Raise Driver Side Gunrack
2	Lower Driver Side Gunrack
3	Raise Passenger Side Gunrack
4	Lower Passenger Side Gunrack

Self-Loading Reel System

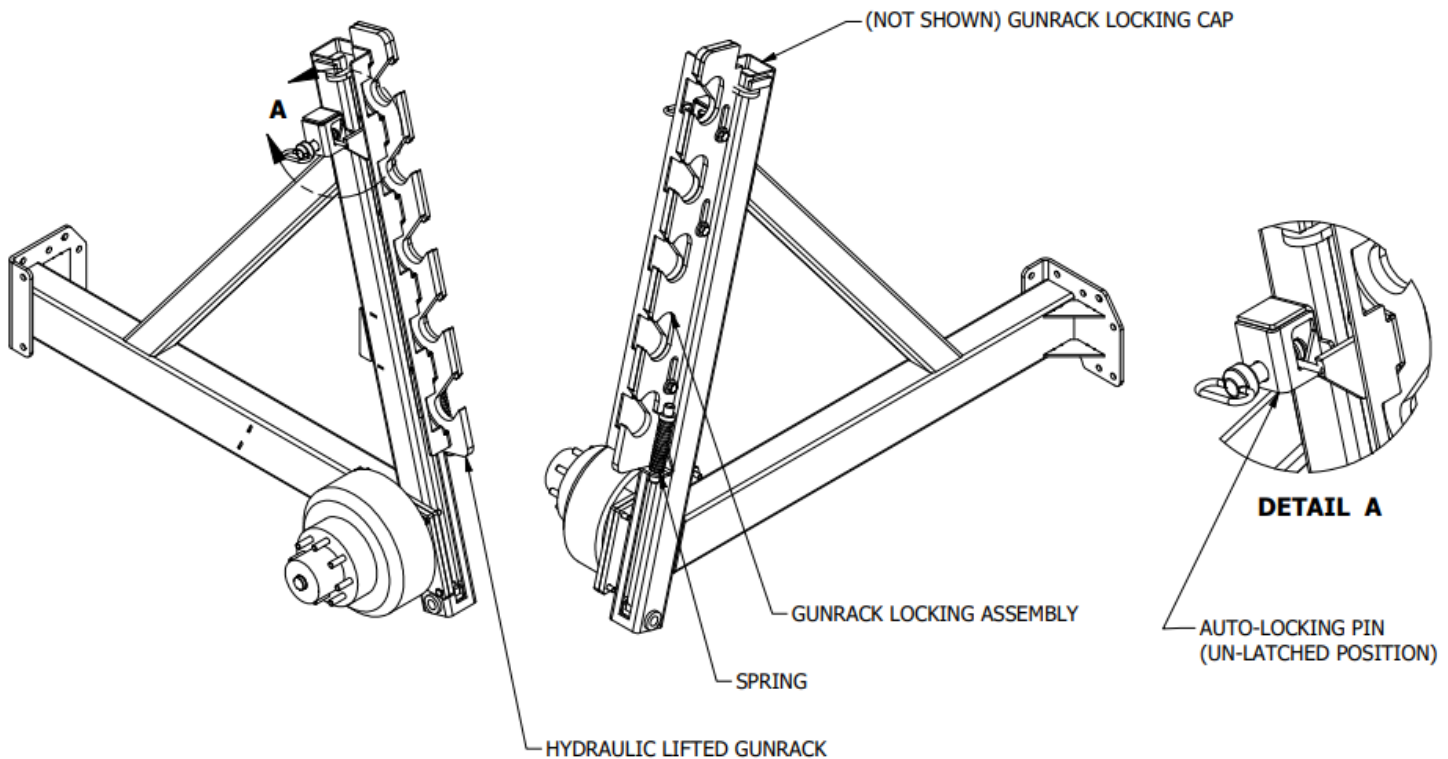

DRIVER SIDE ORIENTATION

PASSENGER SIDE IS MIRRORED

Your LRG comes standard equipped with a self-loading and autolocking reel system. This is to assist with the loading and unloading of reels on your LRG . This section will lay out the proper use and necessary precautions to take when utilizing your autolocking and self-loading reel system.

Steps For operating The Self-Loading Reel System

11. On both sides of trailer pull autolocking pin to unlatched position as shown in DETAIL A.
12. See Operation of Your Hydraulic Hand Pump System to lower gunracks (pg. 106)
13. Loosen collars and remove outer collar on reel
14. Place reel bar through the reel
15. Push collars against reel and tighten bolt and jam-nut
16. Roll reel and bar into highest gunrack locking assembly
17. Load Reel onto Gunrack
18. Raise Gunracks up
19. Ensure that autolocking pins are locked into place

⚠ CAUTION

Reel bar must always be in gunracks and locked transport position, even while not transporting reel.

This Page is Intentionally Left Blank



Retriever/Rewinder Operations Manual

LANE Trailer Mfg. Co.

1215 Montana Road

Boone, IA 50036


515-233-1150

www.lanetrailers.com

info@lanetrailers.com

1-515-233-1150

Breakdown of Your LRG 1010/1008 Retriever

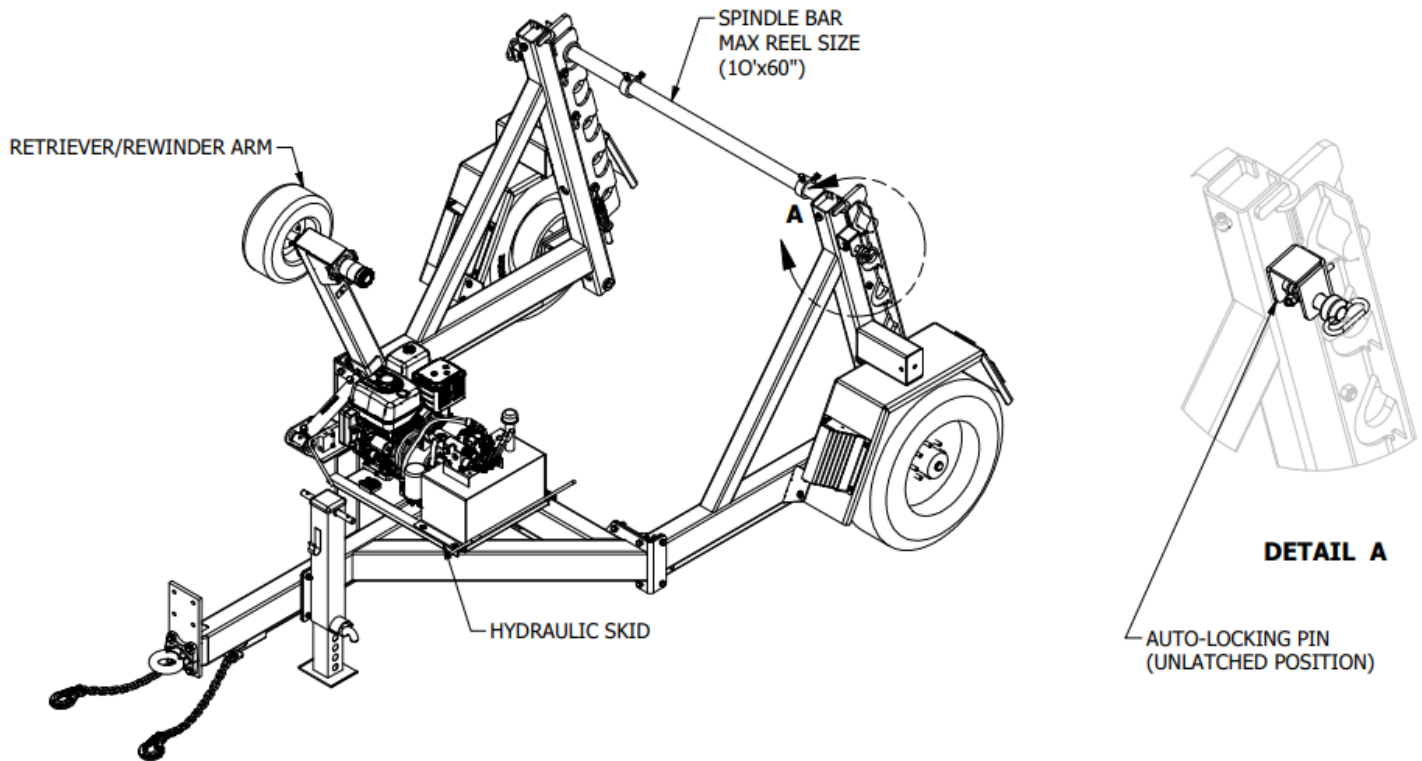

The LRG Retriever/Rewinder is composed of three main subsystems. They are the Self-Loading Reel System, The Retriever/Rewinder arm, and the Hydraulic Skid. The following sections will outline all important functions, parts, and necessary operations information needed to fully utilize your LRG. For any additional questions, information, or replacement parts please contact or visit:

LANE Trailer Mfg. Co.

1215 Montana Road

Boone, IA 50036


515-233-1150

www.lanetrailers.com

info@lanetrailers.com

1-515-233-1150

Breakdown of Your Hydraulic Skid

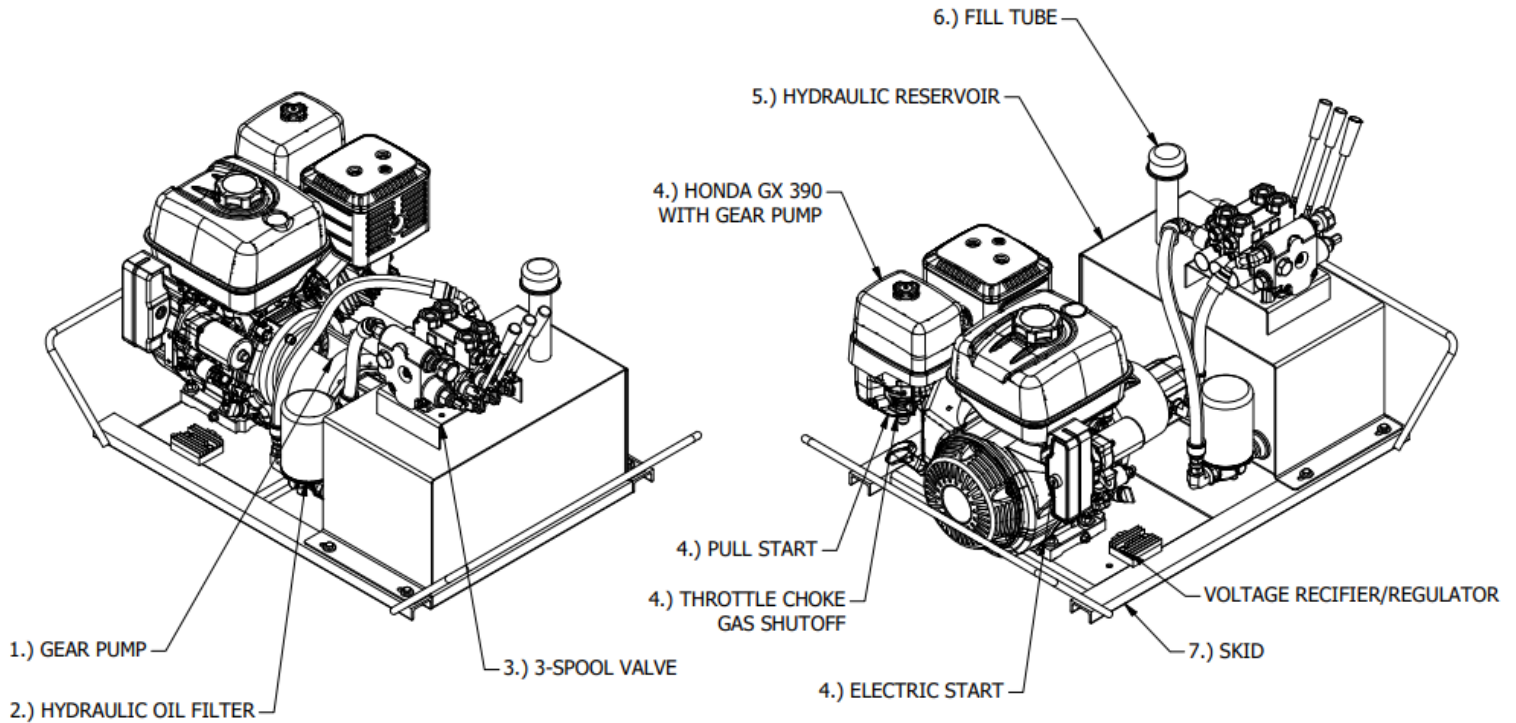

Hydraulic Skid Components

1. Gear Pump
2. Hydraulic Oil Filter. The Hydraulic oil filter is responsible for filtering out any contamination in your hydraulic system to avoid damage to the system and hydraulic components. The filter should be replaced approximately once a year or XX hours of run time.
3. Three Spool Valve – See pg. 99
4. Honda Gx 390- See pg. 96-97
5. Hydraulic Reservoir- See pg. 98
6. Fill Tube- See pg. 98
7. Skid- The skid is the plate that your LRG's hydraulic system's components are mounted on.

Hydraulics Skid

Honda Gx 390

Your Honda Gx 390 comes with a universal Honda Engine Key **Do Not Loose This Key**. The Honda Engine is responsible for powering all hydraulic systems on your LRG. The following steps will lay out how to turn on and operate the Honda Gx 390.

⚠ CAUTION

Engine is HOT while running. Touching the engine while operating may lead to injury.

Running the Engine without oil may cause engine to cease up. Ensure oil is appropriately filled before operating

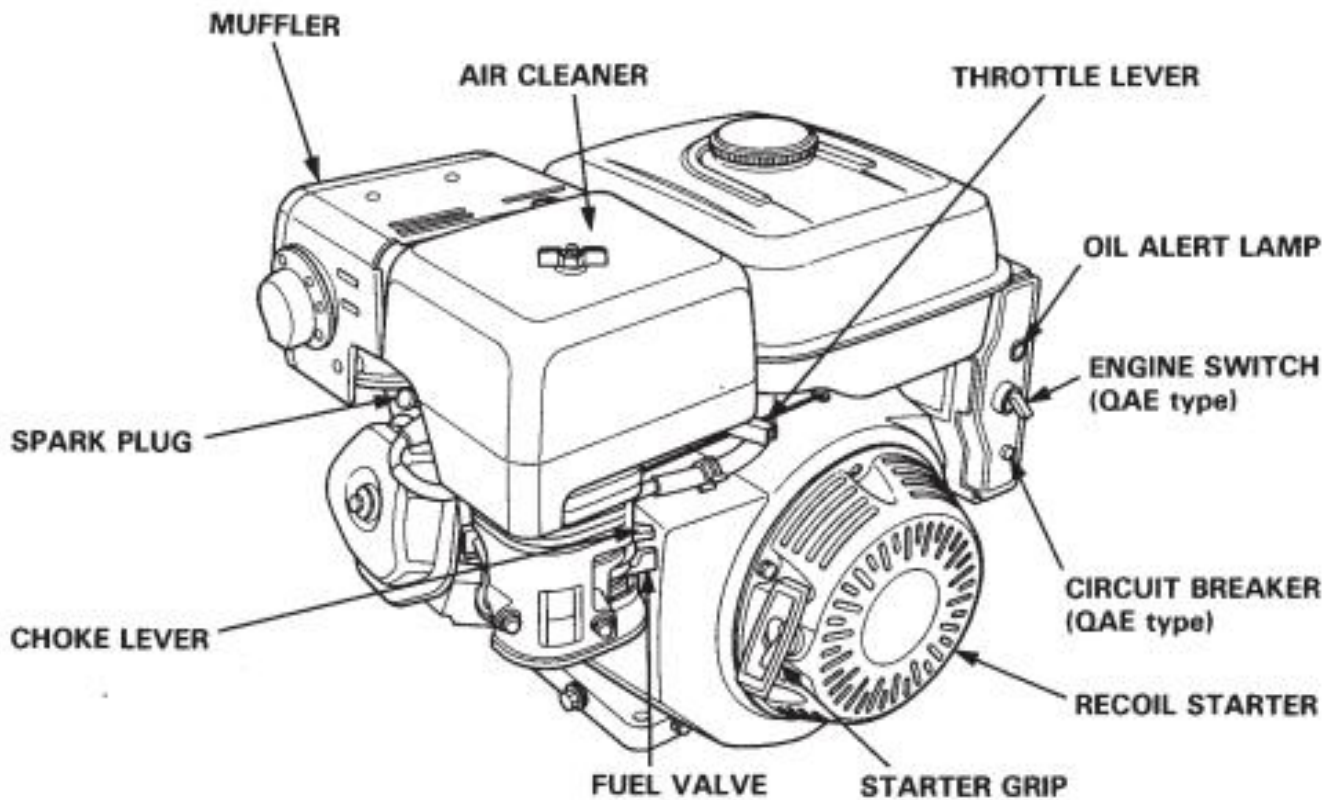


Figure 2- Honda Gx 390 Component Identification

Hydraulics Skid

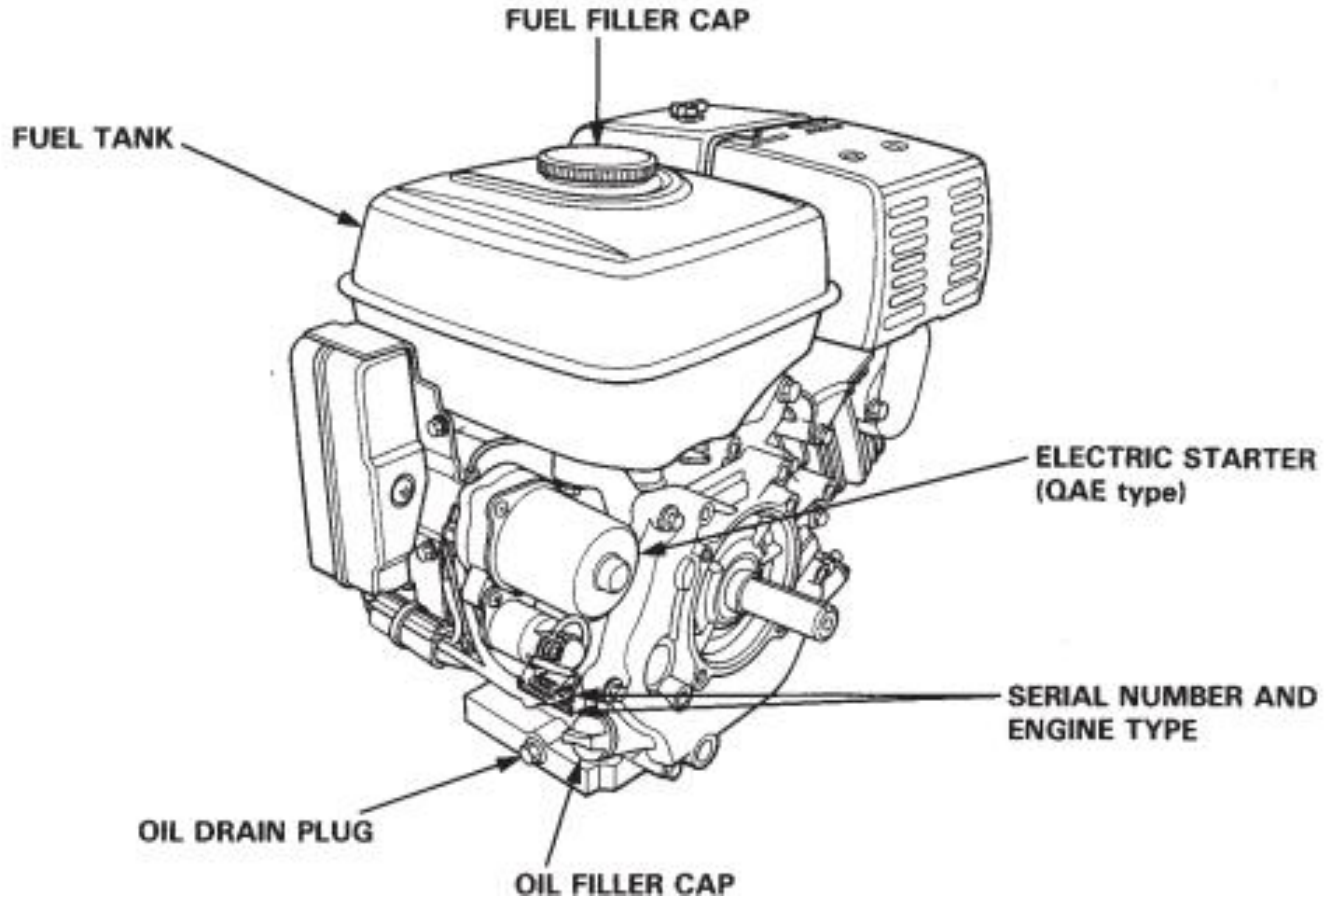


Figure 3- Honda Gx 390 Component Identification

Steps for Operating the Honda Gx 390

1. Ensure that the air filter is inserted and attached.
2. Ensure that the engine is appropriately filled with oil.
3. Ensure that the gas tank is filled appropriately.
4. Insert key into ignition.
5. Turn the key to on position.
6. Ensure that gas lever is flipped to the on position.
7. Engage choke to on position.
8. Pull the starter grip until engine powers on. Or the electric starter via key.
9. Disengage choke after engine powers on.
10. The Honda Gx 390 is now fully operational.

⚠ CAUTION


Ensure that gas lever is flipped to off position when in transit

Failure to turn the gas lever off will result in flooding of the motor.

In the case that the Honda Gx 390 does not power on for any reason turn the key to the off position and repeat steps 4 through 9. For more information view:

<https://cdn.powerequipment.honda.com/engines/pdf/manuals/31ZH9600.pdf>

Breakdown of Your Hydraulic Reservoir

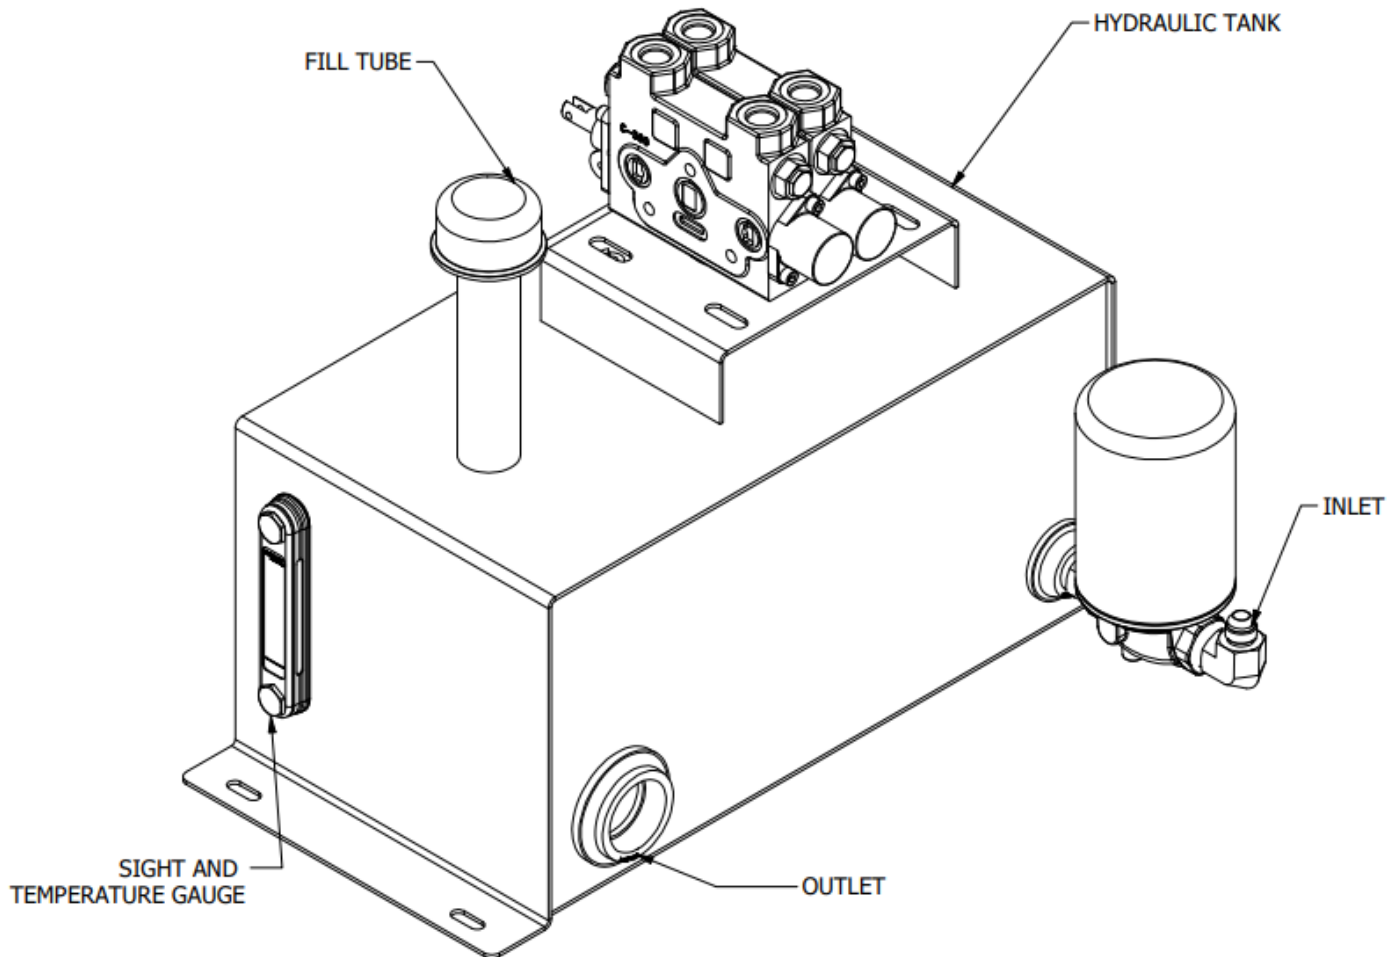


Your hydraulic reservoir on your LRG hydraulic power skid is responsible for holding all the necessary hydraulic fluid you will need while operating your LRG hydraulic systems. Your hydraulic reservoir comes factory installed with an appropriate amount of hydraulic fluid. In the case of needing to replace hydraulic fluid please use:


Lube Tech Super Transmission/ Hydraulic Tractor Fluid

You should not for any reason put any other hydraulic fluid other than Lube Tech Super Transmission/ Hydraulic Tractor Fluid as it may cause damage to your LRG hydraulic system

Breakdown of Your Three Spool Valve

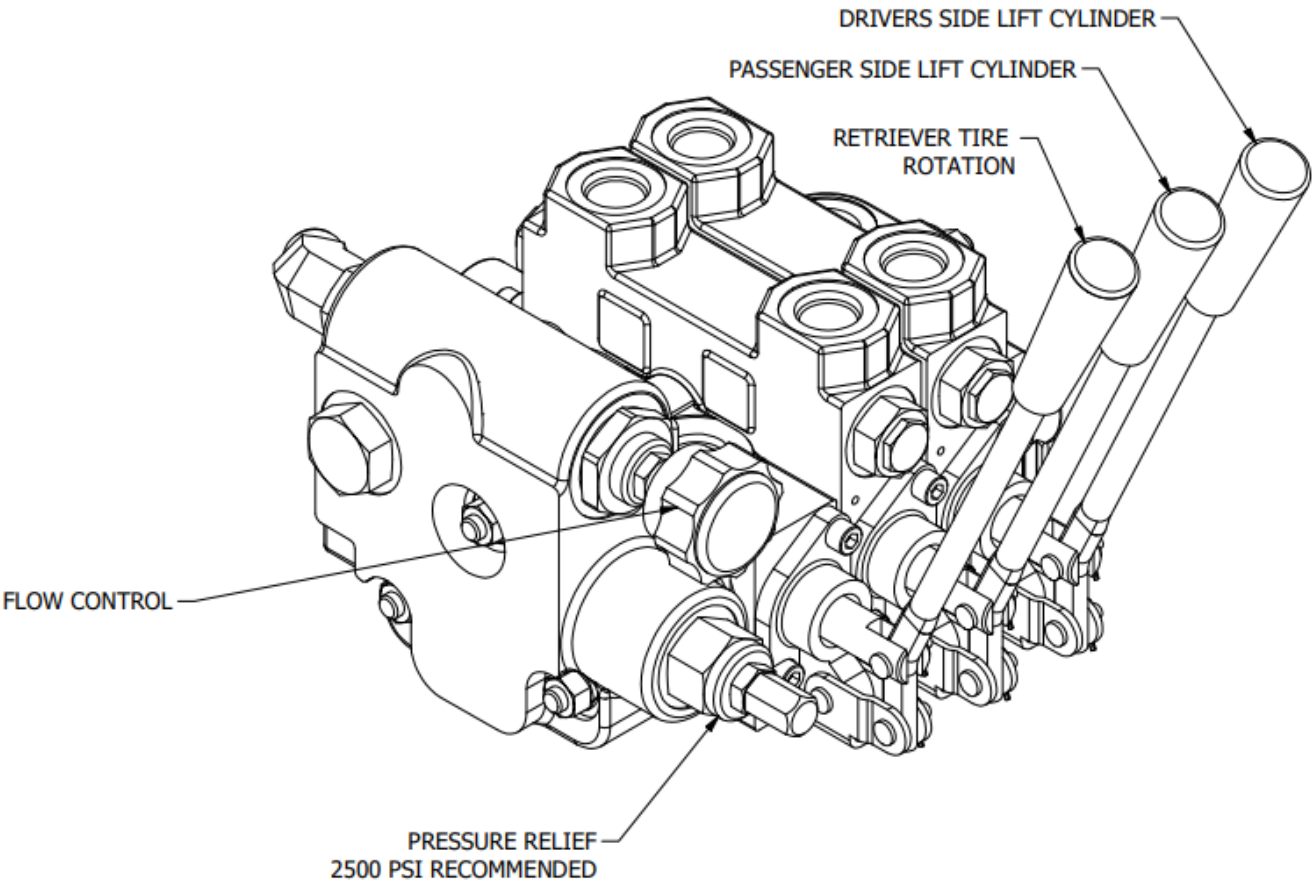

Retriever/Rewinder Arm

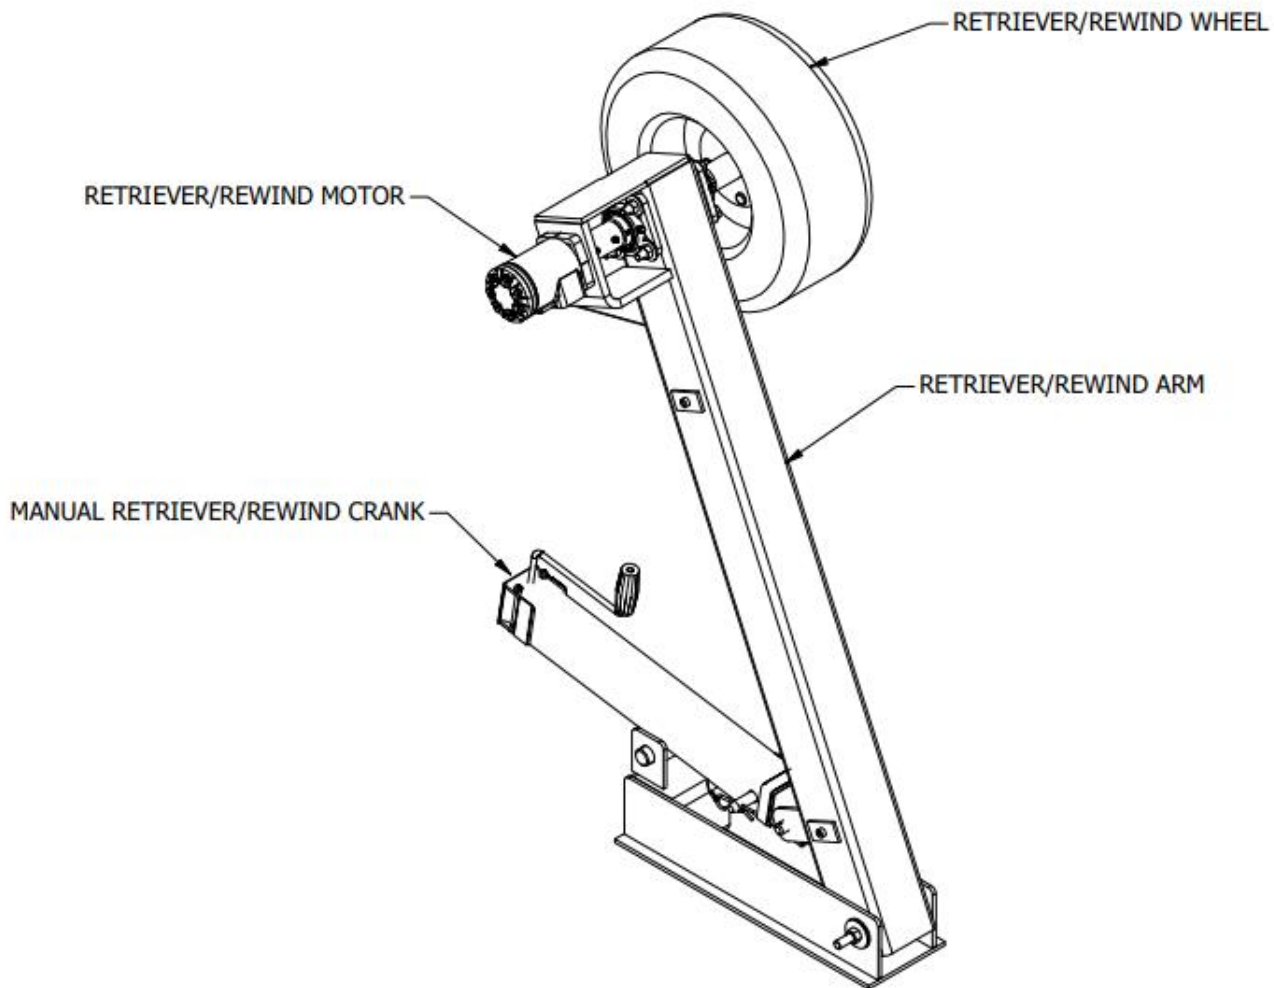

The LRG 1010F's Retriever/Rewind attachment is to assist you with spinning your fiber reel for fiber laying/blowing applications. As shown above there are four main components to your Retriever/Rewinder arm, they are:

4. The manual Retriever/Rewinder crank that is used to manually actuate your Retriever arm towards the reel and away from the reel.
5. The Retriever/Rewinder motor which is controlled via the three-spool valve (see pg. 115).
6. The Retriever/Rewinder arm which is controlled via the manual Retriever/Rewinder crank.
7. The Retriever/Rewinder wheel which is controlled and spun by the Retriever/Rewinder motor.

Retriever/Rewinder Arm On Your Figure 8

Retrieving Function

1. Apply Pressure to the reel from the retriever arm utilizing the retriever/rewind crank as seen on pg. 100.
2. Pull down on the retriever tire rotation handle on your 3-spool valve to activate the retriever arm, to control speed you must use the flow control valve. Utilizing the flow control valved to control the retriever tire speed will increase the life on your LRG's hydraulic system. See pg. 99 for the breakdown of your 3-spool valve
3. To rapidly stop the retrieving function, release the tire rotation handle on your 3-spool valve.

WARNING

The operator must always be alert and ready to stop retrieving function. Do not run the retriever arm when not visible.


Failure to do so could lead to potential injury to yourself or others.

WARNING

While Transporting your LRG Retriever the lock pin must always be in place and secure.

Failure to do so could lead to potential injury to yourself or others.

Self-Loading Reel System

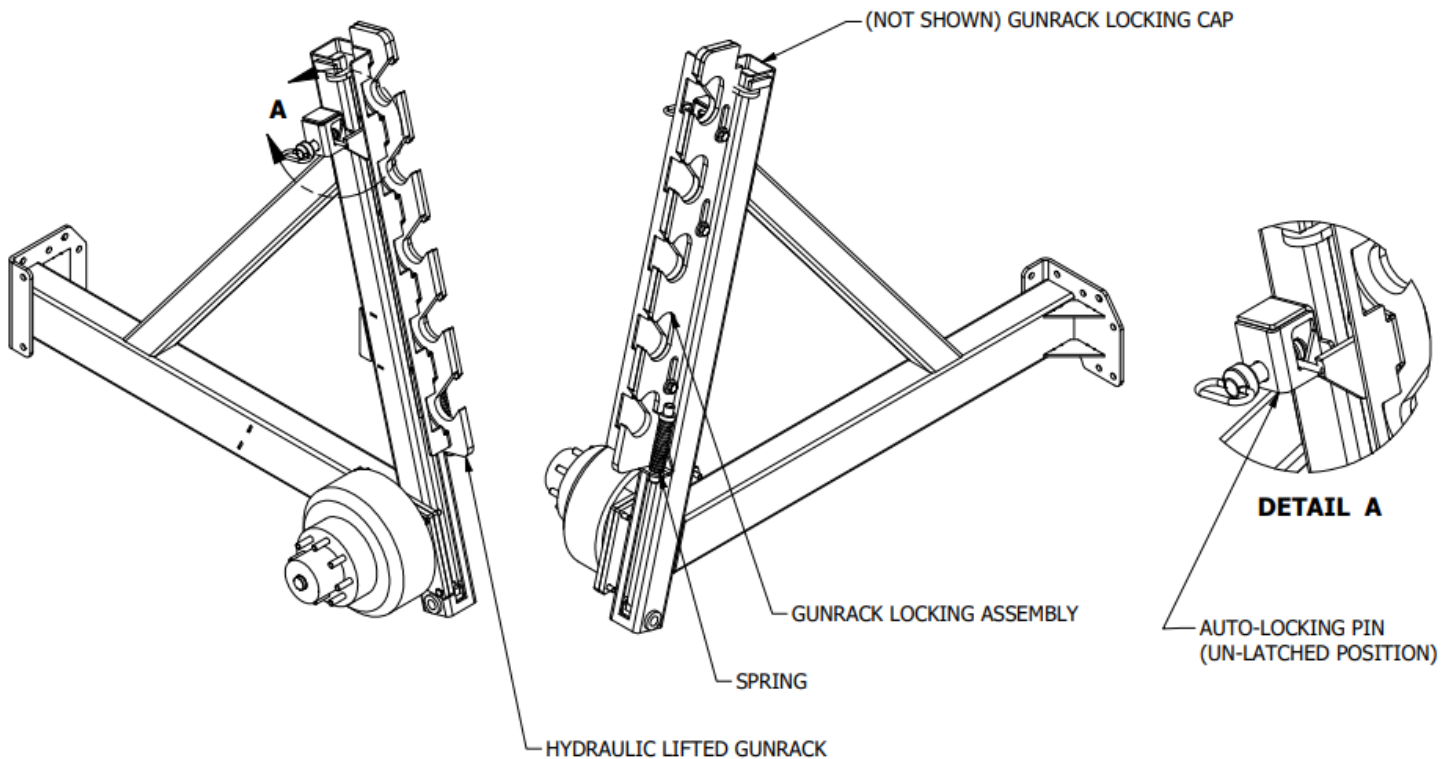

DRIVER SIDE ORIENTATION

PASSENGER SIDE IS MIRRORED

Your LRG comes standard equipped with a self-loading and autolocking reel system. This is to assist with the loading and unloading of reels on your LRG. This section will lay out the proper use and necessary precautions to take when utilizing your LRG autolocking and self-loading reel system.

Steps For operating The Self-Loading Reel System

1. On both sides of trailer pull autolocking pin to unlatched position as shown in DETAIL A.
2. See Breakdown of Your Three Spool Valve on how to lower your gunrack (pg. 115)
3. Loosen collars and remove outer collar on reel
4. Place reel bar through the reel
5. Push collars against reel and tighten bolt and jam-nut
6. Roll reel and bar into highest gunrack locking assembly
7. Load Reel onto Gunrack
8. Raise Gunracks up
9. Ensure that autolocking pins are locked into place

⚠ CAUTION

Reel bar must always be in gunracks and locked transport position, even while not transporting reel.

This Page is Intentionally Left Blank



Hydraulic Operations Manual LRG 1010F

LANE Trailer Mfg. Co.

1215 Montana Road

Boone, IA 50036

515-233-1150

www.lanetrailers.com

info@lanetrailers.com

1-515-233-1150

Hydraulics Operation Manual Introduction

This portion of the manual serves to provide detailed instructions on how to successfully operate your LRG 1010F Figure 8 trailer. Your LRG 1010F is manufactured by LANE Trailer Manufacturing Co. The LRG 1010F trailer consists of a figure 8 retriever/rewinder arm, a self-loading reel system, and a Honda Gx 390 motor skid paired with a wireless remote that controls and operates the hydraulic system for your LRG 1010F.

This portion of the manual will walk you through the complete operation of the LRG 1010F including: The operation of the Honda Gx 390 motor skid and wireless remote, the operation of the retriever/rewinder arm, and the operation of the self-loading reel system.

For questions regarding a LANE Trailer's Product please visit www.lanetrailers.com or call us at (515)-233-1150 or email us at info@lanetrailers.com



Figure 4- LRG 1010F Hydraulic Skid

Hydraulics Skid and Wireless Remote

The Hydraulic Skid and Wireless remote control all the systems on your LRG 1010F. The Skid is equipped with a Honda Gx 390 gas powered engine with a gear pump, a battery contained within a battery box, a Hydraulic Power Unity (HCU), a wireless receiver, a hydraulic reservoir with an intake and filter, and a hydraulic manifold and shield.

⚠ WARNING

Incorrect Operation of Hydraulic systems can result in a system failure, leading to injury or death.

Follow all standard operating guidelines when operating your hydraulic System.

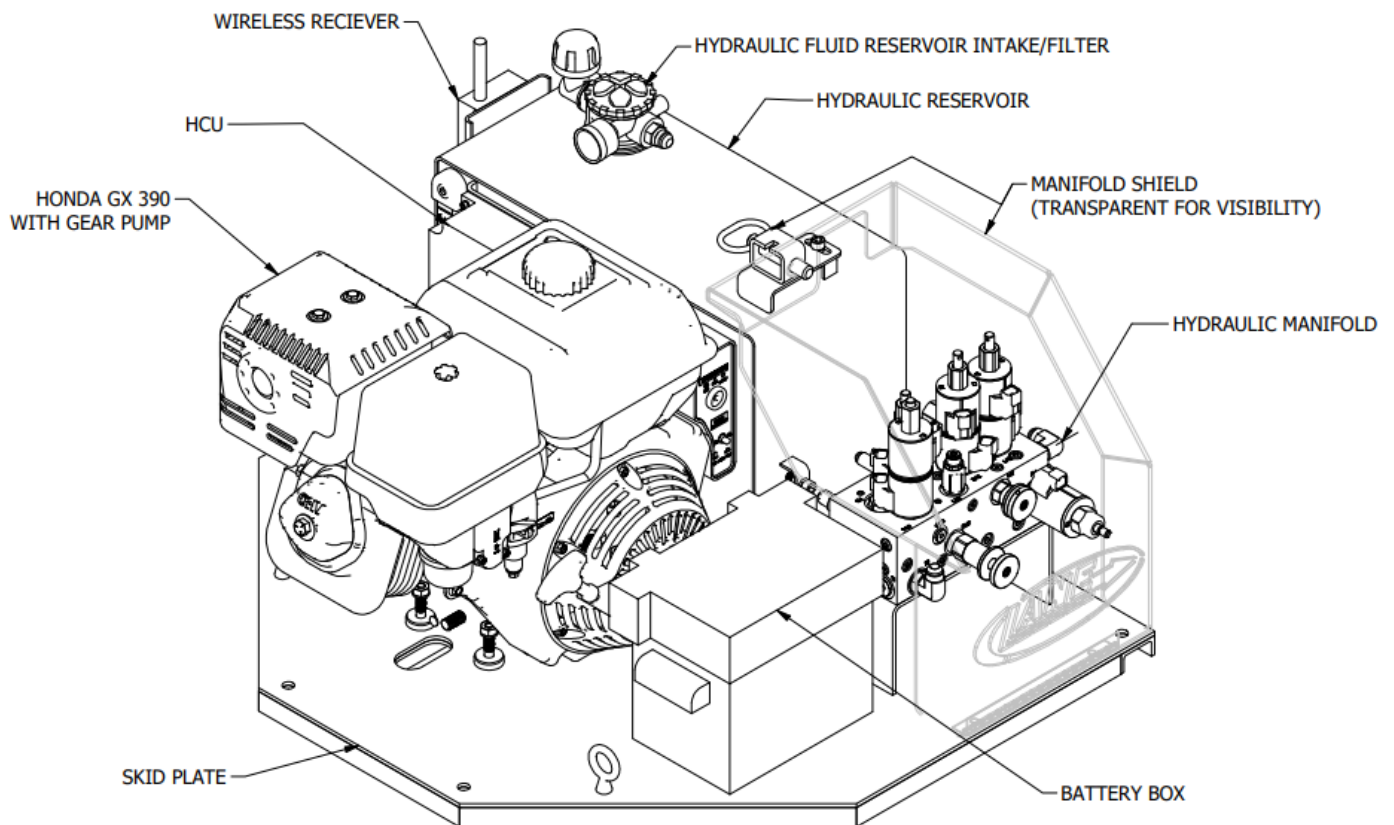


Figure 5- Component Breakdown for Hydraulic Skid

Hydraulics Skid and Wireless Remote

Honda Gx 390

Your Honda Gx 390 comes with a universal Honda Engine Key **Do Not Loose This Key**. The Honda Engine is responsible for powering all hydraulic systems on your LRG 1010F. The following steps will lay out how to turn on and operate the Honda Gx 390.

⚠ CAUTION

Engine is HOT while running. Touching the engine while operating may lead to injury.

Running the Engine without oil may cause engine to cease up. Ensure oil is appropriately filled before operating

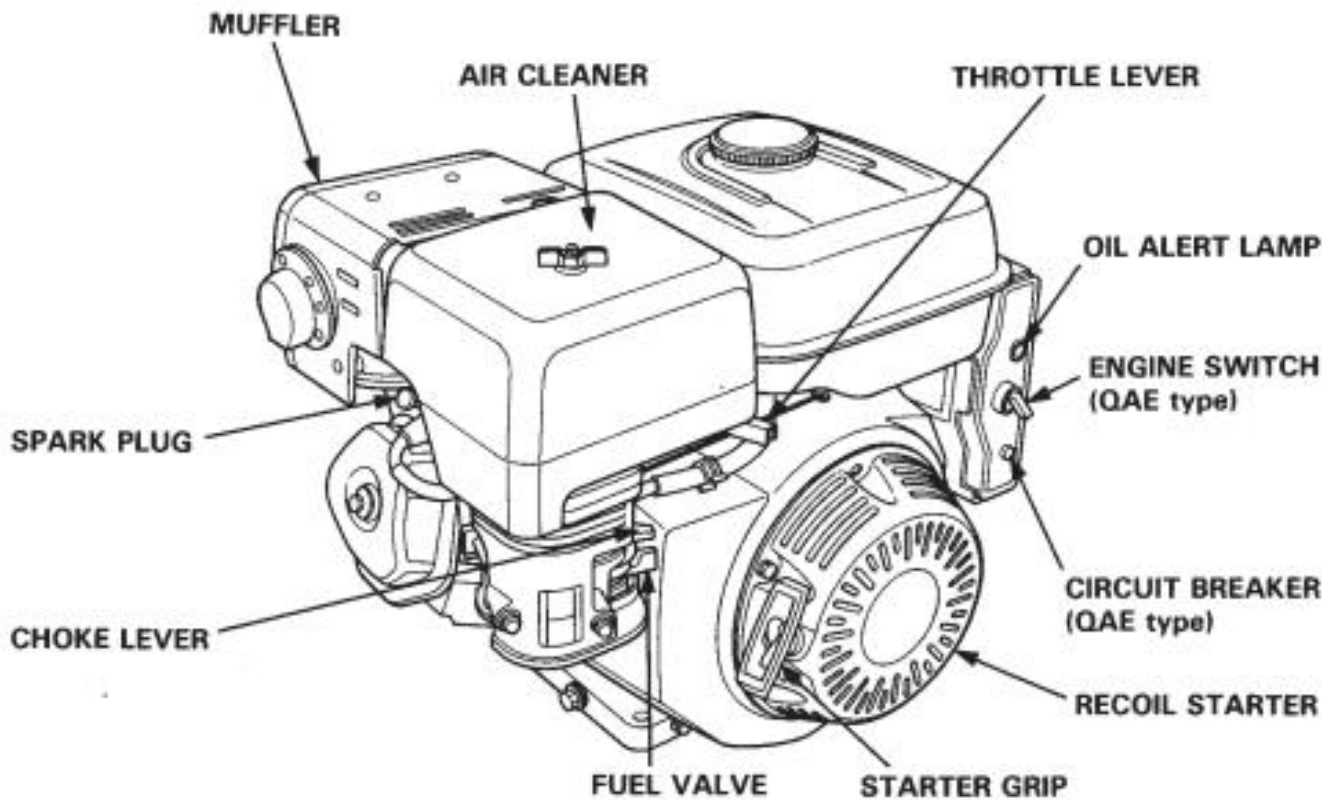


Figure 6- Honda Gx 390 Component Identification

Hydraulics Skid and Wireless Remote

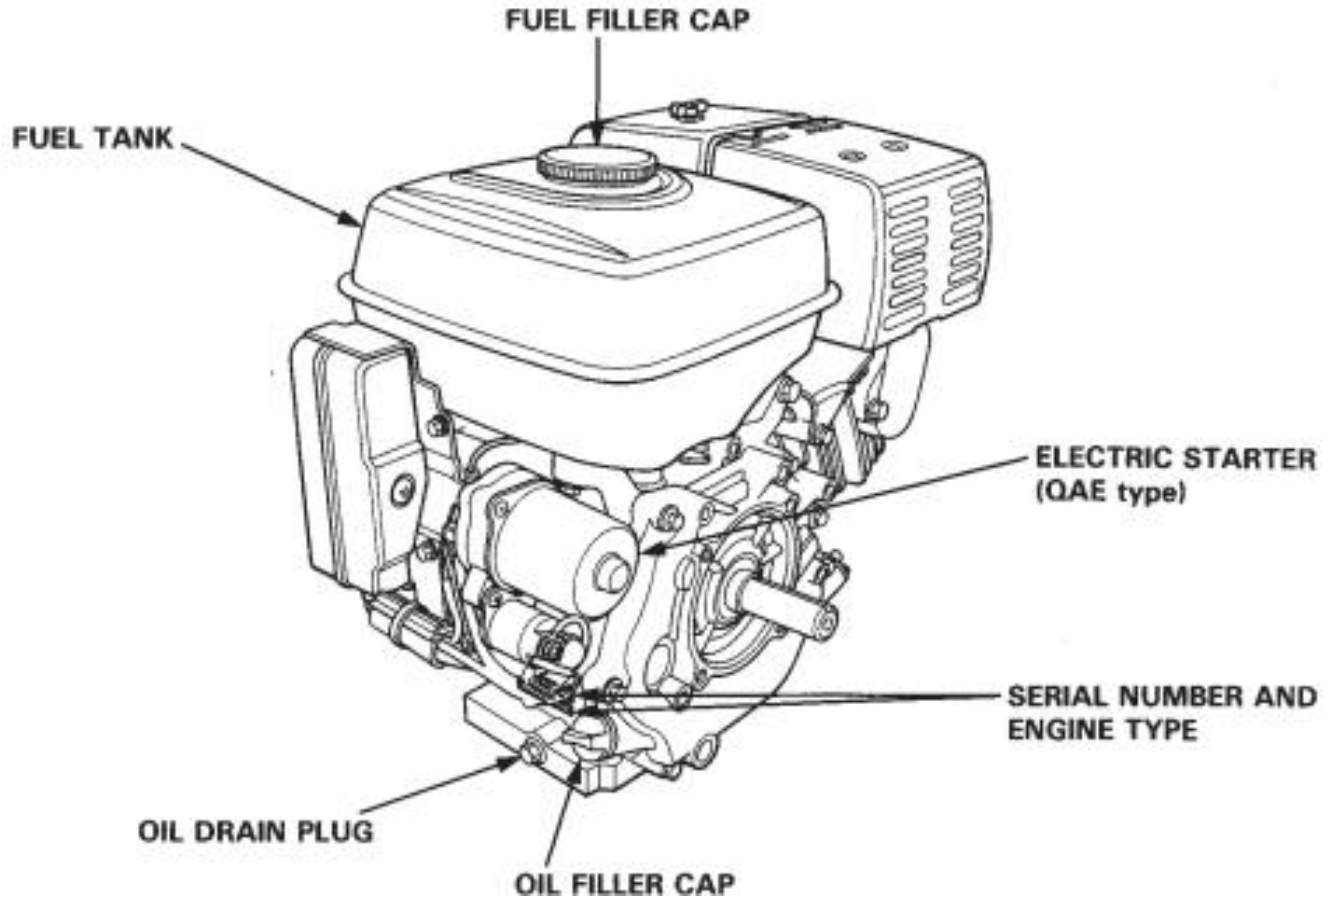


Figure 7- Honda Gx 390 Component Identification

Steps for Operating the Honda Gx 390

1. Ensure that the air filter is inserted and attached.
2. Ensure that the engine is appropriately filled with oil.
3. Ensure that the gas tank is filled appropriately.
4. Insert key into ignition.
5. Turn the key to on position.
6. Ensure that gas lever is flipped to the on position.
7. Engage choke to on position.
8. Pull the starter grip until engine powers on. Or the electric starter via key.
9. Disengage choke after engine powers on.
10. The Honda Gx 390 is now fully operational.

⚠ CAUTION

Ensure that gas lever is flipped to off position when in transit

Failure to turn the gas lever off will result in flooding of the motor.

In the case that the Honda Gx 390 does not power on for any reason turn the key to the off position and repeat steps 4 through 9. For more information view:

<https://cdn.powerequipment.honda.com/engines/pdf/manuals/31ZH9600.pdf>

Hydraulics Skid and Wireless Remote

Battery and Battery Box

The battery contained within the battery box on your LRG 1010F power skid is a U1-1 battery. This battery is responsible for powering the electric starter on your Honda Gx 390, the wireless receiver mounted on your LRG 1010F's hydraulic power skid, and any other electric necessities for your LRG 1010F's hydraulic system.

Your battery is contained within a battery box to protect it from elements. To protect your battery do not open the battery box unless necessary to replace the battery or fix a connection.

Important Information About Your Alternator

1. Your battery is charged by 10-amp charge coils with an 18 amp rectifier regulator
2. 12 volts is required to shift coils on your LRG 1010F's manifold
3. Your LRG 1010F's manifolds coil draws 4.5 amps




⚠ CAUTION

Extreme cold weather can degrade battery performance and cause the battery to not operate properly.

Check battery charge level before towing.

Hydraulics Skid and Wireless Remote

Hydraulic Reservoir

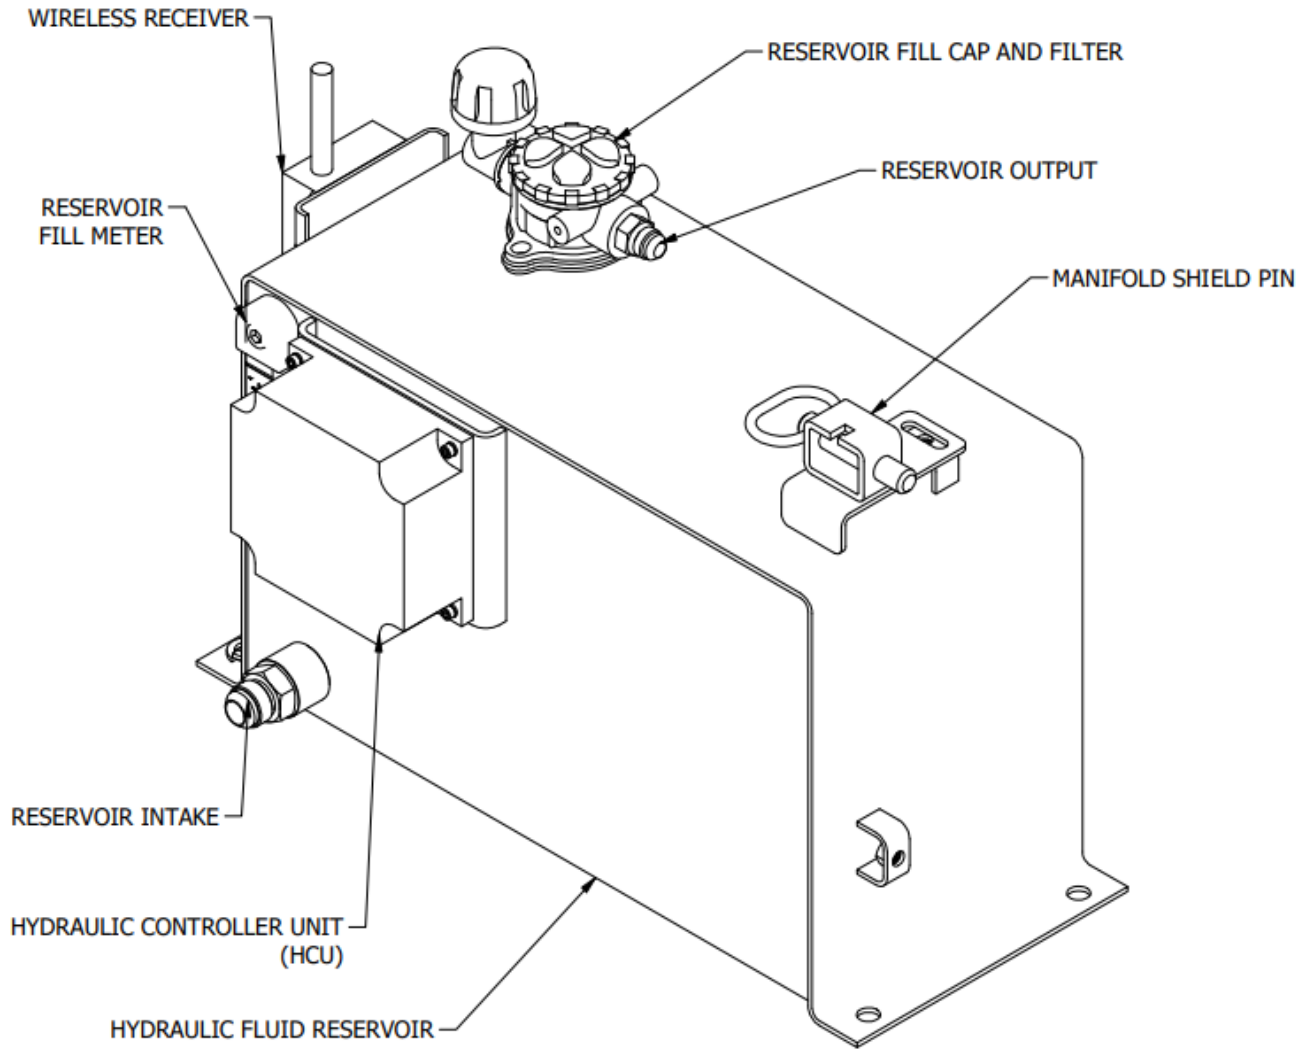


Your hydraulic reservoir on your LRG 1010F's hydraulic power skid is responsible for holding all the necessary hydraulic fluid you will need while operating your LRG 1010F's hydraulic systems. Your hydraulic reservoir comes factory installed with an appropriate amount of hydraulic fluid. In the case of needing to replace hydraulic fluid please use:

Lube Tech Super Transmission/ Hydraulic Tractor Fluid

You should not for any reason put any other hydraulic fluid other than Lube Tech Super Transmission/ Hydraulic Tractor Fluid as it may cause damage to your LRG 1010F's hydraulic system

Hydraulics Skid and Wireless Remote

Hydraulic Manifold

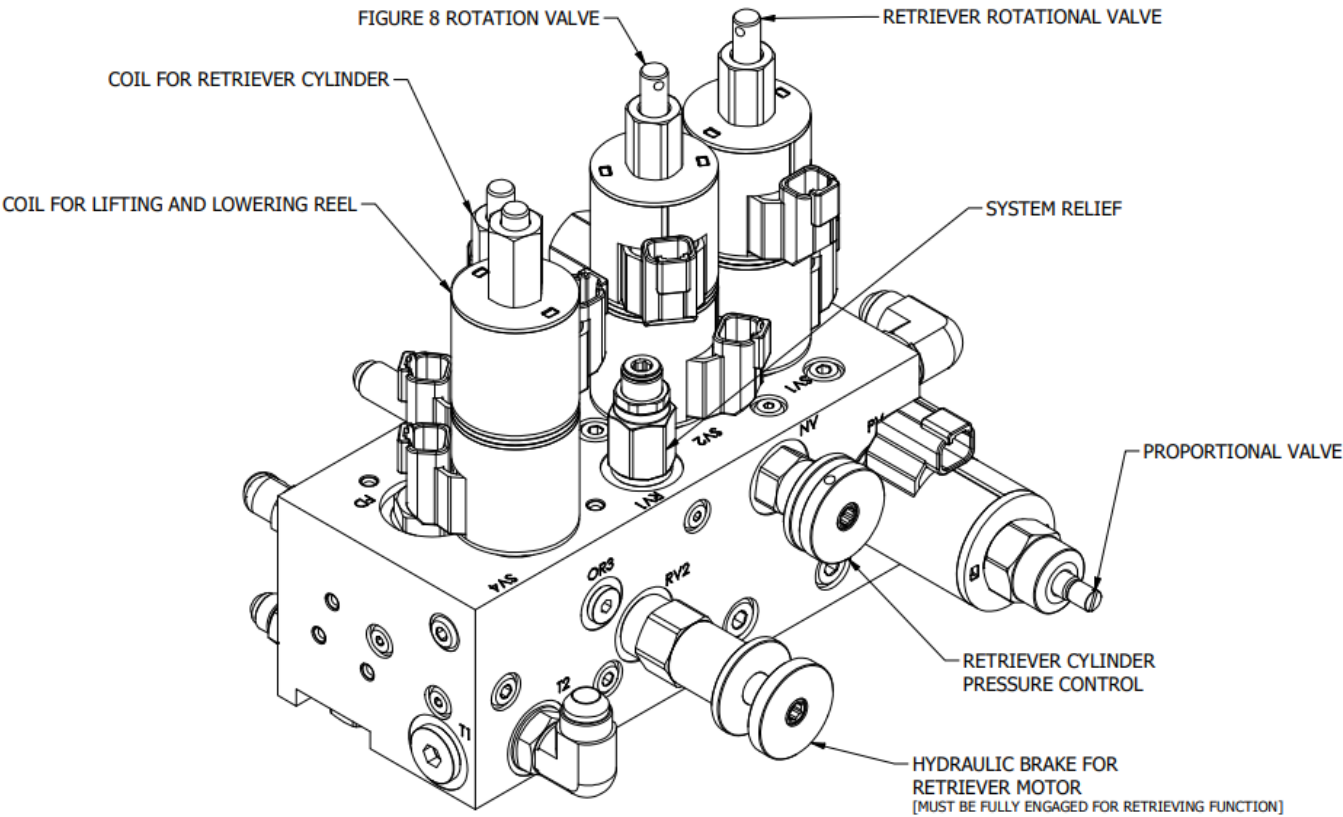

Hydraulics Skid and Wireless Remote

Hydraulic Controller Unit (HCU)

Your HCU is responsible for controlling the operations of your hydraulic manifold. It is connected via the Kar tech wireless receiver mounted on your hydraulic reservoir. Your HCU will also communicate any errors or issues your system runs in to. The section below outlines potential trouble shooting solutions.


Error Code Trouble Shooting

While operating your LRF 1010F it is possible that an error code may show up on your HCU. In this section the error code type and possible solutions to the error will be laid out. If your issue persists, please visit a repair technician or LANE Trailer manufacturing’s website: www.lanetrailers.com or call 515-233-1150 to speak to a repair technician.

Error Code Messages and Faults

Faults # of blinks on LED C corresponding to # below.

1. Radio Stop (Loss of connection between remote and receiver)
2. Proportional Valve
3. Hydraulic Motor for Retriever
4. Hydraulic Motor for Retriever
5. Hydraulic Motor for Figure 8
6. Hydraulic Motor for Figure 8
7. Retriever Cylinder Base
8. Retriever Cylinder Rod
9. Reel Lift Cylinders Base
10. Reel Lift Cylinders Rod

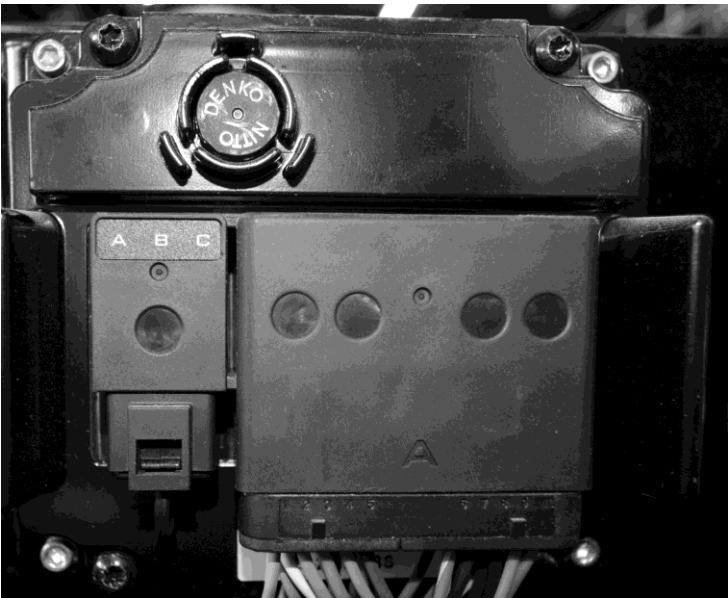

Green LED A (left-most)	Red LED B (middle)	Green LED C (right-most)
• Light Off = not powered • Solid On = powered and application not running • Fast Flash- application running	• Brief pulse on powering on • Solid On and LED A off = no firmware present • Flashing = critical fault active • Solid On = standard fault active • Slow Pulse = historic fault is set • OFF = no fault	• Detailed above in Error Code Messages and Faults

Hydraulics Skid and Wireless Remote

In the case your LRG 1010F shows an error code first asses if the code is mentioned on pg. 89 of this manual and resolve the issue from there. In the case that you are unable to resolve the issue turn off your Honda Gx 390 and wait 5 minutes before restarting the Honda Gx 390 and test if the same error code appears. In the case of the issue not being resolved please contact LANE Trailer Manufacturing Co. at 515-233-1150 for additional information.

Hydraulics Skid and Wireless Remote

LANE Trailer's Wireless Remote

Your LRG 1010F comes equipped with a wireless remote. This controls all systems linked to your Hydraulic skid including the Retriever/Rewinder arm, The Figure 8 attachment, and the self-loading reel system. The follow steps will outline the wireless remote's paring process, important information about your wireless remote, and a detailed layout of what each part of the wireless remote operates. **Please note** that your wireless remote is set to sleep after 2 hours to ensure that your system does not run whilst not in operation.

For questions regarding a LANE Trailer's Product please visit www.lanetrailers.com or call us at (515)-233-1150 or email us at info@lanetrailers.com

Steps For Pairing LANE Trailer's Wireless Remote

1. Verify that entire system and remote are turned off.
2. Press and hold the power button on the remote for 10 seconds or until lights start flashing on the remote.
3. Insert key into the Honda Gx 390, and turn to on position
4. Remote will then sync with your Hydraulic Control Unit (HCU) and system will be operational
5. Please follow the instructions for **Steps for Operating the Honda Gx 390** to turn on your LRG 1010F's hydraulics.
6. **After steps 1-5 are completed your LRG 1010F should be fully operational**
7. You only need to Pair your Wireless Remote **ONCE**

Important Information about your Wireless Remote


NOTICE

Ensure that your wireless remote is on and paired before operating your LRG 1010F

- Your LRG 1010F's wireless remote has a 30-hour battery life, ensure that the remote is charged before use.
- Your wireless remote must be paired, and the Honda Gx 390 must be turned on and running before operating your wireless remote.
- Your wireless remote controls all hydraulic systems on your LRG 1010F. Ensure that you are following all standard operating procedures and safety requirements while utilizing your LRG 1010F. Failure to do so may result in serious injury or death.
- To change your sleep timer on your Wireless Remote please see the next page.

Hydraulics Skid and Wireless Remote

Sleep Time Programming

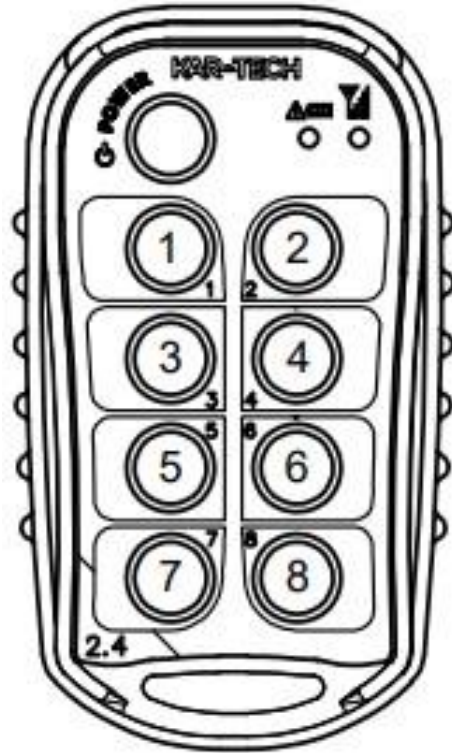

To change the sleep time, follow these steps.


2. With Transmitter OFF, press and hold buttons 3, 4, 8, and Power.
3. Keep holding the buttons for a few seconds then release the buttons. At this point, both lights will blink once per second.
4. On the transmitter, press one of the following buttons to adjust the sleep time:
 1. 1=15 minutes
 2. 2=30 minutes
 3. 3=1 hour
 4. 4=2 hours
 5. 5=sleep disabled
4. Green button will start flashing and the sleep time programming will be complete

NOTICE

Your wireless remote is factory set to a 2-hour sleep timer. This is the setting recommended by the manufacturer.


Hydraulics Skid and Wireless Remote

Button Breakdown of Your Wireless Remote

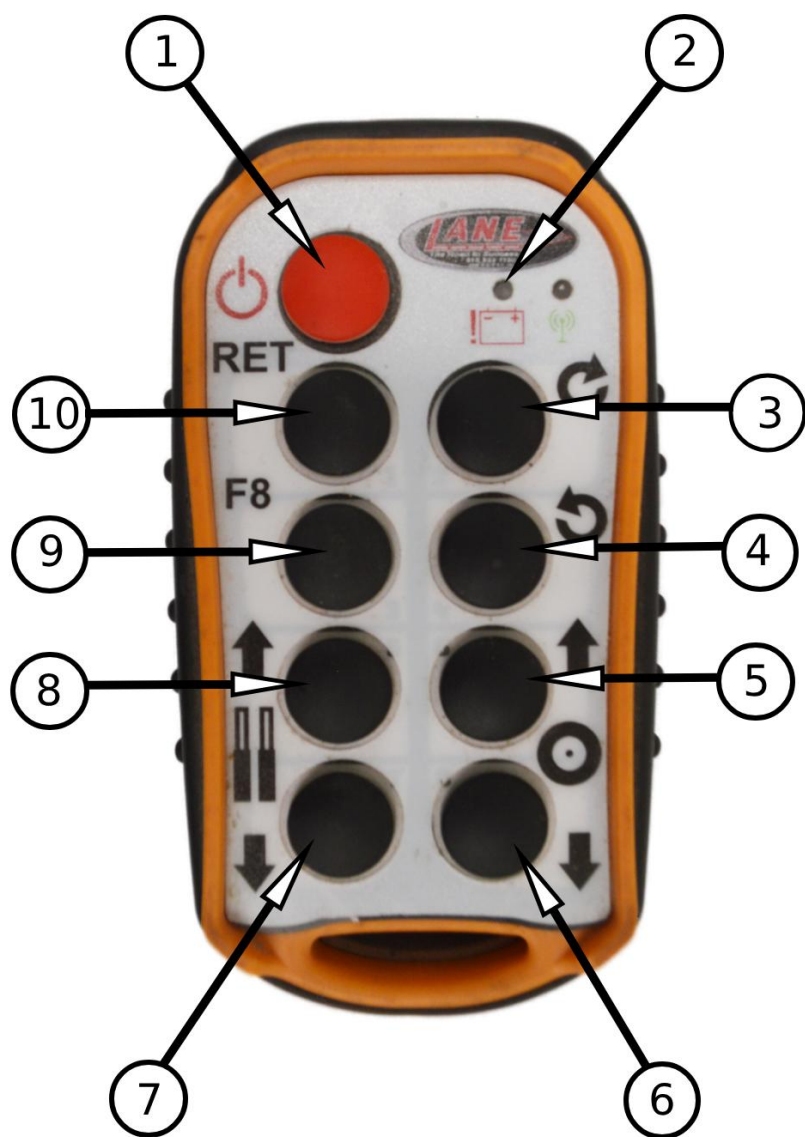

Button #	Operation	Button #	Operation
1	POWER ON	6	RETRIEVER TIRE AWAY FROM REEL
2	LOW BATTERY LIGHT	7	LOWER REEL
3	SPINS HYDRAULIC MOTOR CLOCKWISE	8	LIFT REEL
4	SPINS HYDRAULIC MOTOR COUNTER-CLOCKWISE	9	ENGAGE FIGURE 8 MOTOR
5	RETRIEVER TIRE TOWARDS REEL	10	ENGAGE RETRIEVER MOTOR

Retriever/Rewinder Arm On Your Figure 8

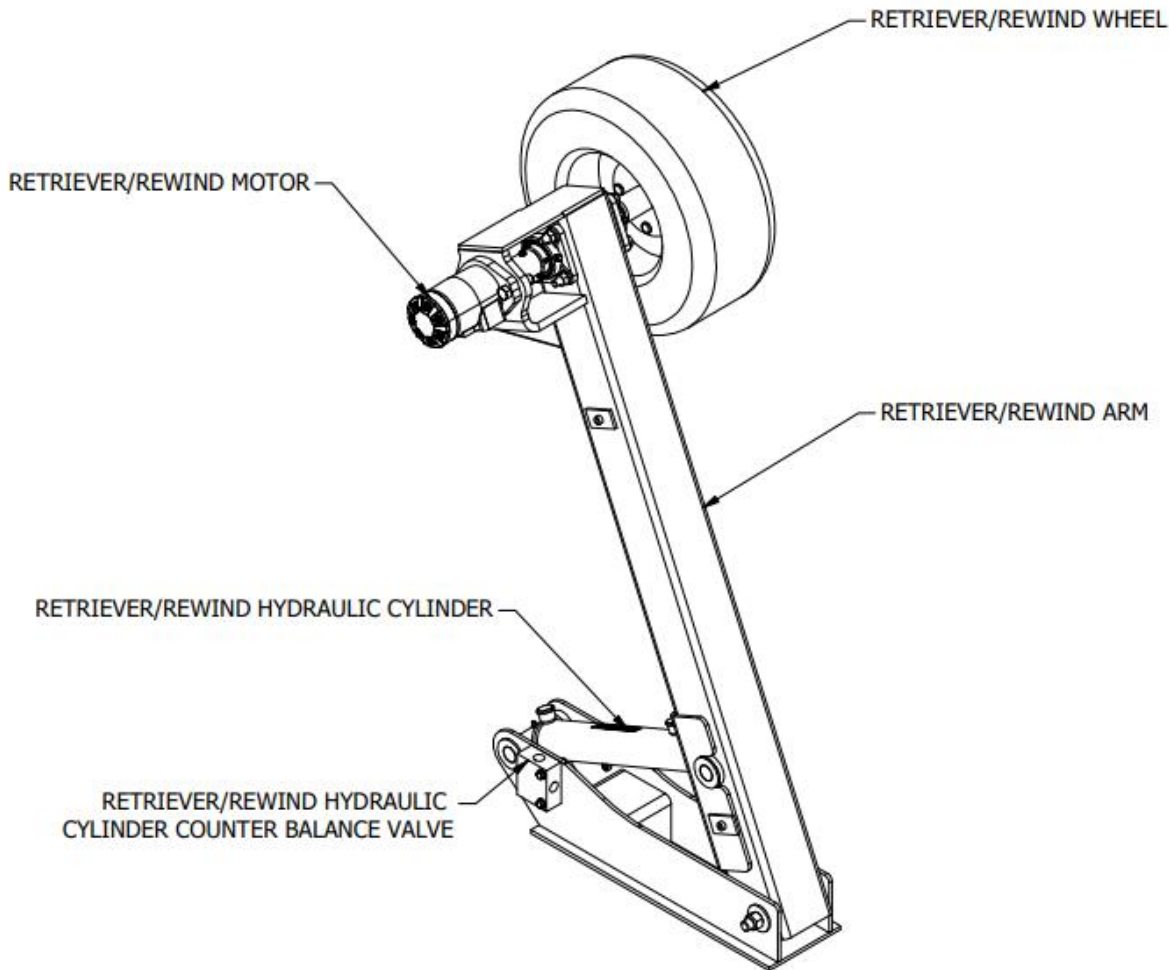

The LRG 1010F's Retriever/Rewind attachment is to assist you with spinning your fiber reel for fiber laying/blowing applications buttons 3 and 4 as seen in **Button Breakdown of Your Wireless Remote** act as variable speed controllers to match the speed at which your fiber cable is being blow. Holding and pressing the button will gradually increase the speed and is useful for fine tuning the speed to match. Quickly pressing the button will "step up" your speed in greater increments compared to pressing and holding and is useful for quick changes in speed.

The Figure 8 motor cannot be run at the same time as the Retriever/Rewind motor, thus do not try to use the Retriever/Rewind arm to assist in Figure 8'ing your fiber.

The Retriever/Rewind arm can be controlled as seen in **Button Breakdown of Your Wireless Remote (pg. 93)** to move closer or away from your fiber reel. It is advised that you make firm contact with the fiber reel when performing this movement.

Retriever/Rewinder Arm On Your Figure 8

Retrieving Function

1. Apply Pressure to the reel from the retriever arm utilizing button #5 as referenced on page 93.
2. Use button #3 or #4 on your remote to incrementally step up the speed, step down the speed, or to change directional rotation of your reel.
3. To rapidly stop the retrieving function, press any button not in use (button #5 recommended). This will immediately cease the spinning of your retriever arms wheel.

WARNING

The operator must always be alert and ready to stop retrieving function. Do not run the retriever arm when not visible.

Failure to do so could lead to potential injury to yourself or others.

How to Sync with blower


1. Apply Pressure to the reel from the retriever arm utilizing button #5 as referenced on page 93.
2. Slowly Start to unspool the reel utilizing button #3 or #4 on the remote. Direction depends on the way the fiber is wrapped on the reel, clockwise or counterclockwise.
3. Start to slowly blow the fiber when there is slack in the line. Incrementally step up speed on your fiber blower and retriever arm until the desired speed is reached. Ensure that the fiber always has some slack in the line
4. Once you begin to approach the desired length of blown out cable, begin to incrementally step-down speed on the blower and retriever (button #3 or #4) until you come to a stop.

WARNING

The operator must always be alert and ready to stop retrieving function. Do not run the retriever arm when not visible.

Failure to do so could lead to potential injury to yourself or others.

Self-Loading Reel System

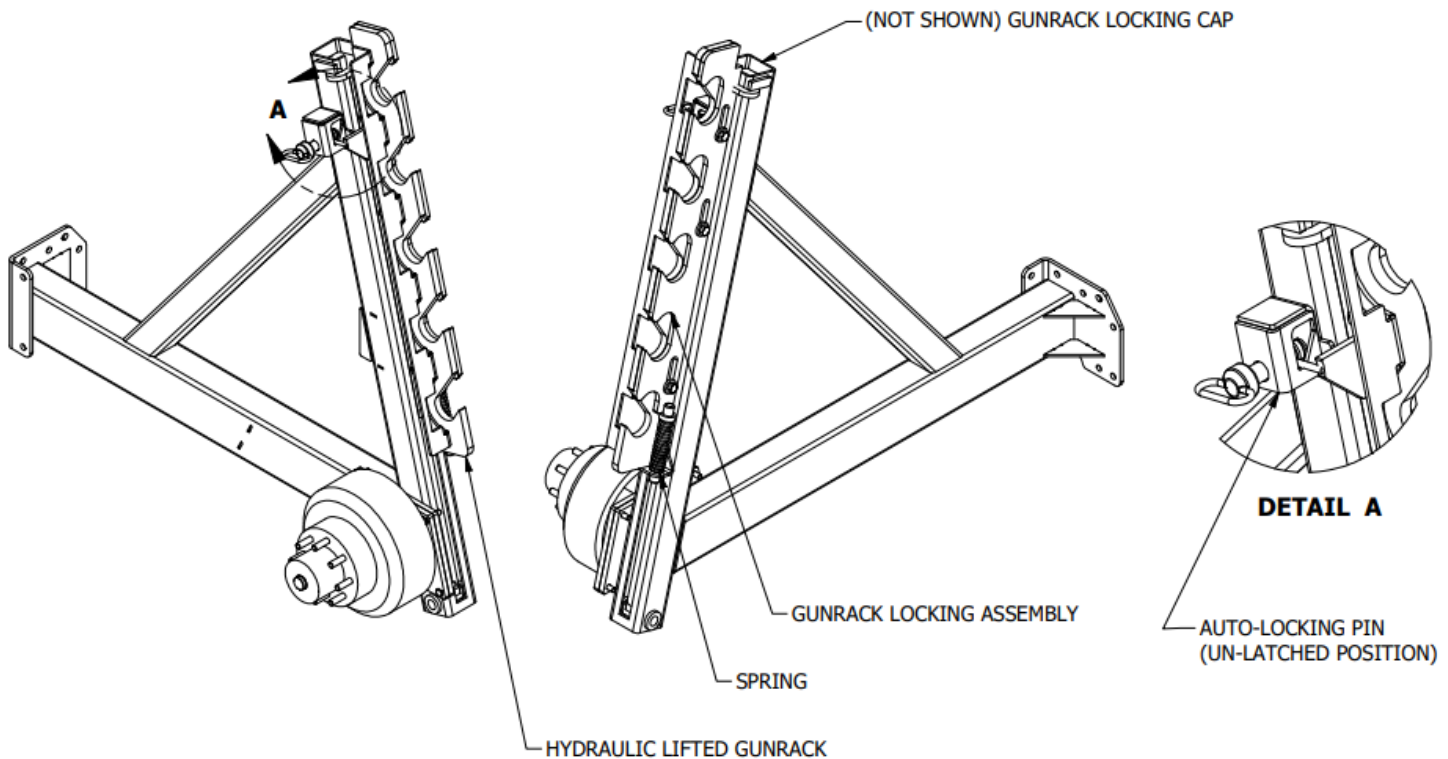

DRIVER SIDE ORIENTATION

PASSENGER SIDE IS MIRRORED

The LRG 1010F comes standard equipped with a self-loading and autolocking reel system. This is to assist with the loading and unloading of reels on your LRG 1010F. This section will lay out the proper use and necessary precautions to take when utilizing your LRG 1010F's autolocking and self-loading reel system.

Steps For operating The Self-Loading Reel System

1. On both sides of trailer pull autolocking pin to unlatched position as shown in DETAIL A.
2. See Button Breakdown of Your Wireless remote to lower your gunrack
3. Loosen collars and remove outer collar on reel
4. Place reel bar through the reel
5. Push collars against reel and tighten bolt and jam-nut
6. Roll reel and bar into highest gunrack locking assembly
7. Load Reel onto Gunrack
8. Raise Gunracks up
9. Ensure that autolocking pins are locked into place

⚠ CAUTION

Reel bar must always be in gunracks and locked transport position, even while not transporting reel.

Figure 8 attachment

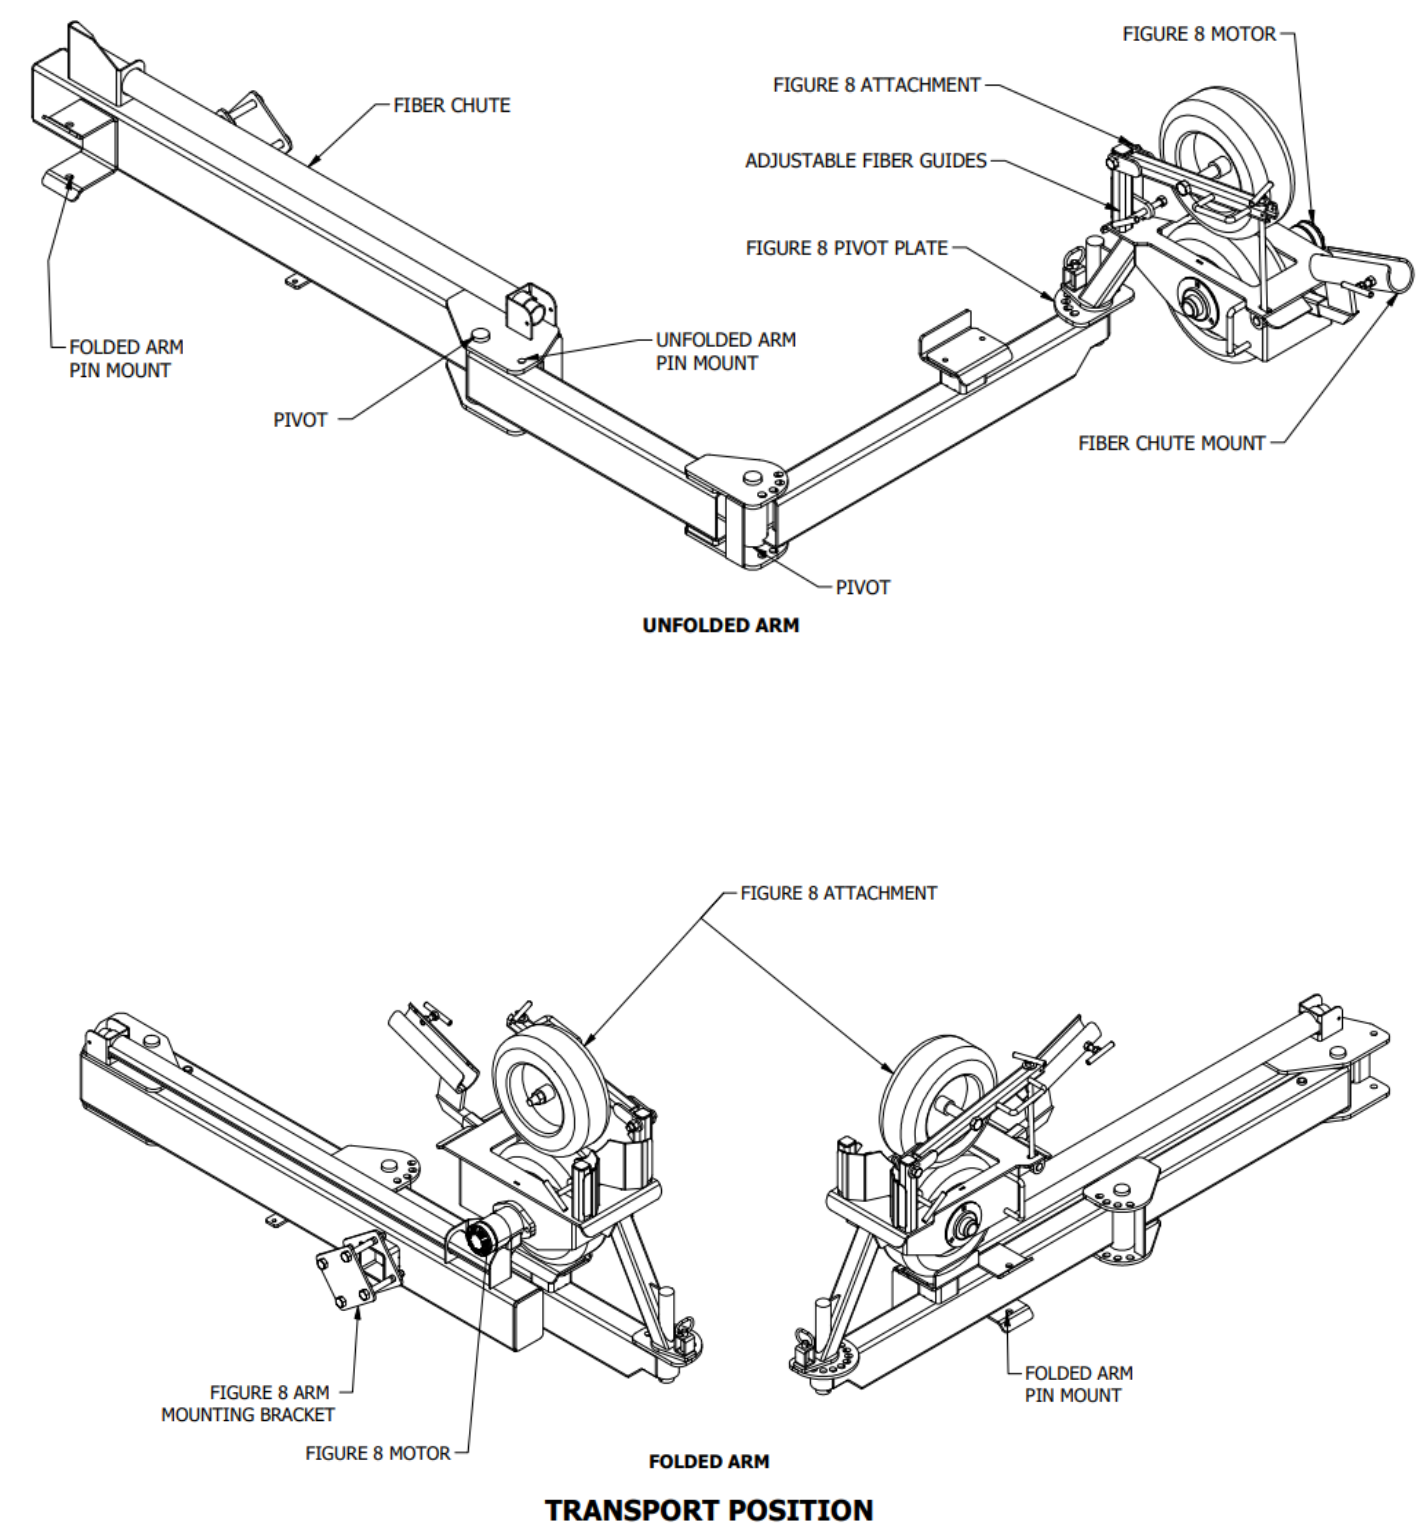


Figure 8 attachment

Figure 8 Operation

The following sections will outline the necessary steps to operate, utilize, and safely secure for transportation your LRG 1010F's Figure 8 attachment. Ensure that all steps are followed, and necessary maintenance is performed between each use to ensure that your Figure 8 is safe to use.

Unfolding and Preparing the Figure 8 Arm

1. Remove both pins securing the folded arm.
2. Swing arm then place the unfolded arm pin into the appropriate mount.
3. Remove pin from front pivot on the elbow.
4. Place elbow containing the figure 8 mount at desired angle.
5. Place pin in elbow containing the figure 8 mount to secure the elbow.
6. Remove pin from figure 8 pivot plate.
7. Remove fiber chute from holder and mount in the fiber chute mount.
8. Place and feed cable through adjustable fiber guides.
9. Reference Pg 93 for operating the hydraulics on your figure 8 arm.

Folding and Preparing the Figure 8 arm

1. Remove Cable from the figure 8 attachment and secure on reel
2. Remove Fiber chute from mount and place in holder
3. Swing and replace pin in the figure 8 pivot plate
4. Remove pin from elbow and straighten folding arm
5. Replace pin in elbow
6. Remove folded arm pin mount
7. Swing folding arm so that it is between the bracket.
8. Ensure that the hosing is not pinched between the arms.
9. Secure the folding arm with the folded arm pin.
10. Refence pg. 97 for the correct orientation of a secure figure 8 arm for transportation.

WARNING

Do not transport your LRG 1010F without securing the figure 8 arm.

Figure 8 attachment

Figure 8 Operation: How to Figure 8

“Figure 8’ing” refers to the process of laying out a fiber cable prior to blowing (laying the cable through a pre-drilled underground hole). The LRG 1010F’ has a Figure 8 attachment to assist with this process. The process of Figure 8’ing is when cable is laid in an 8 pattern onto the ground. This allows the cable to be more efficiently blown through the ground without risk of cracking or pulling on it if unloaded from a reel. This section will lay out how to properly utilize your LRG 1010F’s figure 8 attachment to assist with laying cable

1. Pull up and secure the pin on the Figure 8 pivot plate
2. Un latch the top wheel on the Figure 8 head
3. Load cable through the adjustable fiber guides and fiber chute.
4. Close top wheel and latch on top of cable
5. Ensure that the Retriever arm is not touching the fiber reel
6. Press the F8 button on your remote to engage your Figure 8’s motor
7. Spin Figure 8 motor clockwise to begin Figure 8’ing cable



Maintenance of Your LRG 1010F

This section will lay out how to properly maintain your LRG 1010F's hydraulically operated systems. The following steps will lay out how to properly grease elements on your LRG 1010F, how to replace hydraulic fluid in your LRG 1010F, and how to bleed any necessary lines on your hydraulic manifolds.

Maintenance is necessary to keep your hydraulic system operating properly and should be performed regularly at the recommended times in the following sections. This section will guide you through the basic maintenance that is necessary for you to perform, however if more advanced repairs are needed, please visit LANE Trailer Manufacturing Co's website or repair center.

Greasing Elements on Your LRG 1010F

The following is a list of elements that need to be greased on your LRG1010F broken down by system.

Retriever/Rewind Arm

1. The Cylinder Rod and base end
2. The two bearings that are located by the hydraulic motor

Figure 8 Arm and Attachment

2. The three pivot arm bushings

Autolocking Reel System

1. The base of the cylinders
2. The idler tire bearings

Hydraulic System Maintenance on Your LRG 1010F

1. It is recommended that you change your hydraulic system's filter every year.
2. The Hydraulic oil level can be located within the sight glass on your reservoir
3. The Honda Gx 390's oil needs to be changed every 100 hours of runtime

This Page is Intentionally Left Blank